

On NX1 Linux driver install steps, refer to the README.TXT under Linux driver tar file.

Updating the Firmware Components Manually on Linux:

Provides instructions for manually updating the firmware on Broadcom Gigabit Ethernet network adapters for Linux

Download the Linux firmware upgrade utility and the Firmware images file from the corresponding Broadcom Gigabit Ethernet Adapter page 'Downloads' -> 'Firmware'

To update the adapter firmware on Linux:

1. Install the Broadcom management application programming interface for Linux - bmapilnx

```
rpm -ivh bmapilnx-227.0.3-0.x86_64.rpm
```

2. Install the Linux firmware upgrade utility

```
rpm -ivh lnxfwupg-226.0.30-1.x86_64.rpm (if no older version of lnxfwupg was installed in the system)
```

(or)

```
rpm -Uvh lnxfwupg-226.0.30-1.x86_64.rpm (Update, if already older version lnxfwupg was installed)
```

3. List the Broadcom Gigabit Ethernet adapters using the following command:

```
lnxfwupg
```

4. Select the adapter

```
[root@dhcp-10-123-78-178 cs956993]# lnxfwupg
Broadcom Network Controller Firmware Upgrade Utility for Linux v226.0.30
Initializing...
```

C	Brd	MAC	Drv	Name
0	165F	EC2A7246A7C0	Yes	NetXtreme BCM5720 Gigabit Ethernet PCIe (enol)
1	165F	EC2A7246A7C1	Yes	NetXtreme BCM5720 Gigabit Ethernet PCIe (eno2)
2	1657	E43D1AF99440	Yes	NetXtreme BCM5719 Gigabit Ethernet PCIe rev 01 (ens2f0)
3	1657	E43D1AF99441	Yes	NetXtreme BCM5719 Gigabit Ethernet PCIe rev 01 (ens2f1)
4	1657	E43D1AF99442	Yes	NetXtreme BCM5719 Gigabit Ethernet PCIe rev 01 (ens2f2)
5	1657	E43D1AF99443	Yes	NetXtreme BCM5719 Gigabit Ethernet PCIe rev 01 (ens2f3)

```
0:> █
```

```
[root@dhcp-10-123-78-178 tg3-3.139m]# ethtool -i enol
driver: tg3
version: 3.139m
firmware-version: 5720-v1.43 NCSI v1.5.55.0
expansion-rom-version:
bus-info: 0000:02:00.0
supports-statistics: yes
supports-test: yes
supports-eeprom-access: yes
supports-register-dump: yes
supports-priv-flags: no
```

5. All the Firmware components are available in the corresponding folders in the downloaded Firmware image file.

Use the correct file to upgrade the respective firmware component as shown below:

The following example shows how to upgrade each firmware component on the N41T OCP adapter.

a. Upgrade Boot Code using the following command:

```
upgrade -bc ee5719c1.57
```

b. Upgrade EFI and PXE using the following command:

```
upgrade -mba 5719efipxe.bin
```

c. Upgrade CCM using the following command:

```
upgrade -ccm ccm2250.71
```

d. Upgrade NCSI Management firmware using the following command:

```
upgrade -mgmt nx1ncsi1.555.bin
```

e. Upgrade iscsi boot code using the following command:

```
upgrade -ib iboot2140.0
```

f. Verify the NVM directory contents using the following command:

```
dir
```

g. upgrade VPD if needed for N41T OCP adapter.

```
upgrade -vpd BCM95719N1905C.vpd
```

Ignore warnings message "REGION_W does not exist"

h. Exit out of the firmware upgrade utility

```
q
```

Note: commands can be executed in one line command mode with mac Address or device name to identify the device.

Example:

```
Inxfwupg E43D1AF99440 dir
```

```
Inxfwupg E43D1AF99440 upgrade -bc ee5719c1.57
```

```
[root@dhcp-10-123-78-178 tg3-3.139m]# lnxfwupg E43D1AF99440 dir
Broadcom Network Controller Firmware Upgrade Utility for Linux v226.0.30
Initializing...
```

```
Select NIC NetXtreme BCM5719 Gigabit Ethernet PCIe rev 01 (ens2f0)...
Entry Type          SRAM Addr  EEP Offset  Length  Execute Version
-----
0  BootCode          08003800   0000028C   00004D78 CPUA(2) 5719-v1.57
  PXE                00010000   00005004   00030004 no      21.6.4
                                     PCI30 MBA v21.6.4
                                     EFI x64 v21.6.77

1  EXT DIR           -----   00035008   000000C4 no
2  iSCSI Boot        00010000   00040BA4   0000F8B4 no      v214.0.152
3  iSCSI CFG         -----   00050458   00000800 no      v2.00
4  iSCSI CFG 1       -----   00050C58   00000800 no      v2.00
5  APE Firmware[*]  -----   00052458   0000D58C APE     NCSI 1.5.55

Extended Directory:
80  CCM               -----   000350CC   0000BAD8 no      v225.0.71
81  iSCSI CFG 2       -----   00051458   00000800 no      v2.00
82  iSCSI CFG 3       -----   00051C58   00000800 no      v2.00
```

UnInitializing...

Program Exit Code: (0)

```
[root@dhcp-10-123-78-178 tg3-3.139m]# lnxfwupg EC2A7246A7C0 dir
Broadcom Network Controller Firmware Upgrade Utility for Linux v226.0.30
Initializing...
```

```
Select NIC NetXtreme BCM5720 Gigabit Ethernet PCIe (enol)...
Entry Type          SRAM Addr  EEP Offset  Length  Execute Version
-----
0  BootCode          08003800   0000028C   000048F4 CPUA(2) 5720-v1.43
  PXE                00010000   0005DD44   00030004 no      21.6.4
                                     PCI30 MBA v21.6.4
                                     EFI x64 v21.6.77

1  EXT DIR           -----   00034384   000000C4 no
2  iSCSI Boot        00010000   00010658   00007A20 no      v214.0.152
3  iSCSI CFG         -----   0004F7D4   00000800 no      v2.00
4  iSCSI CFG 1       -----   0004FFD4   00000800 no      v2.00
5  APE Firmware[*]  -----   00018078   0000D58C APE     NCSI 1.5.55

Extended Directory:
80  CCM               -----   00004B80   0000BAD8 no      v225.0.71
```

UnInitializing...

Program Exit Code: (0)