



Emulex[®] Drivers for VMware ESX/ESXi User Manual

EMULEX CONFIDENTIAL. Copyright © 2011–2012 Emulex. All rights reserved worldwide. No part of this document may be reproduced by any means or translated to any electronic medium without the prior written consent of Emulex.

Information furnished by Emulex is believed to be accurate and reliable. However, no responsibility is assumed by Emulex for its use; or for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent, copyright or related rights of Emulex.

Emulex, the Emulex logo, AutoPilot Installer, AutoPilot Manager, BlockGuard, Connectivity Continuum, Convergenomics, Emulex Connect, Emulex Secure, EZPilot, FibreSpy, HBAnyware, InSpeed, LightPulse, MultiPulse, OneCommand, OneConnect, One Network. One Company., SBOD, SLI, and VEngine are trademarks of Emulex. All other brand or product names referenced herein are trademarks or registered trademarks of their respective companies or organizations.

Emulex provides this manual "as is" without any warranty of any kind, either expressed or implied, including but not limited to the implied warranties of merchantability or fitness for a particular purpose. Emulex may make improvements and changes to the product described in this manual at any time and without any notice. Emulex assumes no responsibility for its use, nor for any infringements of patents or other rights of third parties that may result. Periodic changes are made to information contained herein; although these changes will be incorporated into new editions of this manual, Emulex disclaims any undertaking to give notice of such changes.

US patent notice is given for one or more of the following: 6226680, 6247060, 6334153, 6389479, 6393487, 6427171, 6427173, 6434620, 6591302, 6658480, 6697868, 6751665, 6757746, 6941386, 6965941, 6687758, 7042898, 7133940, 7124205, 7089326, 6938092, 6996070.

Emulex, 3333 Susan Street
Costa Mesa, CA 92626

Supported Driver Versions

The following table lists the Emulex-supported Fibre Channel (FC), Fibre Channel over Ethernet (FCoE), Ethernet, and internet Small Computer System Interface (iSCSI) drivers that are documented in this manual.

Driver Version	Comment
FC/FCoE Driver for ESXi 5.0	
8.2.4.141.55	Asynchronous driver
FC/FCoE Driver for ESX/ESXi 4.1	
8.2.1.141.55	Asynchronous driver
Ethernet Driver for ESXi 5.0	
4.2.327.0	Asynchronous driver
Ethernet Driver for ESX/ESXi 4.1	
4.2.324.4	Asynchronous driver
iSCSI Driver for ESXi 5.0	
4.2.324.12	Asynchronous driver
iSCSI Driver for ESX/ESXi 4.1	
4.2.324.12	Asynchronous driver

Table of Contents

Supported Driver Versions.....	3
List of Tables	7
1. Installation.....	8
Driver Information	8
Compatibility	8
Known Issues.....	9
Installing the FC/FCoE Driver	9
Installing the FC/FCoE Driver and Management Software	9
Uninstalling the FC/FCoE Driver.....	9
Installing the NIC Driver.....	9
Installing the NIC Driver and Management Software	9
Uninstalling the NIC Driver	10
Virtualization Support.....	10
Enabling NetQueue	10
How an ESX/ESXi Server Creates and Names Interfaces	11
Configuring VLANs	11
Configuring Network Heap Size in ESX/ESXi Server.....	12
Obtaining Information on the Installed NIC Driver.....	12
Installing the iSCSI Driver on ESX/ESXi 4.1 Systems Only	13
Performing a Fresh Installation of ESX Server	13
Adding or Updating the iSCSI Driver in an Existing ESX Server.....	14
Performing Silent/Unattended Installation	14
Invoking Silent Install in ESX Server.....	15
Exit Codes.....	15
Uninstalling the iSCSI Driver	15
Removing the iSCSI Driver from initrd	15
Invoking Silent Uninstall	16
Uninstall Exit Codes	16
Installing the iSCSI Driver on ESXi 5.0 Systems Only	16
Installing the iSCSI Driver and Management Software	16
Installing All Drivers (ESX/ESXi 4.0 and 4.1 Systems Only)	17
esxupdate Procedure	17
LPFC Driver	17
NIC Driver (ESX/ESXi 4.1 systems only).....	18
iSCSI Driver (ESX/ESXi 4.1 systems only)	18

Adding or Updating Drivers on Existing ESX and ESXi Installations Using vihostupdate	18
Updating Drivers with VMware Offline Bundle Media (ESXi 5.0 Systems Only)	19
2. Configuration	20
FC and FCoE Driver Configuration	20
FC/FCoE Driver Parameters Configuration Methods	20
Permanent FC/FCoE Configuration Methods Using Native ESX/ESXi Tools	21
Dynamically Adding LUNs and Targets	22
FC/FCoE Driver Configuration Parameters	22
Creating an FC Remote Boot Disk	25
Managing Devices through the CIM Interface	25
Using the OneCommand Manager CLI	25
Using the OCM for VMware vCenter Application	25
Installing the Emulex CIM Provider	26
Working with VPorts (Virtual Ports)	26
Creating, Deleting, and Displaying VPorts	26
NIC Driver Configuration	27
Configuring NIC Driver Options	27
Performance Tuning	27
Using vmxnet Emulation	27
Enabling TSO	27
Enabling Jumbo Frames	28
iSCSI Driver Configuration (ESX/ESXi 4.1 and ESXi 5.0 Systems Only)	29
Configuring iSCSI Driver Options	29
Interrupt Moderation Policy Settings	31
iSCSI Error Handling	31
Configuring LDTO and ETO on ESX Server	32
Multipath I/O Support	33
Configuring and Enabling Support for ESX MPIO on Non-boot Targets	33
Configuring and Enabling Support for ESX MPIO on BootTargets	33
Logging into Targets Using vSphere Client	33
Error Handling Under Multipath (MPIO) and Cluster Configurations	34
3. Managing Devices using CIM	35
4. Troubleshooting	36
Troubleshooting the FC/FCoE Driver	36
General Situations	36
LPFC Log Messages	37

Message Log Example	38
ELS Events (0100 - 0199).....	38
Link Discovery Events (0200 - 0299)	42
Mailbox Events (0300 - 0339).....	50
Initialization Events (0400 - 0599)	60
FCP Traffic History (0700 - 0799).....	73
Node Table Events (0900 - 0999)	75
Security Events (1000 - 1099)	75
Miscellaneous and FCoE Events (1200 - 1299)	80
Link Events (1300 - 1399)	84
Port Setup Events (1400 - 1499)	85
IOCTL Events (1600 - 1699).....	89
VPort Events (1800 - 1832)	90
ELS Events (1833 - 2800).....	94
New Events	116
Troubleshooting the NIC Driver	129
NIC Event/Error Logging	130
Retrieving ESX/ESXi Server NIC Error Log Codes	130
ESX/ESXi Server NIC Event Log Entries	130
NIC Adapter Firmware Error.....	132
Troubleshooting the iSCSI Driver (For ESX/ESXi 4.1 and ESXi 5.0 Systems Only)	133
Retrieving iSCSI Error Log Codes	133
iSCSI Error Log Code Entries.....	133
Additional iSCSI Driver Messages	136
Description of Mandatory and Optional Parameters.....	136
Appendix A. Configuring iSCSI Through DHCP	139
Dynamic Host Configuration Protocol (DHCP) Recommendations	139
Vendor-Specific Option 43	139
Format of Vendor-Specific Option 43	139

List of Tables

Table 2-1	FC/FCoE Driver Configuration Parameters	23
Table 2-2	User-configurable NIC Driver Options	27
Table 2-3	User-configurable iSCSI Driver Options	29
Table 2-4	Interrupt Moderation Policy Settings	31
Table 2-5	LDTO and ETO Default Values on ESX Server	32
Table 4-1	General Driver Situations	36
Table 4-2	Message Log Table	37
Table 4-3	Troubleshooting the NIC Driver	129
Table 4-4	ESX Server NIC Event Log Entries	130
Table 4-5	Troubleshooting the iSCSI Driver	133
Table 4-6	iSCSI Error Log Code Entries	133
Table 4-7	Additional iSCSI Driver Messages	136
Table 4-8	Data String Parameters for Option 43	136

1. Installation

Driver Information

This product supports the Emulex® OneConnect™ families of universal converged network adapters (UCNAs) and Emulex LightPulse® family of host bus adapters (HBAs).

The VMware ESX/ESXi drivers support the Fibre Channel (FC), FC over Ethernet (FCoE), Ethernet (NIC), and Internet Small Computer System Interface (iSCSI) protocols.

This document explains how to install the VMware ESX/ESXi drivers on your system and configure the drivers' capabilities based on the supported networking protocols:

- FC/FCoE
 - Adding LUNs and targets
 - Configuring driver parameters
 - Creating an FC remote boot disk
 - Managing devices through the CIM interface
 - Working with virtual ports (VPorts)
 - Troubleshooting FC/FCoE issues
- NIC
 - Configuring NIC driver parameters
 - Improving driver performance
 - Using vmxnet emulation, including TSO and jumbo frames
 - Troubleshooting NIC issues
- iSCSI
 - Configuring iSCSI driver parameters, iSCSI error handling, and LDTO and ETO
 - Implementing Multipath I/O (MPIO) support for non-boot and boot targets
 - Configuring iSCSI through Dynamic Host Configuration Protocol (DHCP)
 - Troubleshooting iSCSI issues

Refer to the *OneCommand Manager Command Line Interface User Manual* for a complete list of supported technology.

Refer to the *OneCommand Manager for VMware vCenter User Manual* for a complete list of supported technology.

Compatibility

For a list of adapters that are compatible with this driver, see the driver Downloads page on the Emulex website. For compatible firmware versions, see the Downloads page for the specific adapter.

Known Issues

See the product release notes for the latest information.

Installing the FC/FCoE Driver

This section provides installation information for the driver and the Emulex OneCommand Manager application using the FC/FCoE interface on ESX/ESXi systems. Before using this product, you need a working knowledge of FC/FCoE, TOE (TCP Offload Engine), and network storage devices.

Installing the FC/FCoE Driver and Management Software

The Emulex driver is available through the VMware support site. Refer to the VMware support website for further details. See the *OneCommand Manager Command Line Interface User Manual* and the *OCM for VMware vCenter User Manual* for instructions on installing the respective applications on the ESX Console Operating System (COS).

Note: Before installing the management application, you must install the LPFC driver from the VMware website.

Note: Before installing OneConnect network drivers and management software, verify that the firmware version is correct. If it is, proceed with the installation. If it is not, update the firmware using the OneCommand Manager application or the OCM for VMware vCenter application, and reboot your system before proceeding with the installation.

Uninstalling the FC/FCoE Driver

See the VMware Patch Download page for instructions.

Installing the NIC Driver

This section provides installation information for the Emulex OneConnect UCNA. Before using this product, you need a working knowledge of NIC, TOE, and network-storage devices.

Installing the NIC Driver and Management Software

For ESX/ESXi 4.0 and 4.1 systems, the Emulex NIC driver is available through the VMware support site. The VMware support website also includes a documentation link to the proper driver installation procedures. Follow the installation instructions provided on the VMware support website.

See the *OneCommand Manager Command Line Interface User Manual* for instructions on installing the Emulex core kit.

Note: Before installing the Emulex OneCommand Manager Application Kit, you must install the LPFC driver from the VMware website.

Note: Before installing OneConnect network drivers and management software, verify that the firmware version is correct. If it is, proceed with the installation. If it is not, update the firmware using the OneCommand Manager application and reboot your system before proceeding with the installation.

For ESXi 5.0 systems, the Emulex NIC driver is available in the initial release of ESXi 5.0. Refer to the operating system guide for installation instructions.

Note: Before installing the OCM for VMware vCenter software plug-in, you must install the NIC driver from the VMware software website.

Note: Before installing the driver and management software, verify that the firmware version is correct. If it is, proceed with the installation. If it is not, you must update the firmware and OCM for VMware vCenter software plug-in and reboot your system before proceeding with the installation. The installation requires that the CIM Provider be installed. For more information on installing the CIM Provider, see the *OneCommand Manager Command Line Interface User Manual*.

Uninstalling the NIC Driver

For ESX/ESXi 4.0 and 4.1 systems, see the VMware Patch Download page for instructions.

Virtualization Support

For the best performance, you must install VMware Tools in each guest operating system. For information on installing VMware Tools in a Linux or Windows guest operating system, refer to the appropriate VMware ESX/ESXi Server documentation.

Enabling NetQueue

To support multiple interfaces in ESX/ESXi Server, you must enable NetQueue in ESX/ESXi Server.

Note: NetQueue is enabled by default.

- To determine if NetQueue is enabled, run the following command from the ESX/ESXi Server console:

```
# esxcfg-advcfg -j netNetqueueEnabled
```

If it returns 'netNetqueueEnabled = FALSE', NetQueue is disabled.

- To enable NetQueue, run the following command:

```
# esxcfg-advcfg -k TRUE netNetqueueEnabled
```

Reboot the ESX/ESXi Server for the change to take effect.

How an ESX/ESXi Server Creates and Names Interfaces

The NIC driver supports a maximum of four UCNA's per system. For dual-channel UCNA's running in standard operating mode, the driver creates two interfaces (one for each physical port). The first and second interfaces are respectively named vmnic0 and vmnic1 (assuming there are no other network interfaces in your configuration). The same applies to virtual NIC (vNIC)-capable UCNA's when vNIC mode is disabled in the adapter BIOS (for those boards that support vNIC).

For ESX/ESXi 4.0 systems, when the FCoE UCNA has vNIC mode enabled in the adapter BIOS, the driver creates four, six, or eight vmnic interfaces. In the case of a six vmnic scenario, the interfaces are labeled vmnic0 through vmnic5 (assuming there are no other network interfaces in your configuration).

For ESX/ESXi 4.1 and ESXi 5.0 systems, when vNIC mode is enabled in the adapter BIOS and the UCNA is in NIC-only mode, the driver creates eight interfaces (four for each physical port). The interfaces are labeled vmnic0 through vmnic7 (assuming there are no other network interfaces in your configuration).

Note: When vNIC mode is enabled in the adapter BIOS and the UCNA is in FCoE or iSCSI mode, the driver creates only six NIC interfaces. The other two interfaces are reserved for FCoE and iSCSI.

All vNICs are fully functional and support the same capabilities as a standard NIC. The vNICs can also be linked to a virtual switch in the same way:

```
# esxcfg-nics -l //list recognized nics
# esxcfg-vswitch -l //list available vswitches
# esxcfg-vswitch -a vSwitch0 //create vSwitch0
# esxcfg-vswitch -A VMNet0 vSwitch0 //create virtual machine
network, VMNet0 and add it to vSwitch0
# esxcfg-vswitch -L vmnic0 vSwitch0 //link vmnic0 to vSwitch0
```

The only difference being that in vNIC mode, each of the four vNICs tied to a physical port shares the port's 10GbE bandwidth.

Configuring VLANs

Virtual local area network (VLAN) filtering is supported in the hardware. To configure VLANs, create the vSwitch with the required VLAN ID and use this interface as an adapter to this vSwitch. A native VLAN can also be configured in the guest operating system in VGT (Virtual Guest Tagging) mode. (For example, using vconfig in the Linux guest operating system.)

Up to 63 VLANs can be used with each universal multichannel (UMC) virtual channel.

Note: You cannot run Link Aggregation Control Protocol (LACP) when UMC is enabled.

Configuring Network Heap Size in ESX/ESXi Server

The amount of memory allocated by default for a network heap depends on the amount of memory configured in the system. The ESX/ESXi Server network stack allocates a minimum of 64 MB to the network heap to handle network data. Additional memory is allocated to the network heap if the system is configured with more memory. If the network load requires more than 64 MB of memory, the NIC driver cannot allocate it. When this happens, the driver logs messages in the file `/proc/vmware/log` indicating that the `alloc_skb()` call failed. This impacts network performance considerably.

To read the current size of the network heap, run the following command:

```
# esxcfg-advcfg -j netPktHeapMaxSize
netPktHeapMaxSize = 0
#
```

If the default value of 64 MB is in effect, this command shows the `PktHeapMaxSize` as 0. If any other value is in effect, the command returns that value.

You can allocate more memory for the network heap using the `esxcfg-advcfg` command. For example, to set the heap size to 128 MB, run the following commands:

```
# esxcfg-advcfg -k 128 netPktHeapMaxSize
# esxcfg-advcfg -j netPktHeapMaxSize
netPktHeapMaxSize = 128
#
```

The new value takes effect after a reboot.

Note: Although ESX Server 4.1 supports up to 256 iSCSI targets, it can only display up to 139 targets. For information on displaying more than 139 targets, see “Troubleshooting the iSCSI Driver (For ESX/ESXi 4.1 and ESXi 5.0 Systems Only)” on page 133.

Obtaining Information on the Installed NIC Driver

To get information on the installed NIC driver on ESX/ESXi 4.0 and 4.1 systems, enter

```
esxupdate query --vib-view | grep be2net
```

This is a sample output:

```
[root@blade10]# esxupdate query --vib-view | grep be2net
cross_vmware-esx-drivers-net-be2net_400.2.102.225.12-1.0.4.164009
installed 2010-04-05T11:28:38.540372-07:00
cross_vmware-esx-drivers-net-be2net_400.2.102.200.10-1.0.4.164009
retired 2010-03-18T13:59:02.520994-07:00
```

To get information on the installed NIC driver on ESXi 5.0 systems, enter

```
esxcli software vib list | grep be2net
```

This is a sample output:

```
esxcli software vib list | grep be2net
```

net-be2net 4.0.227.1-1OEM.369055 Emulex CommunitySupported
2011-05-31

Installing the iSCSI Driver on ESX/ESXi 4.1 Systems Only

This section provides installation information for the Emulex OneConnect UCNA in ESX/ESXi 4.1 systems. Before using this product, you need a working knowledge of iSCSI, TOE, and network-storage devices.

To install the driver for ESX Server, you must use the ESX installation DVD and the ESX driver ISO image provided on the Emulex website. To use the driver ISO images, you must first burn the ISO image file to a CD-ROM.

Performing a Fresh Installation of ESX Server

To perform a fresh install of ESX Server 4.1 in a server with OneConnect hardware, you will need the ESX installation DVD and the ESX driver CD you created to begin driver installation. If OneConnect is the only network interface in your server, or if you want to install ESX Server on an iSCSI target drive connected to the OneConnect, the OneConnect iSCSI driver must be loaded from the driver CD during ESX Server installation.

To perform a fresh install of ESX Server 4.1 in a server with OneConnect hardware:

1. Before you begin, make sure that the Emulex firmware version matches the ESX Server 4.1 driver version.
2. Place the ESX installation DVD in the DVD drive of the host to start the installation of ESX Server 4.1.
3. Follow the on-screen prompts to continue the installation process.
4. When prompted for Custom Drivers, select **Yes** to install custom drivers.
5. Click **Add** to eject the ESX installation DVD.
6. Place the driver CD in the DVD drive of the ESX host and select driver module to import the drivers.
7. Click **Next** to continue.
8. When prompted to load the system drivers, click **Yes**.
9. After loading the drivers, follow the prompts to continue installing ESX Server. After the drivers are installed, you will be prompted to swap the driver CD with the ESX installation DVD.
10. After you install ESX Server, you can create your Virtual Machines (VMs) by following the VMware instructions. Refer to the VMware ESX Server 4.1 documentation for more information.

Adding or Updating the iSCSI Driver in an Existing ESX Server

You can add the OneConnect adapter and driver to an existing ESX Server installation, or update a local or an iSCSI boot installation of an ESX Server with the OneConnect controller to a more recent version of OneConnect software. To do this, run the `install.sh` script.

To install the OneConnect and ESX Server with the `install.sh` script:

1. Insert the Install CD into your CD-ROM drive.
2. Change directory from where the CD was mounted to `CD1/ESX/Installer`. For example:

```
/home/sengines/ # cd CD1/ESX/Installer
```

3. From the installer directory, type

```
sh ./Install.sh
```

The RPM files and the firmware will be installed automatically.

4. The system will prompt you to reboot. Type `y` or `n`.
5. After the system reboots, you can create your VMs by following the VMware instructions. Refer to the VMware ESX Server 4.1 documentation for more information.

To load the drivers during boot (`initrd`), follow these steps:

1. From the installer directory, type

```
sh ./Install.sh
```

The RPM files and the firmware will be installed automatically.

2. Update the `initrd` by typing the command:

```
esxcfg-boot -b
```

3. Reboot the system.

Performing Silent/Unattended Installation

The OneConnect software installation utility supports Silent Installation (or Unattended) mode for ESX Server. Silent installation is a script-file driven mode of installation that does not require any user input to complete.

This section describes how to invoke the installation utility in silent mode. When running in silent mode, the installation utility will install all software automatically. Upon completion, the installation utility provides an exit code describing the outcome of the installation.

Invoking Silent Install in ESX Server

To invoke Silent install in ESX Server:

1. Run the following command line where Install.sh is located to start Silent Install:

```
sh Install.sh -- -s
```

2. Run the following command to get the exit code:

```
echo $?
```

Exit Codes

The OneConnect Server Software Installer uses the following exit codes in VMware ESX Server:

Note: Note that all values are in decimal.

0 – Success. All software was installed correctly with no errors. A system reboot is not required.

10 – Success. All software was installed correctly with no errors. A system reboot is required.

12 – OneConnect firmware update failed.

13 – OneConnect not detected in the system.

14 – The installer was executed on a board with an unsupported configuration.

15 – Insufficient disk space to install OneConnect software.

17 – The Installer was executed by a system user that is not a superuser.

18 – Operating system you are using is not supported by installer.

20 – Invalid command syntax.

Uninstalling the iSCSI Driver

The uninstall file is copied to your system during the OneConnect Server Software installation process for the ESX Server. After you have installed the server software, you can find the uninstall.sh file on your local system in the following location:

```
/opt/Emulex/OneConnect/uninstall.sh
```

Removing the iSCSI Driver from initrd

When uninstalling OneConnect Server software from your system, the iSCSI driver will remain in the initrd. To completely remove the OneConnect software from your system, you must manually remove the iSCSI driver from initrd.

To remove the iSCSI driver from initrd:

1. From the uninstall.sh location, uninstall the driver by typing

```
sh ./uninstall.sh
```

2. Update the initrd by typing the command:

```
esxcfg-boot -b
```


3. Reboot the system.

Invoking Silent Uninstall

The OneConnect software installation utility also supports Silent Uninstall mode for ESX Server.

To invoke silent uninstall:

1. Run the following command line to start Silent Uninstall:

```
sh Uninstall.sh -- -s
```

2. Run this command to get the exit code:

```
echo $?
```

Uninstall Exit Codes

The OneConnect Server Software Installer uses the following exit codes in VMware ESX Server:

Note: Note that all values are in decimal.

0 – RPM not found.

10 – Success. All software was un-installed correctly with no errors. A system reboot is required.

17 – The Installer was executed by a system user that is not a superuser.

20 – Invalid command syntax.

Installing the iSCSI Driver on ESXi 5.0 Systems Only

This section provides installation information for the Emulex OneConnect UCNA. Before using this product, you need a working knowledge of iSCSI, TOE, and network-storage devices.

Installing the iSCSI Driver and Management Software

The Emulex driver is available in-box with the initial release of ESXi 5.0. Refer to the operating system guide for installation instructions.

Note: Before installing the OCM for VMware vCenter software plug-in, you must install the iSCSI driver from the VMware software website.

Note: Before installing the driver and management software, verify that the firmware version is correct. If it is, proceed with the installation. If it is not, you must update the firmware and OCM for VMware vCenter software plug-in and reboot your system before proceeding with the installation. The installation requires that the CIM Provider be installed. For more information on installing the CIM Provider, see the *OneCommand Manager Command Line Interface User Manual*.

Installing All Drivers (ESX/ESXi 4.0 and 4.1 Systems Only)

To install all drivers, use the 'esxupdate' utility provided by VMware in the ESX and ESXi platforms. The drivers and components that can be installed include:

- LPFC
- NIC (ESX/ESXi 4.1 systems only)
- iSCSI (ESX/ESXi 4.1 systems only)

esxupdate Procedure

For esxupdate installs, perform the following procedure.

Directly mount the ISO image in this manner:

```
[root@testmachine ~]# mkdir /tmp/mountpoint
[root@testmachine ~]# mount -r -o loop /path/to/driver.iso
/tmp/mountpoint
```

Once the ISO image is mounted, you can access the offline bundle in the /tmp/mountpoint/offline-bundle/ directory. Since the offline bundle file name varies depending on the package that is to be installed, the example below uses the name 'offline-bundle.zip' - replace this file name with the name of the offline bundle to be installed.

An offline bundle can be installed on a VMware ESX server locally using the "esxupdate" command. The following example uses the offline bundle file name "offline-bundle.zip"; when using this example as a reference, make sure to use the file name of the offline bundle to be installed (note the "--maintenance" parameter is required for FCoE, NIC, and iSCSI driver installations):

```
[root@testmachine ~]# esxupdate --maintenancemode --bundle=
<offline-bundle.zip>
```

Reboot the VMware ESX server to activate the drivers.

LPFC Driver

Use the LPFC driver for HBA adapters and the UCNA adapters' FCoE ports. To install the LPFC driver, run the following command in the command prompt of the ESX/ESXi host:

```
# mkdir /tmp/mountpoint
# mount -r -o loop /path/to/driver.iso /tmp/mountpoint
# esxupdate --maintenancemode update --bundle=<lpfc driver.zip>
```

where <lpfc driver.zip> is the LPFC driver released as a zip file.

NIC Driver (ESX/ESXi 4.1 systems only)

Use the NIC driver for the NIC ports of the UCNA adapters. To install the NIC driver, run the following command in the command prompt of the ESX/ESXi host:

```
# mkdir /tmp/mountpoint
# mount -r -o loop /path/to/driver.iso /tmp/mountpoint
# esxupdate --maintenancemode update --bundle=<offline-bundle.zip>
```

where <offline-bundle.zip> is the be NIC driver released as an zip file.

iSCSI Driver (ESX/ESXi 4.1 systems only)

Use the iSCSI driver for the iSCSI ports of the UCNA adapters. To install the iSCSI driver, run the following command in the command prompt of the ESX/ESXi host:

```
# mkdir /tmp/mountpoint
# mount -r -o loop /path/to/driver.iso /tmp/mountpoint
# esxupdate --maintenancemode update --bundle=<be2iscsi.zip>
```

where <be2iscsi.zip> is the iSCSI driver released as zip file.

Adding or Updating Drivers on Existing ESX and ESXi Installations Using vihostupdate

To add or update drivers on an existing ESX or ESXi installation using vihostupdate:

1. Power on the ESX or ESXi host.
2. Insert the driver CD in the CD-ROM drive of the host where either the vSphere CLI package is installed or vMA is hosted.
3. Mount the driver CD.
4. Navigate to <cd mount point>/offline-bundle/ and locate the <offline-bundle>.zip file.
5. Run the vihostupdate command to install drivers using the offline bundle.

```
vihostupdate <conn_options> --install --bundle
<offline-bundle>.zip
```

For more information on vihostupdate, see the *vSphere Command-Line Interface Installation and Reference Guide*.

Updating Drivers with VMware Offline Bundle Media (ESXi 5.0 Systems Only)

VMware recommends using the offline bundle to update software on VMware ESXi 5.0 platforms.

Note: For more information about the ESXi Patch Management activities, refer to the VMware website.

To update a driver with the offline bundle media:

1. Run the following command:

```
esxcli software vib install -d  
<absolute_path_to_bundle>/<driver_name>-<driver-version>-offline-bundle  
.zip
```

where <driver_name> represents the FC/FCoE, NIC, or iSCSI driver.

For example, to update the FC/FCoE driver, type the following command:

```
esxcli software vib install -d  
<absolute_path_to_bundle>/Emulex-FCoE-FC-lpfc820-8.2.2.126.50-offline-b  
undle.zip
```

2. Reboot the VMware ESXi 5.0 Server to activate the drivers.

2. Configuration

FC and FCoE Driver Configuration

You can configure driver parameters using native ESX tools, the Emulex OneCommand Manager CLI application (for use in non-lockdown mode only), or the OneCommand Manager for VMware vCenter application (for use in both lockdown and non-lockdown modes).

This document describes how to configure parameters using native ESX/ESXi tools. For a more comprehensive description of ESX/ESXi tools, refer to VMware's public website. If you have further questions, contact a VMware technical support representative.

See the *OneCommand Manager Command Line Interface User Manual* for information about the OneCommand Manager application.

See the *OneCommand Manager Application for VMware vCenter User Manual* for information about the OneCommand Manager Application for VMware vCenter software plugin (for ESXi systems only).

Note: For VMware ESX 4.0 and 4.1 COS systems, the firewall on the ESX COS server must be opened to manage systems remotely using TCP/IP. To enable TCP port #23333, run the following commands:

```
esxcfg-firewall --openPort 23333,tcp,in,onecommand  
esxcfg-firewall --openPort 23333,tcp,out,onecommand
```

To verify that the correct port is open, run the following command:

```
esxcfg-firewall -q
```

The TCP port number can be changed. The default is 23333.

Refer to the *VMware Server Configuration Guide* for more details on how to configure the ESX COS firewall.

FC/FCoE Driver Parameters Configuration Methods

There are four ways to configure the driver parameters:

- Permanent (global)
- Permanent (per adapter)
- Temporary (global)
- Temporary (per adapter)

The OneCommand Manager application supports all four ways to configure driver parameters. This is the preferred method of setting configuration parameters. Refer to the *OneCommand Manager Command Line Interface User Manual* for more information.

The native ESX/ESXi tools only support permanent configuration methods for the driver parameters. The following section provides further information on permanent configuration methods.

Permanent FC/FCoE Configuration Methods Using Native ESX/ESXi Tools

Permanent configuration requires that the new values be saved in the ESX/ESXi environment. These changes are considered permanent because they stay in effect across system reboots.

See “FC/FCoE Driver Configuration Parameters” on page 22 for parameter names and values. Parameter values are in both hexadecimal and decimal.

Note: For ESXi 5.0 systems, the following steps must be executed from the Troubleshooting Administrative Shell environment because ESXi 5.0 does not provide a COS environment. If your configuration does not provide access to this shell, refer to VMware’s vSphere or VMware’s vCenter server manual for enabling driver logging. Alternatively, refer to Emulex’s CIM provider documentation for driver logging.

To make changes that impact all adapters in the system (global changes):

1. From the COS terminal window, type

```
esxcfg-module -s "param=value param2=value..." <driver_name>
```

The <driver_name> is obtained from the vmkload_mod -l call. Look for the “lpfc” prefix.

2. To reboot the server, type

```
reboot
```

Note: VMware does not officially support unloading the driver via vmkload_mod -u. If you must unload the driver, contact VMware technical support.

Note: NPIV port creation and deletion are performed by the VMware vSphere client or Virtual Center service. Refer to the VMware documentation for more information.

Example of Permanent Global Configuration

The following example sets lun_queue_depth (the maximum number of commands that can be sent to a single LUN) to 20 (default is 30) for all Emulex adapters in your system.

1. Locate the parameter lpfc_lun_queue_depth in Table 2-1 on page 23.
2. Set the permanent value by typing

```
esxcfg-module -s "lpfc_lun_queue_depth=20" lpfc820
```

3. Reboot the server by typing

```
reboot
```

The new setting is used when the driver reloads.

To verify the setting, type

```
esxcfg-module -g lpfc820
```

Examples of Permanent Per-Adapter Configuration

The following example sets `lun_queue_depth` to 20 (default is 30) for adapter #1.

1. Set the adapter-specific value by typing

```
esxcfg-module -s "lpfc1_lun_queue_depth=20" lpfc820
```

2. Reboot the server by typing

```
reboot
```

The new setting is used when the driver reloads.

To verify the setting, type

```
esxcfg-module -g lpfc820
```

The following example sets `lun_queue_depth` to 20 (default is 30) for adapter #1 and `lun_queue_depth` to 10 (default is 30) for adapter #2.

1. Set the adapter-specific value by typing

```
esxcfg-module -s "lpfc1_lun_queue_depth=20  
lpfc2_lun_queue_depth=10" lpfc820
```

Note: Type the command all on one line without a carriage return.

2. Reboot the server by typing

```
reboot
```

The new settings are used when the driver reloads.

To verify the settings, type

```
esxcfg-module -g lpfc820
```

Dynamically Adding LUNs and Targets

For instructions on dynamically adding LUNs and targets, refer to the "Using Rescan" section of the VMware SAN Configuration documentation.

FC/FCoE Driver Configuration Parameters

All adapter-specific parameters have an `lpfcX_` prefix (where X is the driver instance number). For example, setting `lpfc0_lun_queue_depth=20` makes 20 the default maximum number of commands that can be sent to a single logical unit (disk) for `lpfc` instance 0.

Dynamic parameters do not require a system reboot for changes to take effect.

Table 2-1 FC/FCoE Driver Configuration Parameters

Variable	Default Value	Minimum Value	Maximum Value	Dynamic	Description/Comments
lpfc_hba_queue_depth	8192	32	8192	No	The maximum number of FCP commands that can queue to an Emulex adapter. The value cannot exceed what the adapter supports.
lpfc_ack0	0 (Off)	0	1 (On)	No	Uses ACK0 for class 2.
lpfc_discovery_threads	32	1	64	No	Specifies the maximum number of Port Login (PLOGI) commands that can be outstanding for a discovery.
lpfc_fcp_class	3	2	3	No	FC class for FCP data transmission.
lpfc_fdmi_on	0	0	2	Yes	False (0) if disabled. (1) or (2) if enabled, depending on the type of support needed.
lpfc_link_speed	0	0=auto select 1=1 Gb/s 2=2 Gb/s 4=4 Gb/s 8=8 Gb/s 16=16 Gb/s		No	Sets link speed. Note: Not supported for FCoE.
lpfc_log_verbose	0x0	0x0	0x7fffffff	Yes	Extra activity logging (bit mask).
lpfc_lun_queue_depth	30	1	128	Yes	Default maximum commands sent to a single logical unit (disk).
lpfc_max_scsicmpl_time	0	0	60000	Yes	Limits SCSI command completion time (in mS) to control I/O queue depth. The default (0) means the SCSI layer maintains control.
lpfc_scan_down	1	0=Off	1=On	No	Selects a method for scanning ALPA to assign a SCSI ID.

Table 2-1 FC/FCoE Driver Configuration Parameters (Continued)

Variable	Default Value	Minimum Value	Maximum Value	Dynamic	Description/Comments
lpfc_tgt_queue_depth	8192	10	8192	No	Default maximum number of commands sent to a single target. By default, there is no effective limit at the target level.
lpfc_topology	0	0x0=loop then P2P 0x1=internal loopback 0x2=P2P only 0x4=loop only 0x6=P2P then loop		No	FC link topology. (Defaults to loop. If that fails, the driver attempts to link in point-to-point mode). Note: Not supported for FCoE.
lpfc_use_adisc	0	0=Off	1=On	Yes	Sends ADISC instead of PLOGI for device discovery or Registered State Change Notification (RSCN).
lpfc_devloss_tmo	10	1	255	Yes	Number of seconds a remote port can drop from the SAN before that port is removed from the driver.
lpfc_use_msi	0 (ESX/ESXi 4.0 and 4.1) 2 (ESXi 5.0)	0 = use INTX (min) 1 = use MSI 2 = use MSI-X (max)		No	Selects which interrupt mode to use. By default, the driver uses INTX. VMware guidance is to use MSI-X, but MSI is available.
lpfc_fcp_wq_count	4 (ESX/ESXi 4.0 and 4.1) 8 (ESXi 5.0)	1	31	No	Configures the number of fast-path work queues used by the host and port.
lpfc_fcp_eq_count	4 (ESX/ESXi 4.0 and 4.1) 8 (ESXi 5.0)	1	7	No	Configures the number of fast-path event queues used by the host and port.
lpfc_sg_seg_count	64	64	256	No	Configures the maximum number of scatter-gather elements the driver accepts in a single SCSI command.
lpfc_enable_npiv	1 (on)	0 (off)	1		Enables NPIV functionality.
lpfc_fcf_failover_policy	1	1	2		Sets the FCF Failover policy. 1 - Sets the policy to fast failover. 2 - Sets the policy to highest FCF priority.

Table 2-1 FC/FCoE Driver Configuration Parameters (Continued)

Variable	Default Value	Minimum Value	Maximum Value	Dynamic	Description/Comments
lpfc_use_mq (ESXi 5.0 systems only)	1 (on)	0 (off)	1		Enables or disables Multiqueue.
lpfc_enable_rrq	0 (off)	0	1 (on)		Enables Resource Recovery Qualifier (RRQ) functionality.
lpfc_pci_max_read	0 (auto - driver determines behavior)	0	4096		The maximum DMA read byte count. Allowed values are 0, 512, 1024, 2048, and 4096.
lpfc_iocb_cnt	1	1	5	No	Number of IOCBs allocated for ELS, CT, ABTS in 1024 increments.

Creating an FC Remote Boot Disk

For instructions on creating an FC remote boot disk, refer to the VMware SAN Configuration documentation.

Managing Devices through the CIM Interface

VMware on the Visor-based ESXi platforms uses the CIM interface as the only standard management mechanism for device management.

Using the OneCommand Manager CLI

The OneCommand Manager application uses the standard CIM interfaces to manage the adapters in the ESX COS and Visor environments. The OneCommand Manager application supports the CIM-based device and adapter management in addition to the existing adapter management functionality around its proprietary management stack along with the standard HBA API interface.

Refer to the *OneCommand Manager Command Line Interface User Manual* for more information.

Note: The management of adapters in the VMware ESX/ESXi hosts through the CIM interface is enabled only for the OneCommand Manager applications running on the Windows environment.

Using the OCM for VMware vCenter Application

The OCM for VMware vCenter plug-in software uses the standard CIM interfaces to manage the adapters and supports CIM-based device and adapter management. The OCM for VMware vCenter plug-in software also supports existing adapter management functionality based on its proprietary management stack and the standard HBA API interface. To manage LightPulse and OneConnect adapters

(including updating the firmware) on an ESXi 5.0 host using OCM for VMware vCenter, you must install the out-of-box Emulex CIM Provider on the host.

For more information on installing the OneCommand Manager Application for VMware vCenter software plugin and enabling the CIM Provider, see the *OneCommand Manager Application for VMware vCenter User Manual*.

Installing the Emulex CIM Provider

Refer to the *CIM Provider Installation Guide* for instructions on installing the Emulex CIM provider.

Working with VPorts (Virtual Ports)

Creating, Deleting, and Displaying VPorts

The Emulex driver for VMware supports NPIV by default. The only management API for creating and deleting a VPort and creating an NPIV-enabled virtual machine comes from ESX/ESXi. VPorts in the driver discover the fabric just like physical ports do, and are subject to the same SAN delays. As the number of VPorts increases, the amount of time it takes to complete remote port discovery increases. This is because the VPorts are created sequentially and each VPort executes discovery synchronously. If your NPIV-enabled virtual machines power-on automatically, powering on could take longer than usual. This is normal for NPIV virtual machines.

Note: The following notes apply to VPorts:

- Ensure you are using the latest recommended firmware for VPort functionality. Check the Emulex website for the latest firmware.
- Loop devices and NPIV are not supported on the same port at the same time. If you are running a loop topology and you create a VPort, the VPort's link state is offline. VMware ESX supports only fabric mode.
- You can create VPorts only on 4, 8, 16 Gb/s LightPulse adapters, and OneConnect adapters. You cannot create VPorts on 1 Gb/s or 2 Gb/s adapters.
- The OneCommand Manager application sees all VPorts created by the driver, but the application has read-only access to them.

NIC Driver Configuration

Configuring NIC Driver Options

The following table lists the user-configurable NIC driver options. It includes a description of the parameter and its default value.

Table 2-2 User-configurable NIC Driver Options

Parameter	Default Value	Description
heap_initial	32 MB	The size of the memory heap, in bytes, that should be initially allocated for the driver.
heap_max	38 MB	The maximum possible size to which the driver heap is allowed to grow.

The following command line shows how to load the driver with the initial heap size set to 40 MB:

```
# vmkload_mod be2net heap_initial=41943040
```

To configure the NIC driver to load with this value as the initial heap size after each reboot, run the following command and reboot the system:

```
# esxcfg-module -s "heap_initial=41943040" be2net
```

Performance Tuning

The OneConnect UCNA is an x8, Generation 2 (Gen2) PCI-Express (PCIe) device. To obtain the best two-port throughput from the OneConnect UCNA, it should be installed in an x8 or x16 Gen2 PCIe slot.

Using vmxnet Emulation

Using vmxnet3 or vmxnet2 as the emulation driver in guest operating systems is crucial for optimal network performance. To configure vmxnet3 as the emulation driver in guest operating systems, you must install VMware Tools in the guest operating systems. For information on installing VMware Tools in a guest operating system, refer to the appropriate VMware ESX/ESXi Server documentation.

After VMware Tools are installed, when you add a network adapter for a guest operating system, select vmxnet3 or vmxnet2 as the adapter type.

Enabling TSO

The OneConnect UCNA supports TSO (TCP Segmentation Offload), which is necessary to achieve optimal transmit throughput performance with low CPU utilization with the OneConnect UCNA. TSO is enabled by default in ESX/ESX 4.x and ESXi 5.0 servers.

To view the current TSO configuration in the vSphere client:

1. Select the **Configuration** tab.
2. Under **Software**, click **Advanced Settings**.

3. Under **Net Features**, view the current value of Net.UseHwTSO.
 - If the value is 1, TSO is enabled.
 - If the value is 0, TSO is disabled.

Enabling Jumbo Frames

Enabling jumbo frames reduces CPU utilization and is a recommended practice. To use jumbo frames, you must increase the MTU (Maximum Transmission Unit) size in the vSwitch and also in the guest operating system. The OneConnect UCNA supports MTU sizes between 64 bytes and 9000 bytes. For optimal performance, set the MTU size to the maximum value supported by your network environment. The desired MTU size must be configured in the vSwitch as well as the guest operating systems. Jumbo frames are not enabled by default in ESX/ESXi servers.

To configure the MTU size of a vSwitch using the vSphere client:

1. Select the **Configuration** tab.
2. Under **Software**, click **Advanced Settings**.
3. Under **Networking**, select **Edit Switch Properties**.
4. Select **Edit vSwitch Properties** and click the **General** tab.
5. Under **Advanced Properties** on the General tab, set the MTU value to 9000.

Setting the MTU Size for a Linux Guest Operating System

To set the MTU size in each Linux guest operating system to 9000, run the following command:

```
ifconfig eth<N> mtu 9000
```

where <N> is the number of the Ethernet interface on which you are working.

Setting the MTU Size for a Windows Guest Operating System

To set the MTU size in each Windows guest operating system:

1. Go to the **Start** menu and select **Control Panel > System**.
2. Select the **Hardware** tab and open **Device Manager**.
3. Expand the **Network Adapters** heading.
4. Right-click the appropriate NIC, and select **Properties**.
5. Select the **Advanced** tab and one of the following options depending on the VMware system:
 - For VMware ESX/ESXi 4.1 systems, select jumbo (e1000 emulation) or set the MTU value (vmxnet).
 - For VMware ESX/ESXi 4.0 and ESXi 5.0 systems, set the MTU value.

iSCSI Driver Configuration (ESX/ESXi 4.1 and ESXi 5.0 Systems Only)

Configuring iSCSI Driver Options

The following table lists the user configurable iSCSI driver options. It includes a description of the parameters, default values, and the limits within which they can be configured.

Note: If the value given for a parameter is outside the supported range (Minimum and Maximum values), then the driver will log an error in the Event Log and continue to load using the default value of the parameter.

Table 2-3 User-configurable iSCSI Driver Options

Parameter	Default Value	Minimum Value	Maximum Value	Description
LDTO	20 seconds	0 seconds	30 seconds	Link Down Timeout, in seconds. This determines the amount of time the initiator driver will wait for the controller's physical link to become available before reporting that the LUNs are unavailable to the operating system.
ETO 30	30 seconds	0 seconds	30 seconds	Extended Timeout in Seconds. This determines the amount of time the initiator driver will wait for the target to become available once it has lost connection to the target during an IO operation. Note: If the minimum value is set between 0 - 19, the driver will assume a value of 20 internally. No modifications will be seen in the registry.
im_policy	2	0	4	Controls the rate of interrupts for the UCNA. For more information, see "Interrupt Moderation Policy Settings" on page 31.
large I/O	128	128	512	Maximum transfer size in a single I/O request in kilobytes. By default, the iSCSI driver supports a maximum of 128 KB of data in a single I/O request. This option can be used to enable support for 512 KB of data in a single I/O request.

The following command line shows how to configure the driver with LDTO value as 25 seconds:

```
# vmkload_mod be2iscsi ldto=25
```

To configure ESX Server to load be2iscsi driver with this value after each reboot, run the following commands and reboot the system:

```
# esxcfg-module -s "ldto=25" be2iscsi
# /usr/sbin/esxcfg-boot -r
```

```
# reboot
```

The `im_policy` (Interrupt Moderation policy) parameter configures the OneConnect driver to use different settings for Interrupt Moderation. An `im_policy` value of 1 achieves the highest interrupt rate, whereas the value 4 provides the least interrupt rate. The default value is 2. An `im_policy` of 0 turns off the Interrupt Moderation algorithm in the driver.

The `large_io` option can be used to modify the maximum transfer size in a single SCSI command. By default, the OneConnect iSCSI driver in ESX supports up to 128KB and 32 Scatter Gather entries in a single SCSI command. If applications issue I/O requests that are larger than 128KB or need more than 32 Scatter Gather entries, the request will be split into multiple requests by the driver. By specifying `large_io=512`; the iSCSI driver can support up to 512KB of data and a total of 128 Scatter Gather entries in a single SCSI command.

Note: By setting the option to 512, the amount of physical memory consumed by the driver increases. Also, though intermediate values between 64 and 512 will be accepted, the memory used by the driver will be the same as what will be used for `large_io=512`.

To set the `large_io` parameter in ESX, type the following commands:

```
esxcfg-module -s large_io=512 be2iscsi --> to set the parameter
esxcfg-module -g be2iscsi --> to view the parameter value
esxcfg-module -i be2iscsi --> to view the options
```

Even though the VMware operating system can be tuned to accept larger I/O sizes from guest operating systems, the guest operating systems will also often need to be tuned to create those larger I/Os. For example, a Windows 2008, 32-bit guest will by default have a maximum transfer size of 64KB, even if the VMware kernel is tuned to allow 512KB IO transfers. You must modify the guest registry in order to achieve the maximum transfer rate set in the VMware kernel.

To do this, use the registry editor to add or modify the following entry to change the maximum transfer size for the Windows guest:

```
HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\Symmpi\Parameters\Device\MaximumSGList
```

The formula used to calculate the proper value for `MaximumSGList` is:

- For a 32-bit Windows guest use the following formula:
$$\text{MaximumSGList} = ((\text{Maximum Transfer Size}) / 4) + 1$$
- For a 64-bit Windows guest use the following formula:
$$\text{MaximumSGList} = ((\text{Maximum Transfer Size}) / 8) + 1$$

For example: to allow a 256 Kbyte transfer size on a 32-bit guest, this would be the formula to use: $256 / 4 = 64 + 1 = 65$ (decimal) or 0x41(hexadecimal).

The maximum value allowed for `MaximumSGList` is 255 or 0xFF. For the particular value of 0xFF, the internal value passed to Windows is increased to 0x101, allowing support for a full 1 Mbyte transfer (2 Mbytes for 64-bit).

The `MaximumSGList` is 129 for a 512K transfer.

Other guest operating systems may also need to be tuned similarly. Consult the tuning guides that accompany those operating systems.

Interrupt Moderation Policy Settings

Interrupt Moderation Policy settings control the rate of interrupts for OneConnect hardware. By default, the driver implements an Interrupt Moderation scheme that is based on the I/O load and the interrupt rate. The default setting for the Interrupt Moderation Policy attempts to vary the interrupt rate between 3500 to 10000 interrupts per second. In addition, the OneConnect driver allows other configuration settings which are listed in the following table.

Table 2-4 Interrupt Moderation Policy Settings

Setting	Parameter	Description
Disabled	im_policy=0	Interrupt Moderation algorithm is turned off in the driver.
Aggressive	im_policy=1	Achieves the highest interrupt rate among all available settings.
Moderate	im_policy=2	This is the default value.
Conservative	im_policy=3	Achieves a lower interrupt rate than Moderate.
Very Conservative	im_policy=4	Achieves the minimum interrupt rate among all available settings.

While the default setting of Moderate may work for most configurations, there are instances when the setting may need to be altered. Changing the Interrupt Moderation Policy setting should be based on the initiator system configuration, the number of iSCSI targets that will be connected, the I/O load, and the throughput and latency offered by these iSCSI targets.

On systems capable of sustaining a higher interrupt rate and when the number of targets that will be connected is less (up to 8), the more Aggressive setting will result in lower latency and higher values of I/O operations per second (IOPs). But the higher interrupt rate could also result in system stalls and freezes, especially during higher values of queue depth and smaller sized I/O requests.

On a configuration that involves a large number of iSCSI targets (more than 32 or 64) and higher values of queue depth, the default setting may prove to be too aggressive and the Interrupt Moderation setting may need to be changed to Conservative or Very Conservative. Though this will increase latency of an I/O request, the lower interrupt rate may allow the system to be functional under a high load.

iSCSI Error Handling

The goal of iSCSI error handling is to be tolerant of link level and/or target level failures up to configured timeout values so that I/O errors are not seen by the application or operating system. The error handling is triggered under the following conditions:

- Loss of immediate link to the initiator (for example, cable disconnect/port failure).

The OneConnect firmware detects and notifies the driver of a loss of the link. When this happens, the driver will queue the I/O requests internally up to a configured timeout period so that the operating system does not see I/O errors. This timeout is known as Link Down Timeout (LDTO).

- Loss of connection to the target due to target and/or network disconnection at the target.

If the driver has I/O requests pending with the target and the target becomes unavailable (due to target going down/failing over or network issues at the target), the driver queues up the I/O request internally up to a configured timeout period. This timeout is known as Extended Timeout (ETO).

When the configured threshold for LDTO and ETO is reached and the initiator is still unable to connect to the target, the driver fails all I/O requests. At this point, I/O errors will be seen by the application and operating system.

Note: Following a link up, switch ports can take a long time to initialize and go to a forwarding state. Because of this, additional time should be added to the ETO and LDTO settings to eliminate I/O disruption and/or target unavailability. If the switch port is connected to a single host, then PortFast mode can be enabled on the switch port to eliminate delays in transitioning to a forwarding state.

Configuring LDTO and ETO on ESX Server

The following table lists the default values of LDTO and ETO on ESX Server and the limits within which they can be configured.

Table 2-5 LDTO and ETO Default Values on ESX Server

Parameter	Default Value	Minimum Value	Maximum Value
LDTO	20 seconds	0 seconds	3600 seconds
ETO 30	30 seconds	0 seconds	3600 seconds

Note: If the value of ETO is set to a number between 0 and 19, the driver will assume a value of 20 seconds internally. You will not see any modification to the registry.

LDTO and ETO values are configurable during insmod time. The ETO value specified during insmod is the default ETO value that is applied to all targets.

The following command line shows how to configure the driver with LDTO value as 25 seconds:

```
# vmkload_mod be2iscsi ldto=25
```

To configure ESX Server to load the iSCSI driver with this value after each reboot, run the following commands and reboot the system:

```
# esxcfg-module -s "ldto=25" be2iscsi
# /usr/sbin/esxcfg-boot -r
# reboot
```


Multipath I/O Support

This section describes the installation and login processes for multipath I/O support.

Configuring and Enabling Support for ESX MPIO on Non-boot Targets

To configure and enable support for ESX MPIO on non-boot targets:

1. Connect your configuration for multipath.
2. Log into your targets with all paths using vSphere Client or iSCSISelect. For more information about using vSphere Client, see “Logging into Targets Using vSphere Client” on page 33. For information about using iSCSISelect, see the *Boot Manual for Emulex OneConnect Adapters* or the *Boot Manual for Emulex LightPulse Adapters*.

Configuring and Enabling Support for ESX MPIO on BootTargets

To configure and enable support for ESX MPIO on boot targets:

1. Connect your configuration for multipath. Multipath can be configured before or after installation.
2. Log into your targets with all paths using vSphere Client or iSCSISelect. For more information about using vSphere Client, see “Logging into Targets Using vSphere Client” on page 33. For information about using iSCSISelect, see the *Boot Manual for Emulex OneConnect Adapters* or the *Boot Manual for Emulex LightPulse Adapters*.

Logging into Targets Using vSphere Client

To log into targets using the vSphere Client:

1. Log into the server that you would like to configure from the vSphere Client and select the **Configuration** tab.
2. In the Hardware section, select the **Storage Adapters** link.
3. Select the OneConnect host adapter in the Storage Adapters list.
4. Select the initiator port, and then click **Properties**.
5. From the iSCSI Initiator Properties screen, click the **Dynamic Discovery** tab.
6. Click **Add** to display the Add Send Target Server menu.
7. Type in the IP address of the first target portal and click **OK**.

The initiator finds the target machines.

8. Click the **Static Discovery** tab to find all target portals.
9. Click **Close**.
10. A dialog box indicates that a rescan is needed. Click **Yes**.

The configured LUNs are displayed.

11. Repeat the steps to log into the other target portal to set up MPIO.
12. To check that both paths are connected to the same LUN, follow these steps:
 - a) Select the LUN and right-click.

- b) Click **Manage Paths**. Multipaths on the LUN are displayed.

Error Handling Under Multipath (MPIO) and Cluster Configurations

In an MPIO or cluster configuration, fault tolerant software is present on the system that makes the iSCSI driver error handling redundant. These configurations also require that I/O errors be reported as soon as they are detected, so the software can failover to an alternate path or an alternative node as quickly as possible.

When the iSCSI driver is run under these configurations, the error handling implemented in the iSCSI driver must be turned off by setting the default value of LDTO and ETO to 0. The changes will take effect during the next driver load.

3. Managing Devices using CIM

VMware on the Visor-based ESX platforms uses CIM as the only standard management mechanism for device management. The OneCommand Manager application uses the standard CIM interfaces to manage the adapters in the ESX COS and Visor environments. The OneCommand Manager application supports the CIM-based device and adapter management in addition to the existing adapter management functionality around its proprietary management stack along with the standard HBAAPI interface.

Refer to the *OneCommand Manager Application User Manual* for more information.

4. Troubleshooting

There are several circumstances in which your system may operate in an unexpected manner. This section explains many of these circumstances and offers one or more workarounds for each situation.

Troubleshooting the FC/FCoE Driver

General Situations

Table 4-1, General Driver Situations, identifies some of the common situations and their potential resolutions.

Table 4-1 General Driver Situations

Situation	Resolution
Port link fails to come up.	<p>If an FC link fails to come up, verify that an 8 Gb/s adapter is not attempting to connect to a 1 Gb/s device. Only 2, 4 and 8 Gb/s devices are supported on 8 Gb/s adapters.</p> <p>For LP21000 adapters, ensure that the adapter is not in maintenance mode and that it is not running the manufacturing firmware.</p> <p>For the OCe10100 family of adapters, ensure that the fabric port is enabled.</p>
The Emulex driver is not loaded and all paths are down.	<p>Use <code>lspci</code> to determine if the Emulex ports are being properly identified. If not, find out if the driver iso was correctly installed. You must have the correct driver for the installed adapter because the device PCI IDs are installed with the driver package.</p> <p>Examine the <code>/var/log/vmkernel</code> file for <code>lpfc820</code> log messages indicating an error. In this case contact Emulex support.</p>
lpfc driver fails to recognize an adapter and logs “unknown IOCB” messages in the system log during driver load. The adapter is running outdated firmware.	<p>Download and install the adapter firmware that complies with the minimum supported revision (or later) listed on the Emulex website.</p>
System panics when booted with a failed adapter installed.	<p>Remove the failed adapter and reboot.</p>

LPFC Log Messages

Log messages have traditionally been organized into logical groups based on code functionality in the FC driver. With the introduction of OneConnect UCNAs by Emulex, that grouping is modified to account for additional behaviors. The traditional grouping is maintained, but recently added messages are no longer grouped together.

The messages provided in this section are unmaskable error conditions. They are automatically added to the system console log.

You can examine the `/var/log/vmkernel` file to see any of these messages. If you have concerns, the best policy is to run a vm-support dump and contact VMware/Emulex support staff.

Log messages are organized into logical groups based on code functionality within the driver. Each group consists of a block of 100 log message numbers. Most groups require a single block of 100 message numbers, however some groups (INIT, FCP) require two blocks.

Table 3, the Message Log table, shows the groups and defines the associated number ranges.

Table 4-2 Message Log Table

LOG Message Verbose Mask Definition	Verbose Bit	Verbose Description
LOG_ELS	0x1	ELS events
LOG_DISCOVERY	0x2	Link discovery events
LOG_MBOX	0x4	Mailbox events
LOG_INIT	0x8	Initialization events
LOG_LINK_EVENT	0x10	Link events
LOG_FCP	0x40	FCP traffic history
LOG_NODE	0x80	Node table events
LOG_TEMP	0x100	Temperature sensor events
LOG_MISC	0x400	Miscellaneous and FCoE events
LOG_SLI	0x800	SLI events
LOG_FCP_ERROR	0x1000	Selective FCP events
LOG_LIBDFC	0x2000	IOCTL events
LOG_VPORT	0x4000	NPIV events
LOG_EVENT	0x10000	IOCTL event
LOG_DAEMON	0x20000	IOCTL Daemon events
LOG_FIP	0x40000	FIP event
LOG_PROC	0x80000	Procfs events
LOG_FCP_UNDERRUN	0x100000	FCP underruns
LOG_ALL_MSG	0x7fffffff	Log all messages

Message Log Example

The following is an example of a LOG message:

```
Jul 2 04:23:34 daffy kernel: lpfc 0000:03:06.0: 0:1305 Link Down  
Event x2f2 received Data: x2f2 x20 x110
```

In the above LOG message:

- lpfc 0000:03:06.0: identifies the identifies the PCI location of the particular LPFC HW port.
- 0: identifies Emulex HBA0.
- 1305 identifies the LOG message number.

Note: If the word 'Data:' is present in a LOG message, any information to the right of 'Data:' is intended for Emulex technical support/engineering use only.

Note: Unless otherwise noted in the ACTION: attribute, report these errors to Emulex technical support. Emulex requests that when reporting occurrences of these error messages, you provide a tarball of all vmkernel files in /var/log.

ELS Events (0100 - 0199)

**elx_mes0100: FLOGI failure Status:<status>/<extended_status>
TMO:<timeout>**

DESCRIPTION: An ELS FLOGI command that was sent to the fabric failed.

DATA: (1) ulpStatus, (2) ulpWord[4], (3) ulpTimeout

ACTION: This error could indicate a fabric configuration error or internal driver issue. If this issue persists, report the error to Emulex technical support.

elx_mes0111: Dropping received ELS cmd

DESCRIPTION: The driver decided to drop an ELS Response ring entry.

DATA: (1) ulpStatus, (2) ulpWord[4], (3) ulpTimeout

ACTION: This error could indicate a software driver or firmware issue. If this issue persists, report the error to Emulex technical support.

**elx_mes0113: A FLOGI ELS command <elsCmd> was received from DID
<did> in Loop Mode**

DESCRIPTION: While in Loop Mode an unknown or unsupported ELS command was received.

DATA: None

ACTION: Check device DID.

elx_mes0115: Unknown ELS command <elsCmd> received from N_Port <did>

DESCRIPTION: Received an unsupported ELS command from a remote N_Port.

DATA: None

ACTION: Check remote N_Port for potential issue.

elx_mes0122 FDISC Failed (value). Fabric Detected Bad WWN

DESCRIPTION: The driver's FDISC failed. The switch reported a bad WWN in the FLOGI request.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes0124 Retry illegal cmd <value> retry:<value> delay:<value>

DESCRIPTION: Port rejected ELS command as illegal. Driver retrying.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes0125: FDISC Failed (value). Fabric out of resources

DESCRIPTION: The fabric rejected an FDISC because the switch can not support any more virtual ports.

DATA: None

ACTION: Reconfigure the switch to support more NPIV logins. If this issue persists, contact Emulex technical support.

elx_mes0126: FDISC failed (ulpStatus/ulpWord[4])\n

DESCRIPTION: The ELS FDISC command has failed.

DATA: None

ACTION: Check the port and switch configuration.

elx_mes0127: ELS timeout

DESCRIPTION: An ELS IOCB command was posted to a ring and did not complete within ULP timeout seconds.

DATA: (1) elscmd, (2) remote_id, (3) ulpcommand, (4) ulpIoTag

ACTION: If the ELS command is not going through the adapter, reboot the system. If this issue persists, report the error to Emulex technical support.

elx_mes0133: PLOGI: no memory for reg_login

DESCRIPTION: Memory allocation error.

DATA: (1) nlp_DID, (2) nlp_state, (3) nlp_flag, (4) nlp_rpi

ACTION: Memory allocation error. Check system resources. Unload unused modules.

elx_mes0134: PLOGI: cannot issue reg_login

DESCRIPTION: The ELS PLOGI mailbox command has failed.

DATA: (1) nlp_DID, (2) nlp_state, (3) nlp_flag, (4) nlp_rpi

ACTION: Check the port and switch configuration.

elx_mes0135: cannot format reg_login

DESCRIPTION: Could not allocate an RPI or DMA buffer for the mailbox command.

DATA: (1) nlp_DID, (2) nlp_state, (3) nlp_flag, (4) nlp_rpi

ACTION: None required.

elx_mes0136: PLOGI completes to N_Port <DID> completion

DESCRIPTION: A PLOGI has completed for which there is no NDLP.

DATA: (1) ulpStatus, (2) ulpWord[4]

ACTION: None required.

elx_mes0137: No retry ELS command <ELS_CMD> to remote

DESCRIPTION:

DATA: (1) ulpStatus, (2) ulpWord[4]

ACTION: None required.

elx_mes0138: ELS rsp: Cannot issue reg_login for <DID>

DESCRIPTION: REG_LOGIN mailbox command failed.

DATA: (1) nlp_DID, (2) nlp_state, (3) nlp_flag, (4) nlp_rpi

ACTION: None required.

elx_mes0140: PLOGI Reject: invalid nname

DESCRIPTION: Invalid node WWN provided.

DATA: None

ACTION: None required.

elx_mes0141: PLOGI Reject: invalid pname

DESCRIPTION: Invalid port WWN provided.

DATA: None

ACTION: None required.

elx_mes0142: PLOGI RSP: Invalid WWN

DESCRIPTION: The PLOGI sent to the port by a remote port had an invalid WWN.

DATA: None

ACTION: None required.

elx_mes0144: Not a valid WCQE code: <Completion Code>

DESCRIPTION: The completion queue handler detected an invalid type.

DATA: None

ACTION: None required.

elx_mes0147: Failed to allocate memory for RSCN event

DESCRIPTION: Memory could not be allocated to send the RSCN event to the management application.

DATA: None

ACTION: None required.

elx_mes0148: Failed to allocate memory for LOGO event

DESCRIPTION: Memory could not be allocated to send the LOGO event to the FC transport.

DATA: None

ACTION: None required.

elx_mes0154: Authentication not complete

DESCRIPTION: Memory could not be allocated to send the LOGO event to the FC transport.

DATA: None

ACTION: None required.

Link Discovery Events (0200 - 0299)

elx_mes0200: CONFIG_LINK bad hba state <hba_state>

DESCRIPTION: A CONFIG_LINK mailbox command completed and the driver was not in the right state.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes0203: Devloss timeout on WWPN <address> N_Port <nlp_DID>

DESCRIPTION: A remote N_Port that was discovered by the driver disappeared for more than lpfc_devloss_tmo seconds.

DATA: (1) nlp_flag, (2) nlp_state, (3) nlp_rpi

ACTION: If the device generating this message is not a target to which the adapter is connected, this error does not affect the data integrity of the I/O between the adapter and the attached storage and can be ignored.

elx_mes0206: Device discovery completion error

DESCRIPTION: This indicates that an uncorrectable error was encountered during device (re)discovery after a link up. FC devices are not accessible if this message is displayed.

DATA: None

ACTION: Reboot the system. If the issue persists, report the error to Emulex technical support. Run with verbose mode on for more details.

elx_mes0207: Device <DID> (<WWN>) sent invalid service parameters. Ignoring device.

DESCRIPTION: Invalid service parameters were received from DID. Ignoring this remote port.

DATA: DID, WWN

ACTION: Verify the remote port's configuration. If the issue persists, report the error to Emulex technical support. Run with verbose mode on for more details.

elx_mes0222: Initial FLOGI/FDISK timeout

DESCRIPTION: The driver sent the initial FLOGI or FDISK to the fabric and never got a response back.

DATA: None

ACTION: Check Fabric configuration. The driver recovers from this and continues with device discovery.

elx_mes0223: Timeout while waiting for NameServer login

DESCRIPTION: Our login request to the NameServer was not acknowledged within RATOV.

DATA: None

ACTION: Check the fabric configuration. The driver recovers from this and continues with device discovery.

elx_mes0224: NameServer Query timeout

DESCRIPTION: Node authentication timeout, node Discovery timeout. A NameServer Query to the Fabric or discovery of reported remote N_Ports is not acknowledged within R_A_TOV.

DATA: (1) fc_ns_retry, (2) fc_max_ns_retry

ACTION: Check Fabric configuration. The driver recovers from this and continues with device discovery.

elx_mes0227: Node Authentication timeout

DESCRIPTION: The driver has lost track of what N_Ports are being authenticated.

DATA: None

ACTION: None required. The driver should recover from this event.

elx_mes0228: CLEAR LA timeout

DESCRIPTION: The driver issued a CLEAR_LA that never completed.

DATA: None

ACTION: None required. The driver should recover from this event.

elx_mes0230: Unexpected timeout, hba linkstate <link_state>

DESCRIPTION: Discovery has timed out and the adapter state is not ready.

DATA: None

ACTION: None required.

elx_mes0231: RSCN timeout

DESCRIPTION: The driver has lost track of what N_Ports have RSCNs pending.

DATA: (1) fc_ns_retry, (2) lpfc_max_ns_retry

ACTION: None required. The driver should recover from this event.

elx_mes0233: Nodelist not empty

DESCRIPTION: Driver unloaded or hotplug detected a node still in use.

DATA: None

ACTION: None required.

elx_mes0237: Pending Link Event during Discovery: State <state>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0241: NameServer Rsp Error Data: <data>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0246: RegLogin failed

DESCRIPTION: The firmware returned a failure for the specified RegLogin.

DATA: (1) Did, (2) mbxStatus, (3) hbaState

ACTION: This message indicates that the firmware could not perform a RegLogin for the specified DID. There may be a limitation on how many nodes an adapter can view.

elx_mes0249: Cannot issue Register Fabric login: Err <err>

DESCRIPTION: Could not issue the fabric reg login; the err value is unique for each possible failure.

DATA: None

ACTION: None required.

elx_mes0251: NameServer login: no memory

DESCRIPTION: Could not allocate memory for the NDLP structure.

DATA: None

ACTION: None required.

elx_mes0252: Cannot issue NameServer login

DESCRIPTION: Could not issue an ELS PLOGI to the nameserver DID.

DATA: None

ACTION: Check the port connection and switch configuration.

elx_mes0253: Register VPI: Can't send mbox

DESCRIPTION: Could not issue the REG_LOGIN command for this VPort.

DATA: None

ACTION: None required.

elx_mes0254: Register VPI: no memory goto mbox_err_exit

DESCRIPTION: Could not allocate memory for the REG_LOGIN mailbox command.

DATA: None

ACTION: None required.

elx_mes0255: Issue FDISC: no IOCB

DESCRIPTION: All of the pre-allocated IOCBs are in use.

DATA: None

ACTION: None required.

elx_mes0256: Issue FDISC: Cannot send IOCB

DESCRIPTION: Unable to send the fabric IOCB.

DATA: None

ACTION: Check the switch configuration.

elx_mes0257: GID_FT Query error: <ulpStatus> <fc_ns_retry>

DESCRIPTION: The GID_FT CT request for the nameserver has failed.

DATA: None

ACTION: Check the switch configuration.

elx_mes0258: Register Fabric login error: <mbxStatus>

DESCRIPTION: The REG_LOGIN for the fabric has failed.

DATA: None

ACTION: Check the port and switch configuration.

elx_mes0259: No NPIVFabric support

DESCRIPTION: The switch to which the port is connected does not support NPIV.

DATA: None

ACTION: Check the switch configuration.

elx_mes0260: Register NameServer error: <mbxStatus>

DESCRIPTION: The REG_LOGIN mailbox command has failed for the nameserver.

DATA: None

ACTION: Check the switch configuration.

elx_mes0261: Cannot Register NameServer login

DESCRIPTION: Either a memory allocation issue or an invalid parameter was sent to the REG_LOGIN.

DATA: None

ACTION: At least one message (0142 0121 0133 0134 0135) should precede this message.

elx_mes0262: No NPIV Fabric support

DESCRIPTION: The switch to which the port is connected does not support NPIV.

DATA: None

ACTION: Check the switch configuration.

**elx_mes0263: Discovery Mailbox error: state: <port_state> :
<sparam_mbox> <cfglink_mbox>**

DESCRIPTION: Either the driver could not allocate resources or it could not send sparam_mbox or cfglink_mbox.

DATA: (1) address of sparam_mbox command, (2) address of cfglink_mbox command.

ACTION: Attempt to unload and reload the driver when it is convenient.

elx_mes0264: No NPIV Fabric support

DESCRIPTION: The switch to which the port is connected does not support NPIV.

DATA: None

ACTION: Check the switch configuration.

**elx_mes0266: Issue NameServer Req <cmdcode> err <rc> Data: <fc_flag>
<fc_rscn_id_cnt>**

DESCRIPTION: The driver was not able to send the nameserver CT command.

DATA: (1) VPorts fc_flag, (2) VPorts fc_rscn_id_cnt

ACTION: Check the switch and port configurations.

**elx_mes0267: NameServer GFF Rsp <did> Error (<ulpStatus>
<un.ulpWord[4]>) Data: <fc_flag> <fc_rscn_id_cnt>**

DESCRIPTION: The nameServer GFF CT request failed.

DATA: (1) VPorts fc_flag, (2) VPorts fc_rscn_id_cnt

ACTION: Check the switch and port configurations.

elx_mes0268: NS cmd <cmdcode> Error (<ulpStatus> <un.ulpWord[4]>)

DESCRIPTION: The nameServer CT request failed.

DATA: None.

ACTION: Check the switch and port configurations.

elx_mes0271: Illegal State Transition: node <nlp_DID> event <evt>, state <nlp_state> Data:<nlp_rpi> <nlp_flag>

DESCRIPTION: The current node state does not have a handler for this event.

DATA: (1) nlp_rpi, (2) nlp_flag

ACTION: Verify that all targets are still visible to the SCSI mid-layer.

elx_mes0272: Illegal State Transition: node <nlp_DID> event <evt>, state <nlp_state> Data: <nlp_rpi> <nlp_flag>

DESCRIPTION: The driver is completing a PLOGI but do not have the rcv_plogi flag set.

DATA: (1) nlp_rpi, (2) nlp_flag

ACTION: Verify that all targets are still visible to the SCSI mid-layer.

elx_mes0273: Unexpected discovery timeout,vport State <port_state>

DESCRIPTION: The discovery process has timed out.

DATA: None

ACTION: Ensure that all targets are visible.

elx_mes0282: did:<value> ndlp:<value> pusgmap:<value> refcnt<value>, ndlp->nlp_DID, (void *)ndlp, lpfc_init.c-ndlp->nlp_usg_map

DESCRIPTION: Driver clean-up has found a node that is still on the node list during driver unload or PCI hotplug removal.

DATA: None.

ACTION: None required.

elx_mes0283: Failed to allocate mbox cmd memory

DESCRIPTION: Mailbox allocation error.

DATA: None

ACTION: None required.

elx_mes0285: Allocated DMA memory size <alloclen> is less than the requested DMA memorysize <reqlen>

DESCRIPTION: Memory allocation was truncated.

DATA: None

ACTION: None required.

elx_mes0286: lpfc_nlp_state_cleanup failed to allocate statistical data buffer <nlp_DID>

DESCRIPTION: Memory allocation failed for node's statistical data.

DATA: None

ACTION: None required.

**elx_mes0287: lpfc_alloc_bucket failed to allocate statistical data buffer
<nlp_DID>**

DESCRIPTION: Memory allocation failed for node's statistical data.

DATA: None

ACTION: None required.

**elx_mes0288: Unknown FCoE event type <event_type> event tag
<event_tag>**

DESCRIPTION: The firmware has detected an unknown FCoE event.

DATA: None

ACTION: Check the FCoE switch configuration and the adapter DCBX mode.

elx_mes0289: Issue Register VFI failed: Err <rc>

DESCRIPTION: The driver could not register the Virtual Fabric Index for the FCFI.

DATA: None

ACTION: Check the switch and port configurations.

elx_mes0290: The SLI4 DCBX asynchronous event is not handled yet

DESCRIPTION: The SLI-4 DCBX asynchronous event is not handled yet.

DATA: None

ACTION: None required.

**elx_mes0291: Allocated DMA memory size <alloc_len> is less than the
requested DMA memorysize <req_len>**

DESCRIPTION: The asynchronous DCBX events are not handled in the driver.

DATA: None

ACTION: Check the switch configuration.

elx_mes0293: PM resume failed to start workerthread: error=<error>

DESCRIPTION: The PCI resume (hotplug) could not start the worker thread for the driver.

DATA: None

ACTION: Unload and reload the driver.

elx_mes0294: PM resume Failed to enable interrupt

DESCRIPTION: The PCI resume (hotplug) could not get an interrupt vector.

DATA: None

ACTION: Unload and reload the driver.

elx_mes0297:invalid device group <pci_dev_grp>

DESCRIPTION: While unloading the driver, the driver detect a PCI device that it should not have claimed.

DATA: None

ACTION: None required.

elx_mes0299: Invalid SLI revision <sli_rev>

DESCRIPTION: While processing a host attention or unrecoverable error, the driver detected an invalid SLI revision.

DATA: None

ACTION: None required.

Mailbox Events (0300 - 0339)

elx_mes0300: LATT: Cannot issue READ_LA: Data: <rc>

DESCRIPTION: The link attention handler could not issue a READ_LA mailbox command.

DATA: None

ACTION: None required.

elx_mes0303: Ring <ringno> handler: portRspPut <portRspPut> is bigger than rsp ring <portRspMax>

DESCRIPTION: The port rsp ring put index is larger than the size of the rsp ring.

DATA: None

ACTION: This error could indicate a software driver, firmware or hardware issue. Report these errors to Emulex technical support.

elx_mes0304: Stray mailbox interrupt, mbxCommand <mbxcommand> mbxStatus <mbxstatus>

DESCRIPTION: Received a mailbox completion interrupt and there are no outstanding mailbox commands.

DATA: None

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

elx_mes0306: CONFIG_LINK mbxStatus error <mbxStatus> HBA state <hba_state>

DESCRIPTION: The driver issued a CONFIG_LINK mbox command to the adapter that failed.

DATA: None

ACTION: This error could indicate a firmware or hardware issue. Report these errors to Emulex technical support.

elx_mes0310: Mailbox command <mbxcommand> timeout

DESCRIPTION: A mailbox command was posted to the adapter and did not complete within 30 seconds.

DATA: (1) hba_state, (2) sli_flag, (3) mbox_active

ACTION: This error could indicate a software driver or firmware issue. If no I/O is going through the adapter, reboot the system. If the issue persists, report the error to Emulex technical support.

**elx_mes0311 Mailbox command <value> cannot issue Data: <value>
<value>**

DESCRIPTION: The driver detected an HBA error and can't issue the mailbox.

DATA: (1) sli flags (2) hba flags

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

**elx_mes0312: Ring <ringno> handler: portRspPut <rspPutInx> is bigger
then rsp ring <numRiocb>**

DESCRIPTION: The IOCB command rings put pointer is ahead of the get pointer.

DATA: None

ACTION: None required.

**elx_mes0315: Ring <ringno> issue: portCmdGet <local_getidx> is bigger
then cmd ring <max_cmd_idx>**

DESCRIPTION: The port cmd ring get index is greater than the size of cmd ring.

DATA: None

ACTION: This error could indicate a software driver, firmware or hardware issue. Report these errors to Emulex technical support.

**elx_mes0317: iotag <ulp_ioTag> is out of range: max iotag <max_iotag>
wd0 <wd0>**

DESCRIPTION: The IoTag in the completed IOCB is out of range.

DATA: None

ACTION: This error could indicate a software driver, firmware or hardware issue. Report these errors to Emulex technical support.

**elx_mes0319: READ_SPARAM mbxStatus error <mbxStatus> hba state
<hba_state>**

DESCRIPTION: The driver issued a READ_SPARAM mbox command to the adapter that failed.

DATA: None

ACTION: This error could indicate a firmware or hardware issue. Report these errors to Emulex technical support.

**elx_mes0320: CLEAR_LA mbxStatus error <mbxStatus> hba state
<hba_state>**

DESCRIPTION: The driver issued a CLEAR_LA mbox command to the adapter that failed.

DATA: None

ACTION: This error could indicate a firmware or hardware issue. Report these errors to Emulex technical support.

elx_mes0323: Unknown Mailbox command <mbxCommand> Cmpl

DESCRIPTION: A unknown mailbox command completed.

DATA: None

ACTION: This error could indicate a software driver, firmware or hardware issue. Report these errors to Emulex technical support.

elx_mes0324: Config port initialization error, mbxCmd <mbxCommand> READ_NVPARM, mbxStatus <mbxStatus>

DESCRIPTION: A read nvparams mailbox command failed during port configuration.

DATA: None

ACTION: This error could indicate a software driver, firmware or hardware issue. Report these errors to Emulex technical support.

elx_mes0330: IOCB wake NOT set

DESCRIPTION: The completion handler associated with the IOCB was never called.

DATA: (1) timeout, (2) timeleft/jiffies

ACTION: This error could indicate a software driver, firmware or hardware issue. If the issue persists, report the error to Emulex technical support.

elx_mes0332: IOCB wait issue failed, Data <value>

DESCRIPTION: Driver issued IO failed to complete in polling mode.

DATA: (1) error value.

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes0334: Unknown IOCB command

DESCRIPTION: Received an unknown IOCB command completion.

DATA: (1) type, (2) ulpCommand, (3) ulpStatus, (4) ulpIoTag, (5) ulpContext)

ACTION: This error could indicate a software driver or firmware issue. If these issues persist, report these errors to Emulex technical support.

elx_mes0335: Unknown IOCB command

DESCRIPTION: Received an unknown IOCB command completion.

DATA: (1) ulpCommand, (2) ulpStatus, (3) ulpIoTag, (4) ulpContext)

ACTION: This error could indicate a software driver or firmware issue. If these issues persist, report these errors to Emulex technical support.

**elx_mes0338: IOCB wait timeout error - no wake response Data <value>
<value>**

DESCRIPTION: Driver issued IO did not get a wake signal in polling mode.

DATA: (1) wait time (2) wake value

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes0340: Adapter temperature is OK now

DESCRIPTION: Adapter temperature has reverted to normal range.

DATA: Temperature in Celsius

ACTION: No action needed, informational.

**elx_mes0341: Ring <ringno> Cannot find buffer for an unsolicited iocb tag
<un.ulpWord[3]>**

DESCRIPTION: There are no more pre-allocated buffers available to handle unsolicited buffers.

DATA: None

ACTION: Ensure this port is not being managed by multiple ports.

**elx_mes0342: Ring <ringno> Cannot find buffer for an unsolicited iocb tag
<unsl3.sli3Words>**

DESCRIPTION: This is a multiple IOCB unsolicited command and sufficient buffer space cannot be allocated for it.

DATA: None

ACTION: None required.

**elx_mes0343: Ring <ringno> Cannot find buffer for an unsolicited iocb tag
<un.ulpWord[3]>**

DESCRIPTION: There are no more pre-allocated buffers available to handle unsolicited buffers.

DATA: None

ACTION: None required.

**elx_mes0344: Ring <ringno> Cannot find buffer for an unsolicited iocb tag
<unsl3.sli3Words[7]>**

DESCRIPTION: There are no more pre-allocated buffers available to handle unsolicited buffers.

DATA: None

ACTION: None required.

elx_mes0345: Resetting board due to mailbox timeout

DESCRIPTION: A mailbox command failed to complete. The driver is resetting the port.

DATA: None

ACTION: If the mailbox command fails again, set the lpfc_log_verbose to LOG_MBOX and retry.

**elx_mes0346: Ring <ring number> handler: unexpected ASYNC_STATUS
evt_code <evtcode> W0 <hex w0> W1 <hex w1> W2 <hex W2> W3 <hex
W3> W4 <hex W4> W5 <hex Z5> W6 <hex W6> W7 <hex W7> W8 <hex W8>
W9 <hex W9> W10 <hex W10> W11<hex W11>**

DESCRIPTION: The adapter received an asynchronous event that was not a temperature event.

DATA: None

ACTION: None required.

elx_mes0347: Adapter is very hot, please take corrective action

DESCRIPTION: Adapter temperature is above normal range

DATA: Temperature in Celsius

ACTION: Shutdown and remove the adapter. Contact customer support.

elx_mes0348: NameServer login: node freed

DESCRIPTION: The enable mode failed to free up the nameserver login.

DATA: None

ACTION: None required.

elx_mes0349: rc should be MBX_SUCCESS

DESCRIPTION: The next mailbox command on the mailbox queue has failed.

DATA: None

ACTION: None required.

elx_mes0350: rc should have been MBX_BUSY

DESCRIPTION: Attempting to unregister a default RPI from an interrupt context and the mailbox state is not busy.

DATA: None

ACTION: None required.

**elx_mes0352: Config MSI mailbox command failed, mbxCmd
<u.mb.mbxCommand>, mbxStatus <u.mb.mbxStatus>**

DESCRIPTION: The mailbox command sent to the firmware to configure the adapter to use MSI-X has failed.

DATA: None

ACTION: Ensure the hardware platform supports MSI-X.

**elx_mes0359: Not a valid slow-path completion "event:
majorcode=<value>, minorcode=<value>", bf_get(lpfc_eqe_major_code,
eqe), bf_get(lpfc_eqe_minor_code, eqe));**

DESCRIPTION: SLI-4: The EQE is not valid.

DATA: None

ACTION: None required.

elx_mes0360: Unsupported EQ count. <entry_count>

DESCRIPTION: Cannot create an event queue of this size.

DATA: None

ACTION: None required.

elx_mes0361: Unsupported CQ count. <entry_count>

DESCRIPTION: Cannot create a completion queue of this size.

DATA: None

ACTION: None required.

elx_mes0362: Unsupported MQ count. <entry_count>

DESCRIPTION: Cannot create MQ count of this size.

DATA: None

ACTION: None required.

elx_mes0364: Invalid param

DESCRIPTION: SLI-4: The post SGL function was passed an invalid XRI.

DATA: None

ACTION: None required.

elx_mes0365: Slow-path CQ identifier <cqid> does not exist

DESCRIPTION: The Completion Queue ID passed in the Event Queue entry does not reference a valid completion queue.

DATA: None

ACTION: None required.

elx_mes0366: Not a valid fast-path completion event: majorcode=<major code hex>, minorcode=<minor code hex>

DESCRIPTION: The major or minor code in the Event Queue field is not valid.

DATA: None

ACTION: None required.

elx_mes0367: Fast-path completion queue does not exist

DESCRIPTION: The fast path completion queue referenced by the CQID does not exist.

DATA: None

ACTION: None required.

elx_mes0368: Miss-matched fast-path completion queue identifier: eqcqid=<cqid>, fcpcqid=<queue_id>

DESCRIPTION: The CQID in the event queue entry does not match the fcp_cqid that was passed into the routine.

DATA: None

ACTION: None required.

elx_mes0369: No entry from fast-path completion queue fcpcqid=<queue_id>

DESCRIPTION: There were no completions in the completion queue referenced by fcpcqid.

DATA: None

ACTION: None required.

elx_mes0370: Invalid completion queue type <type>

DESCRIPTION: The event queue entry is not for a mailbox or a work queue entry.

DATA: None

ACTION: None required.

elx_mes0371: No entry from the CQ: identifier <queue_id>, type <type>

DESCRIPTION: There was no completion queue event for this event queue entry.

DATA: None

ACTION: None required.

elx_mes0372: iotag <iotag> is out of range: max iotag (<sli.last_iotag>)

DESCRIPTION: The IOCB lookup cannot be performed because the iocb_tag is out of range.

DATA: None

ACTION: None required.

elx_mes0376: READ_REV Error. SLI Level <sl_rev> FCoE enabled <hba_flag & HBA_FCOE_SUPPORT>

DESCRIPTION: This SLI-4 only adapter setup function was called for a non-SLI-4 device.

DATA: None

ACTION: None required.

elx_mes0377: Error <rc> parsing vpd. Using defaults.

DESCRIPTION: Could not parse the VPD data, so the driver is using the default values.

DATA: None

ACTION: None required.

elx_mes0381: Error <rc> during queue setup.

DESCRIPTION: Could not set up all the queues that driver requires to exchange I/Os with the adapter.

DATA: None

ACTION: Reload the driver.

elx_mes0382: READ_SPARAM command failed status <issue status>, mbxStatus <mailbox status>

DESCRIPTION: The READ_SPARAM mailbox command has failed during initialization. The adapter has been set to error state.

DATA: None

ACTION: Take a dump with hbacmd and then try reloading the driver.

elx_mes0383: Error <error> during scsi sgl post operation

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0384: There is pending active mailbox cmd

DESCRIPTION: The mailbox commands have overlapped. This command should have been added to the mailbox queue.

DATA: None

ACTION: None required.

elx_mes0385: rc should have been MBX_BUSY

DESCRIPTION: The completion handler for REG_LOGIN detected the IMMED_UNREG flag and tried to issue the unreg_login command from an interrupt level. The mailbox status should still be busy.

DATA: None

ACTION: None required.

elx_mes0387: Failed to allocate an iocbq

DESCRIPTION: Failed to get an IOCBQ from the list of available IOCBQs.

DATA: None

ACTION: None required.

elx_mes0388: Not a valid WCQE code: <hex cqe_code>

DESCRIPTION: The event code is invalid. This event is dropped.

DATA: None

ACTION: Ensure that the adapter's firmware is current.

elx_mes0391: Error during rpi post operation

DESCRIPTION: The driver was trying to post pages to the firmware to be used to keep target login information and encountered a failure.

DATA: None

ACTION: Unload and reload the driver.

elx_mes0393: Error <rc> during rpi post operation

DESCRIPTION: The driver was trying to post pages to the firmware to keep target login information and encountered a failure.

DATA: None

ACTION: Unload and reload the driver.

elx_mes0394: Failed to allocate CQ_EVENT entry

DESCRIPTION: The asynchronous event handler was not able to allocate an event queue entry to which to transfer the asynchronous event.

DATA: None

ACTION: This could be a V-LINK clear from the switch or a fatal error from the firmware. Perform a dump from the OneCommand Manager application.

elx_mes0395: The mboxq allocation failed

DESCRIPTION: The asynchronous link event handler could not allocate a mailbox command to issue the READ_LA (read link attention) mailbox command.

DATA: None

ACTION: None required.

elx_mes0396: The lpfc_dmabuf allocation failed

DESCRIPTION: The asynchronous link event handler could not allocate a DMA buffer for the mailbox command to issue the READ_LA (read link attention) mailbox command.

DATA: None

ACTION: None required.

elx_mes0397: The mbuf allocation failed

DESCRIPTION: The asynchronous link event handler could not allocate DMA-able memory for the READ_LA mailbox command.

DATA: None

ACTION: None required.

elx_mes0398: Invalid link fault code: < hex link_fault>

DESCRIPTION: The attempt to read the link attention register has returned an unknown value.

DATA: None

ACTION: None required.

elx_mes0399: Invalid link attention type: <hex link_type>

DESCRIPTION: The READ_LA mailbox command has returned an invalid link type.

DATA: None

ACTION: None required.

Initialization Events (0400 - 0599)

elx_mes0400: Phys Attribute Count Exceeded, Max <value>, Actual <value>

DESCRIPTION: Too many driver configuration parameters have been set. The limit is given as Max.

DATA: (1) Maximum number (2) Actual number

ACTION: Reduce the number of actual parameters.

elx_mes0402: Cannot find virtual addr for buffer tag on ring <ringno>

DESCRIPTION: A DMA buffer is not available for this unsolicited command.

DATA: (1) tag, (2) next, (3) prev, (4) postbufq_cnt

ACTION: None required.

elx_mes0403: lpfc_noddev_tmo attribute cannot be set to <val>, allowed range is [<LPFC_MIN_DEVLOSS_TMO>, <LPFC_MAX_DEVLOSS_TMO>]

DESCRIPTION: Attempt to set the nodev timeout value is outside the range of the devloss timeout range.

DATA: None

ACTION: Set the nodev timeout between the minimum and maximum devloss timeout range.

elx_mes0404: Config Param <value> set to <value>

DESCRIPTION: Driver is setting a persistent VPort parameter to a different value.

DATA: (1) New value

ACTION: None. This message is notification only.

elx_mes0405: Config Param <value> set to <value>

DESCRIPTION: Driver is setting a persistent VPort parameter to a different value.

DATA: (1) New value

ACTION: None. This message is notification only.

elx_mes0406: Adapter maximum temperature exceeded (<temperature>), taking this port offline

DESCRIPTION: The driver has received an error for the adapter indicating that the maximum allowable temperature has been exceeded.

DATA: (1) work_hs, (2) work_status[0], (3) work_status[1]

ACTION: Ensure that the server fans are not blocked. Shut down the server if the airflow is restricted.

elx_mes0408: Cannot create debugfs root

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0409: Cant create debugfs nodelist

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0410: Cannot find virtual addr for mapped buf on ring <ringno>

DESCRIPTION: The driver cannot find the specified buffer in its mapping table. Thus it cannot find the virtual address needed to access the data.

DATA: (1) phys, (2) next, (3) prev, (4) postbufq_cnt

ACTION: This error could indicate a software driver or firmware issue. If the issue persists report these errors to Emulex technical support.

elx_mes0411: Cannot create debugfs hbqinfo

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0412: Cannot create debugfs hba

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0413: Cannot create debugfs dumpHBASlim

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0414: Cannot create debugfs dumpHostSlim

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0415: Cannot create debugfs slow_ring trace

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0416: Cannot create debugfs slow_ring buffer

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0417: Cant create debugfs

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0418: Cannot create debugfs disc trace buffer

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0419: Cannot create debugfs discovery trace

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0423: Vport Attribute Instance Error. Defaulting lpfc_attr to <value>, error value <value>, allowed range is [min, max]

DESCRIPTION: A VPort attribute was set out of range. The driver reset the parameter to its default.

DATA: None

ACTION: Set the module parameter between the minimum and maximum values.

elx_mes0424: Vport Attribute Count Exceeded, Max <value>, Actual <value>

DESCRIPTION: The total number of VPort attributes set exceeded the max allowed.

DATA: None

ACTION: Reduce the number set attributes below max.

elx_mes0425: lpfc_#attr attribute cannot be set to <value>, allowed range is [min, max]

DESCRIPTION: Driver attribute lpfc_#attr was defined with an out-of-range value.

DATA: None

ACTION: Set the parameter between the minimum and maximum value.

elx_mes0426: lpfc_enable_auth attribute cannot be set to <value>, allowed range is [<min>, <max>]

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0427: Cannot re-enable interrupt after slot reset.

DESCRIPTION: The driver was not able to enable the interrupt after an adapter reset.

DATA: None

ACTION: Unload and reload the driver.

elx_mes0430: PM resume Failed to enable interrupt

DESCRIPTION: The driver's power management resume function could not enable the interrupt.

DATA: None

ACTION: Perform another PM suspend and resume or adapter reset.

elx_mes0431: Failed to enable interrupt.

DESCRIPTION: The driver failed to start the interrupt.

DATA: None

ACTION: Unload and reload the driver.

elx_mes0433: Wakeup on signal: rc=<rc>

DESCRIPTION: A signal other than the LPFC_DATA_READY was received on the worker thread.

DATA: None

ACTION: Unload and reload the driver.

elx_mes0434: PM resume failed to start worker thread: error=<error>.

DESCRIPTION: The driver's power management resume function could not start the worker thread.

DATA: None

ACTION: Unload and reload the driver.

elx_mes0435: Adapter failed to get Option ROM version status <rc>.

DESCRIPTION: The driver could not read the adapter's option ROM.

DATA: None

ACTION: Reset the adapter. Ensure that the adapter's firmware is current.

elx_mes0436: Adapter failed to init, timeout, status reg <status>

DESCRIPTION: The adapter failed during power-up diagnostics after it was reset.

DATA: None

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

elx_mes0437: Adapter failed to init, chipset, status reg <status>

DESCRIPTION: The adapter failed during power-up diagnostics after it was reset.

DATA: None

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

elx_mes0438: Adapter failed to init, chipset, status reg <status>

DESCRIPTION: The adapter failed during power-up diagnostics after it was reset.

DATA: None

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

elx_mes0439: Adapter failed to init, mbxCmd <mbxCommand> READ_REV, mbxStatus <mbxStatus>

DESCRIPTION: Adapter initialization failed when issuing a READ_REV mailbox command.

DATA: None

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

elx_mes0440: Adapter failed to init, READ_REV has missing revision information

DESCRIPTION: A firmware revision initialization error was detected.

DATA: None

ACTION: This error could indicate a hardware or firmware issue. Update the firmware. If the issue persists, report the error to Emulex technical support.

**elx_mes0442: Adapter failed to init, mbxCmd <mbxCommand>
CONFIG_PORT, mbxStatus <mbxStatus>**

DESCRIPTION: Adapter initialization failed when issuing a CONFIG_PORT mailbox command.

DATA: (1) hbainit

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

**elx_mes0443: Adapter failed to set maximum DMA length mbxStatus
<u.mb.mbxStatus>.**

DESCRIPTION: Cannot set the maximum DMA length to reflect cfg_pci_max_read.

DATA: None

ACTION: Set module parameter lpfc_pci_max_read to 512, 1024, 2048, or 4096.

elx_mes0445: Firmware initialization failed.

DESCRIPTION: The driver was unable to initialize the hardware.

DATA: None

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

**elx_mes0446: Adapter failed to init, mbxCmd <mbxCommand> CFG_RING,
mbxStatus <mbxStatus>, ring <num>**

DESCRIPTION: Adapter initialization failed when issuing a CFG_RING mailbox command.

DATA: None

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

**elx_mes0448: Adapter failed to init, mbxCmd <mbxCommand>
READ_SPARM, mbxStatus <mbxStatus>**

DESCRIPTION: Adapter initialization failed when issuing a READ_SPARM mailbox command.

DATA: None

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

**elx_mes0449: Phys attribute Instance Error. Defaulting to lpfc_#attr to
<value>. Allowed range is [min, max]**

DESCRIPTION: A physical device attribute has an out-of-range value. The driver is correcting it.

DATA: (1) value written, (2) minimum value, (3) maximum value

ACTION: Write the default value.

elx_mes0450: lpfc_%attr attribute cannot be set to <value>, allowed range is [%min, %max]

DESCRIPTION: Sysfs attribute value written exceeds attribute range.

DATA: (1) attribute name, (2) value written, (3) minimum value, (3) maximum value

ACTION: Write a value within the supported range.

**elx_mes0453: Adapter failed to init, mbxCmd <mbxCommand>
READ_CONFIG, mbxStatus<mbxStatus>**

DESCRIPTION: Adapter initialization failed when issuing a READ_CONFIG mailbox command.

DATA: None

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

elx_mes0456: Adapter failed to issue ASYNCEVT_ENABLE mbox status <rc>.

DESCRIPTION: The mailbox command to enable an asynchronous event notification failed.

DATA: None

ACTION: Ensure the adapter firmware is current. Reload the driver.

elx_mes0457: Adapter Hardware Error

DESCRIPTION: The driver received an interrupt indicating a possible hardware issue.

Data: (1) status, (2) status1, (3) status2

ACTION: This error could indicate a hardware or firmware issue. If the issue persists, report the error to Emulex technical support.

**elx_mes0462: Too many cmd / rsp ring entries in SLI2 SLIM Data: <values>
/home/pely/svn_linux_lpfc_upstream/branches/vmware-8.2.1-ucna/kernel
/lpfc/lpfc_sli.c:**

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0472: Unknown PCI error state: <value>

DESCRIPTION: The PCI bus has detected an error.

DATA: (1) state value

ACTION: Driver resets the adapter and attempts recovery. If the issue persists, contact Emulex technical support.

elx_mes0474: Unable to allocate memory for issuing "MBOX_CONFIG_MSI command"

DESCRIPTION: Mailbox memory pool allocation error.

DATA: None

ACTION: None required.

elx_mes0475: Not configured for supporting MSI-X cfg_use_msi: <cfg_use_msi>.

DESCRIPTION: The lpfc_use_msi module parameter should have been set to 2.

DATA: None

ACTION: Set module parameter lpfc_use_msi=2.

elx_mes0476: HBA not supporting SLI-3 or later SLI Revision: <sli_rev>.

DESCRIPTION: The adapter does not support SLI-3 or SLI-4.

DATA: None

ACTION: This adapter does not support MSI. Set lpfc_use_msi=0.

elx_mes0479: Deferred Adapter Hardware Error

DESCRIPTION: An adapter hardware error was sent to the driver.

DATA: (1) work_hs, (2) work_status[0], (3) work_status[1]

ACTION: Perform a dump using hbacmd.

elx_mes0482: Illegal interrupt mode

DESCRIPTION: Driver could not set MSI-X, MSI or INTX interrupt modes.

DATA:

ACTION: This could be a server issue. Reboot. If this issue persists, report these errors to Emulex technical support.

elx_mes0483: Invalid link-attention link speed: <value>, bf_get(lpfc_acqe_link_speed, acqe_link).

DESCRIPTION: The link speed reported in the link attention interrupt is invalid.

DATA: None

ACTION: Check the switch configuration.

elx_mes0492: Unable to allocate memory for issuing SLI_CONFIG_SPECIAL mailbox command

DESCRIPTION: A memory allocation fault occurred when issuing a mailbox.

DATA:

ACTION: This could be a transient error. If this issue persists, report these errors to Emulex technical support.

elx_mes0493: SLI_CONFIG_SPECIAL mailbox failed with status <rc>.

DESCRIPTION: Mailbox command failed.

DATA: None

ACTION: Ensure the adapter's firmware is current. Unload and reload the driver.

elx_mes0494: Unable to allocate memory for issuing "SLI_FUNCTION_RESET mailbox command"

DESCRIPTION: Mailbox memory pool allocation error.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0495: SLI_FUNCTION_RESET mailbox failed with status <shdr_status> add_status <shdr_add_status>, mbx status <rc>.

DESCRIPTION: Mailbox command failed.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0496: Failed allocate slow-path EQ

DESCRIPTION: The event queue for the slow path was not allocated.

DATA: None

ACTION: Unload and reload the driver.

elx_mes0497: Failed allocate fast-path EQ

DESCRIPTION: The event queue for the fast path was not allocated.

DATA: None

ACTION: Unload and reload the driver.

elx_mes0498: Adapter failed to init, mbxCmd <cmd> INIT_LINK, mbxStatus <status>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0499: Failed allocate fast-path FCP CQ (<fcp_cqid>).

DESCRIPTION: The completion queue event for the fast path could not be allocated.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0500: Failed allocate slow-path mailbox CQ

DESCRIPTION: Failed to allocate slow-path mailbox CQ.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0501: Failed allocate slow-path ELS CQ

DESCRIPTION: Failed to allocate slow-path ELS CQ.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0503: Failed allocate fast-path FCP

DESCRIPTION: Failed to allocate fast-path FCP.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0504: Failed allocate slow-path ELS WQ

DESCRIPTION: Failed to allocate slow-path ELS WQ.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0505: Failed allocate slow-path MQ

DESCRIPTION: Failed to allocate slow-path MQ.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0506: Failed allocate receive HRQ

DESCRIPTION: Failed to allocate receive HRQ.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0507: Failed allocate receive DRQ

DESCRIPTION: Failed to allocate receive DRQ.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0520: Slow-path EQ not allocated

DESCRIPTION: The slow-path EQ is not allocated.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0521: Failed setup of slow-path EQ rc = <value>

DESCRIPTION: The slow-path EQ setup failed with status rc.

DATA: (1) status code

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0522: Fast-path EQ <fcp_eqidx> not allocated

DESCRIPTION: The fast-path EQ is not allocated.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0523: Failed setup of fast-path EQ <fcp_eqidx>, rc = <rc>

DESCRIPTION: The fast-path EQ setup failed.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0526: Fast-path FCP CQ <fcp_cqidx> not allocated

DESCRIPTION: The fast-path FCP is not allocated.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0527: Failed setup of fast-path FCP CQ <fcp_cqidx>, rc = <rc>

DESCRIPTION: The fast-path FCP CQ setup failed.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0528: Mailbox CQ not allocated

DESCRIPTION: The mailbox CQ is not allocated.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0529: Failed setup of slow-path mailbox CQ: rc = <value>

DESCRIPTION: Driver failed to setup Completion Queue. Failure code is reported.

DATA:

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes0530: ELS CQ not allocated

DESCRIPTION: The ELS CQ is not allocated.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0531: Failed setup of slow-path ELS CQ: rc = <value>

DESCRIPTION: The ELS CQ is allocated, but failed initial setup.

DATA: (1) status

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0534: Fast-path FCP WQ <fcp_eqidx> not allocated

DESCRIPTION: The fast-path FCP WQ is not allocated.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0535: Failed setup of fast-path FCP WQ <fcp_wqidx>, rc = <rc>

DESCRIPTION: The fast-path FCP WQ setup failed.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0536: Slow-path ELS WQ not allocated

DESCRIPTION: The slow-path ELS WQ is not allocated.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0537: Failed setup of slow-path ELS WQ: rc = <value>

DESCRIPTION: Driver failed to setup Work Queue. Failure code is reported.

DATA: (1) (2) (3)

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes0538: Slow-path MQ not allocated

DESCRIPTION: The slow-path MQ is not allocated.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0539: Failed setup of slow-path MQ: rc = <value>

DESCRIPTION: The slow-path MQ is allocated, but failed initial setup.

DATA: (1) status

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0540: Receive Queue not allocated

DESCRIPTION: The Receive Queue is not allocated.

DATA: None

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0541: Failed setup of Receive Queue: rc = <value>

DESCRIPTION: The Receive Queue is allocated, but failed setup.

DATA: (1) status

ACTION: The driver fails to load. Contact Emulex technical support.

elx_mes0542: lpfc_create_static_vport failed to allocate mailbox memory

DESCRIPTION: Failed to allocate mailbox memory for VPort creation.

DATA: None

ACTION: Static VPorts does not load. Contact Emulex technical support.

elx_mes0543: lpfc_create_static_vport failed to allocate vport_info

DESCRIPTION: Failed to allocate VPort_info.

DATA: None

ACTION: Static VPorts does not load. Contact Emulex technical support.

**elx_mes0545: lpfc_create_static_vport bad information header <value>
<value>, le32_to_cpu(vport_info->signature),
le32_to_cpu(vport_info->rev) & VPORT_INFO_REV_MASK);**

DESCRIPTION: Invalid information header; the signature or revision is invalid.

DATA: None

ACTION: Static VPorts does not load. Contact Emulex technical support.

elx_mes0582: Error <rc> during sgl post operation

DESCRIPTION: The SGL post operation failed.

DATA: None

ACTION: None required.

elx_mes0602: Failed to allocate CQ_EVENT entry

DESCRIPTION: Failed to allocate a CQ_EVENT entry.

DATA: None

ACTION: None required.

elx_mes0603: Invalid work queue CQE subtype <subtype>

DESCRIPTION: Invalid work queue CQE.

DATA: None

ACTION: None required.

FCP Traffic History (0700 - 0799)

elx_mes0700: Bus Reset on target <i> failed

DESCRIPTION: The bus reset for the specified target failed.

DATA: None

ACTION: None required.

elx_mes0706: IOCB Abort failed - outstanding <value> failed <value>

DESCRIPTION: The driver did not recover all IO following a reset task management command.

DATA: (1) outstanding IO count (2) number of unrecovered IO

ACTION: Reset call fails to. ESX tries to recover.

elx_mes0713: SCSI layer issued Device Reset (<value>, <value>) reset status <value> flush status <value>

DESCRIPTION: A device reset has completed on (tgt, lun). Status values are displayed.

DATA: (1) tgt (2) lun (3) task mgmt status (4) flush status

ACTION: None required.

elx_mes0714: SCSI layer issued bus reset

DESCRIPTION: The SCSI layer is requesting the driver to abort all I/Os to all targets on this adapter.

DATA: (1) ret

ACTION: Check the state of the targets in question.

elx_mes0717: FCP command <value> residual underrun converted to error Data: <values>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0718: Unable to dma_map single request_buffer: <value>

DESCRIPTION: The driver could not map a single virtual address to a DMA address.

DATA: (1) DMA mapping error

ACTION: None. The driver fails the IO back to ESX.

elx_mes0720: FCP command <value> residual overrun error. Data: <values>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0721: Device Reset rport failure: rdata <rdata>

DESCRIPTION: The reset of the Rport failed.

DATA: None

ACTION: None required.

elx_mes0724: I/O flush failure for context <cntx> on <tgt:lun> cnt <value>

DESCRIPTION: The I/O flush to the {LUN, TARGET, or HOST} has failed.

DATA: (1) cnt of unrecovered I/O

ACTION: None required. The reset is retried.

elx_mes0727: TMF <cmd> to TGT <TGT#> LUN <LUN#> failed (<ulpStatus>, <ulpWord[4]>)

DESCRIPTION: The task management command failed.

DATA: None

ACTION: None required. The TMF command gets retried.

elx_mes0731: Invalid sense info <value> FCP command <value> failed on <value>, <value> SNS <value> <value> Data: <value> <value> <value> <value> <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes0748: Abort handler timed out waiting for abort to complete:ret <status> ID <target id> LUN <lun id> snum <serial number>

DESCRIPTION: The abort handler timed out waiting for abort to complete.

DATA: None

ACTION: None required.

elx_mes0798: Device Reset rport failure: rdata <value>

DESCRIPTION: Driver failed a device reset - no rdata buffer.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

Node Table Events (0900 - 0999)

elx_mes0915: Register VPI failed: <mbxStatus>

DESCRIPTION: Could not register the VPI.

DATA: None

ACTION: None required.

Security Events (1000 - 1099)

elx_mes1000: Authentication is enabled but authentication service is not running

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1005: AUTHENTICATION_FAILURE Nport: <port>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1006: Bad Name tag in auth message

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1007: Bad Name length in auth message

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1008: Bad Number of Protocols

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1009: Bad param type

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1010: Bad Tag 1

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1011: Auth_neg no has function chosen.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1012: Auth_negotiate Bad Tag 2

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1013: Auth_negotiate no DH_group found.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1014: dhchap challenge bad name tag.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1015: dhchap challenge bad name length.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1016: dhchap challenge Hash ID not Supported.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1017: dhchap challenge could not find DH Group.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1018: dhchap challenge No Public key for non-NULL DH Group.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1021: ERROR: attempted to queue security work, when no workqueue created.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1028: Start Authentication: No buffers

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1029: Reauthentication Failure

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1031: Start Authentication: Get config failed.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1032: Start Authentication: get config timed out.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1034: Not Expecting Challenge - Rejecting Challenge.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1035: Transport ID does not math - Rejecting Challenge.

DESCRIPTION:

DATA: None

ACTION: None required.

**elx_mes1036: Authentication transaction reject - re-auth request reason
<value> exp <value>**

DESCRIPTION:

DATA: None

ACTION: None required.

**elx_mes1037: Authentication transaction reject - restarting
authentication. reason <value> exp <value>**

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1039: Not Expecting Reply - rejecting. State <value>

DESCRIPTION:

DATA: None

ACTION: None required.

**elx_mes1040: Bad Reply trans_id - rejecting. Trans_id: <value> Expecting:
<value>**

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1043: Authentication LS-RJT

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1045: Issue AUTH_NEG failed. Status: <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1048: Issue AUTH_REJECT failed.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1049: Authentication is enabled but authentication service is not running

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1050: Authentication mode is disabled, but is required by the fabric.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1053: Start Authentication: Security service offline.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1055: Authentication parameter is disabled, but is required by the fabric.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1056: Authentication mode is disabled, but is required by the fabric.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1057: Authentication transaction reject. reason <value> exp <value>

DESCRIPTION:

DATA: None

ACTION: None required.

Miscellaneous and FCoE Events (1200 - 1299)

elx_mes1201: Failed to allocate dfc_host

DESCRIPTION: Driver failed to allocate a DFC host and bind it to the management stack.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1209: C_CT Request error Data: <value> <value>

DESCRIPTION: IOCTL CT response error - driver is failing the IOCTL request.

DATA: (1) response buffer flag (2) Data Size

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1210: Invalid cmd size: <cmd value> <cmdsiz value> <rspsz value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1211: genreq alloc failed: <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1213: FCoE cmd overflow: <off value> + <cnt value> > <cmdsiz value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1214: Can not issue FCoE cmd, SLI not active: <off value> rc = -EACCESS

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1215: Can not issue FCoE cmd: not ready or not in maint mode <off value> <rc value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1216: FCoE IOCB failed: <off value> <rc value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1223: menlo_write: couldn't alloc genreq <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1230: Could not find buffer for FCoE cmd: <off value> <indmp value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1231: bad bpl

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1235: Could not find buffer for FCoE cmd: <off value> poff: <value> cnt: <value> mlascnt: <value> addl: <value> addh: <value> mdsz: <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1238: FCoE IOCB failed: <off value> <rc value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1240: Unable to allocate command buffer memory.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1243: Menlo command error. code=<value>.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1244: Unable to allocate response buffer memory.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1246: FCoE chip is running golden firmware. Update FCoE chip firmware immediately

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1247: FCoE chip is running diagnostic firmware. Operational use suspended.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1248: FCoE chip is running unknown firmware.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1249: Invalid FRU data found on adapter. Return adapter to Emulex for repair

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1250: Menlo command error. code=<value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1251: Menlo command error. code=<value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1252: Menlo command error. code=<value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1262: Failed to allocate dfc_host

DESCRIPTION: Could not allocate memory the dfc_host_struct.

DATA: None

ACTION: None required.

Link Events (1300 - 1399)

elx_mes1300: Link Down Event in loop back mode

DESCRIPTION: Driver received a link down event while in loopback mode - unexpected event.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1302: Invalid speed for this board: Reset link speed to auto: <value>

DESCRIPTION: Driver detected an invalid link speed. Resetting Link to Auto mode.

DATA: (1) Invalid speed detected

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1303: Link Up Event <eventTag> received Data: <value> <value> <value> <value> <value>

DESCRIPTION: A link up event was received. It is also possible for multiple link events to be received together.

DATA: (1) fc_eventTag, (2) granted_AL_PA, (3) UlnkSpeed, (4) alpa_map[0]

ACTION: If numerous link events are occurring, check the physical connections to the Fibre Channel network.

elx_mes1305: Link Down Event <eventTag> received Data: <value> <value> <value>

DESCRIPTION: A link down event was received.

DATA: (1) fc_eventTag, (2) hba_state, (3) fc_flag

ACTION: If numerous link events are occurring, check the physical connections to the Fibre Channel network.

elx_mes1306: Link Up Event in loop back mode <eventTag> received Data: <value> <value> <value> <value>

DESCRIPTION: Link up notification; configured for loopback.

DATA: (1) fc_eventTag, (2) granted_AL_PA, (3) UlnkSpeed, (4) alpa_map[0]

ACTION: None required.

elx_mes1308: Menlo Maint Mode Link up Event <value> rcvd Data: <value> <value> <value>

DESCRIPTION: Link up notification in Menlo maintenance mode.

DATA: (1) fc_eventTag, (2) port_state, (3) VPort fc_flag

ACTION: None required.

elx_mes1309: Link Down Event <value> received Data <value> <value> <value>

DESCRIPTION: The port generated a link down event to the host.

DATA: (1) fc_eventTag (2)port_state (3) VPort fc_flag

ACTION: None required.

elx_mes1310: Link Up Event npiv not supported in loop topology

DESCRIPTION: Loop topologies are not supported when NPIV is enabled.

DATA: None

ACTION: Put link into Fabric mode.

Port Setup Events (1400 - 1499)

elx_mes1400: Failed to initialize sgl list.

DESCRIPTION: Failed to initialize SGL list during initialization.

DATA: None

ACTION: Reboot the server. If the issue persist, contact Emulex technical support.

elx_mes1401: Failed to enable pci device.

DESCRIPTION: Failed to enable PCI device during initialization.

DATA: None

ACTION: Reboot the server. If the issue persist, contact Emulex technical support.

elx_mes1402: Failed to set up pci memory space.

DESCRIPTION: PCI initialization failed.

DATA: None

ACTION: Reboot the server. If the issue persist, contact Emulex technical support.

elx_mes1403: Failed to set up driver resource.

DESCRIPTION: Driver resource initialization failed.

DATA: None

ACTION: None required.

elx_mes1404: Failed to set up driver resource.

DESCRIPTION: Driver resource initialization failed.

DATA: None

ACTION: None required.

elx_mes1405: Failed to initialize iocb list.

DESCRIPTION: IOCB initialization failed.

DATA: None

ACTION: None required.

elx_mes1406: Failed to set up driver resource.

DESCRIPTION: Initialization failed to set up driver resource.

DATA: None

ACTION: None required.

elx_mes1407: Failed to create scsi host.

DESCRIPTION: Initialization failed to create SCSI host.

DATA: None

ACTION: None required.

elx_mes1408: Failure HBA POST Status: sta_reg=<status reg>, perr=<port error>, sfi=<sfi reg>, nip=<nip reg>, ipc=<ipc reg>, xrom=<xrom>, dl=<dl reg>, pstatus=<port status>

DESCRIPTION: The adapter's power on self test has failed.

DATA: None

ACTION: Make sure the adapter firmware is up to date. Contact Emulex technical support if the issue persists after system reboot.

elx_mes1410: Failed to set up pci memory space.

DESCRIPTION: Initialization failed to set up PCI memory space.

DATA: None

ACTION: None required.

elx_mes1411: Failed to set up driver resource.

DESCRIPTION: Initialization failed to set up driver resource.

DATA: None

ACTION: None required.

elx_mes1412: Failed to set up driver resource.

DESCRIPTION: Initialization failed to set up driver resource.

DATA: None

ACTION: None required.

elx_mes1413: Failed to initialize iocb list.

DESCRIPTION: Initialization failed to initialize the IOCB list.

DATA: None

ACTION: None required.

elx_mes1414: Failed to set up driver resource.

DESCRIPTION: Initialization failed to set up driver resource.

DATA: None

ACTION: None required.

elx_mes1415: Failed to create scsi host.

DESCRIPTION: Initialization failed to create SCSI host.

DATA: None

ACTION: None required.

elx_mes1416: Failed to allocate sysfs attr

DESCRIPTION: Initialization failed to sysfs attribute.

DATA: None

ACTION: None required.

elx_mes1418: Invalid HBA PCI-device group: <dev_grp>

DESCRIPTION: Invalid adapter PCI-device group detected.

DATA: None

ACTION: None required.

elx_mes1419: Invalid HBA PCI-device group: <dev_grp>

DESCRIPTION: Invalid adapter PCI-device group detected.

DATA: None

ACTION: None required.

elx_mes1420: Invalid HBA PCI-device group: <dev_grp>

DESCRIPTION: Invalid adapter PCI-device group detected.

DATA: None

ACTION: None required.

elx_mes1421: Failed to set up hba

DESCRIPTION: Initialization failed to set up the adapter.

DATA: None

ACTION: None required.

elx_mes1422: HBA Unrecoverable error: uerr_lo_reg=<ue lo>, uerr_hi_reg=<ue hi>, online0_reg=<Online0>, online1_reg=<Online1>

DESCRIPTION: The adapter has notified the driver that it has encountered an unrecoverable error.

DATA: None

ACTION: A dump from the OneCommand Manager application should be taken. Then, the driver should be unloaded and reloaded.

elx_mes1423: HBA Unrecoverable error: uerr_lo_reg=<ue lo>, uerr_hi_reg=<ue hi>, online0_reg=<Online0>, online1_reg=<Online1>.

DESCRIPTION: The adapter has notified the driver that it has encountered an unrecoverable error.

DATA: None

ACTION: A dump from the OneCommand Manager application should be taken. Then, unload and reload the driver.

elx_mes1424: Invalid PCI device group: <pci_dev_grp>

DESCRIPTION: Invalid adapter PCI-device group detected.

DATA: None

ACTION: None required.

elx_mes1425: Invalid PCI device group: <pci_dev_grp>

DESCRIPTION: Invalid adapter PCI-device group detected.

DATA: None

ACTION: None required.

elx_mes1426: Invalid PCI device group: <pci_dev_grp>

DESCRIPTION: Invalid adapter PCI-device group detected.

DATA: None

ACTION: None required.

elx_mes1427: Invalid PCI device group: <pci_dev_grp>

DESCRIPTION: Invalid adapter PCI-device group detected.

DATA: None

ACTION: None required.

elx_mes1428: Invalid PCI device group: <pci_dev_grp>

DESCRIPTION: Invalid adapter PCI-device group detected.

DATA: None

ACTION: None required.

elx_mes1429: Invalid PCI device group: <pci_dev_grp>

DESCRIPTION: Invalid adapter PCI-device group detected.

DATA: None

ACTION: None required.

elx_mes1430: Failed to initialize sgl list.

DESCRIPTION: Failed to initialize SGL list.

DATA: None

ACTION: None required.

elx_mes1431: Invalid HBA PCI-device group: <dev_grp>

DESCRIPTION: Invalid adapter PCI-device group detected.

DATA: None

ACTION: None required.

elx_mes1432: Failed to initialize rpi headers.

DESCRIPTION: RPI headers required by the firmware failed to initialize.

DATA: None

ACTION: None required.

elx_mes1476: Failed to allocate sysfs attr.

DESCRIPTION: Failed to allocate sysfs attribute.

DATA: None

ACTION: None required.

elx_mes1477: Failed to set up hba

DESCRIPTION: Failed to set up adapter.

DATA: None

ACTION: None required.

IOCTL Events (1600 - 1699)

None.

VPort Events (1800 - 1832)

elx_mes1800: Could not issue unreg_vpi

DESCRIPTION: Driver attempt to unregister VPI failed.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1801: Create vport work array FAILED: cannot do scsi_host_get

DESCRIPTION: Driver failed to create working list of VPorts.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1802: HBQ <index>: local_hbqGetIdx <index> is > than hbqp->entry_count <count>

DESCRIPTION: An error occurred when processing queue related to an adapter in a particular slot.

DATA: (1) hbqno, (2) local_hbqGetIdx, (3) entry_count

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1803: Bad hbq tag. Data: <tag> <count>

DESCRIPTION: An error occurred when processing queue related tags for an adapter in a particular slot.

DATA: (1) tag, (2) buffer_count

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1804: Invalid asynchronous event code: <evt code>

DESCRIPTION: The asynchronous event code that the firmware passed to the driver is invalid.

DATA: None

ACTION: None required.

elx_mes1805: Adapter failed to init.Data: <command> <status> <queue num>

DESCRIPTION: An error occurred when processing queue related tags for an adapter in a particular slot.

DATA: (1) mbxCommand, (2) mbxStatus, (3) hbaqno

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1806: Mbox <command> failed. No vport.

DESCRIPTION: A mailbox command could not be communicated because there was no VPort associated with the mailbox command.

DATA: (1) mbxCommand

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1807: IOCB <value> failed. No vport

DESCRIPTION: An IOCB command could not be communicated because there was no VPort associated with the mailbox command.

DATA: (1) ulpCommand

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1808: Create VPORT failed: NPIV is not enabled: SLI mode <mode>

DESCRIPTION: The driver failed to create a port because the adapter was in wrong mode or was not capable of NPIV.

DATA: (1) sli_rev

ACTION: Load the driver with NPIV enabled on an adapter that supports SLI-3.

elx_mes1809: Create VPORT failed: Max VPORTs (<vpi>) exceeded.

DESCRIPTION: The driver failed to create a port because the maximum number of port supported by the driver is exceeded.

DATA: (1) max_vpi

ACTION: No Action. The driver cannot create any more VPorts.

elx_mes1810: Create VPORT failed: Cannot get instance number.

DESCRIPTION: The driver failed to allocate resources for an adapter and could not assign an instance number.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1811: Create VPORT failed: vpi x<vpi>

DESCRIPTION: The driver failed to create a port and had to eliminate all its resources.

DATA: (1) vpi

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1812: vport_delete failed: Cannot delete physical host

DESCRIPTION: An attempt to delete a port failed because it was to delete a physical port and not a virtual port. Only VPorts on physical ports can be deleted on an NPIV system.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1813: Create VPORT failed. Cannot get sparam.

DESCRIPTION: The port could not be created because it could not be initialized possibly due to unavailable resources.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1814: Mbox <u.mb.mbxCommand> failed, no vport

DESCRIPTION: The VPort field of this mailbox command was not completed.

DATA: None

ACTION: None required.

elx_mes1815 Could not issue unreg_did (default rpis)

DESCRIPTION: Attempt to unregister RPI failed.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1818: VPort failed init, mbxCmd <mailbox command> READ_SPARM mbxStatus <mailbox status>, rc = <status>

DESCRIPTION: A pending mailbox command issued to initialize port failed.

DATA: (1) mbxCommand, (2) mbxStatus, (3) rc

ACTION: Software driver error. If this issue persists, report these issues to Emulex technical support.

elx_mes1820: Unable to select SLI-3. Not supported by adapter.

DESCRIPTION: The adapter is not capable of operating in a given mode.

DATA: None

ACTION: This is an informational message. SLI-3 mode is only available on some adapters. Do not attempt to force an adapter to run in SLI mode 3 if that adapter does not support SLI-3 mode. Adapters that do not support SLI-3 are configured to run in SLI-2 mode. Nevertheless, it is recommended to use the auto setting (0).

elx_mes1821: Create VPORT failed. Invalid WWN format

DESCRIPTION: The port could not be created due to an invalid WWNN or WWPNN format.

DATA: None

ACTION: Provide a valid WWN when creating VPorts.

elx_mes1822: Invalid <name>: <xx: xx: xx: xx: xx: xx: xx: xx>

DESCRIPTION: An invalid WWN was used when creating a VPort.

DATA: (1) type_name, (2) wwn[1], (3) wwn[3], (3) wwn[5], (4) wwn[7]

ACTION: When creating a VPort you must furnish a valid WWN.

elx_mes1823: Create VPORT failed. Duplicate WWN on HBA.

DESCRIPTION: The port could not be created because it would duplicate an existing WWNN adapter address. The resources for the port had to be discarded.

DATA: None

ACTION: Provide a WWN that is unique.

elx_mes1825: Vport Created.

DESCRIPTION: This message is displayed to indicate that a port was created in the system. It is displayed at this level to ensure it is always appears at all log levels.

DATA: None

ACTION: No action, informational.

elx_mes1826: Vport Disabled.

DESCRIPTION: The port had to be disabled in the system.

DATA: None

ACTION: No action, informational.

elx_mes1827: Vport Enabled.

DESCRIPTION: The port had to be enabled after possible recovery from some errors.

DATA: None

ACTION: No action, informational.

elx_mes1828: Vport Deleted.

DESCRIPTION: A VPort was deleted.

DATA: None

ACTION: No action, informational.

elx_mes1830: Signal aborted mbxCmd <command>

DESCRIPTION: A pending mailbox command was aborted because the thread received a signal.

DATA: None

ACTION: The command is retried.

elx_mes1831: Create VPORT Interrupted.

DESCRIPTION: The port creation process was unexpectedly interrupted at a critical time and the operation was unsuccessful.

DATA: None

ACTION: The process was interrupted while creating a VPort. Retry the command.

elx_mes1832: No pending MBOX command to handle.

DESCRIPTION:

DATA: None

ACTION: None required.

ELS Events (1833 - 2800)**elx_mes1835: Vport discovery quiesce failed: state <port_state> fc_flags <fc_flag> wait msecs <jiffies_to_msecs(jiffies - start_time)>**

DESCRIPTION: Could not pause discovery on this VPort.

DATA: None

ACTION: None required.

elx_mes1836: Could not issue unreg_login(all_rpis) status <rc>

DESCRIPTION: The unreg_login cannot be issued.

DATA: None

ACTION: None required.

elx_mes1837: vport_delete failed: Cannot delete static vport.

DESCRIPTION: Static VPorts cannot be deleted.

DATA: None

ACTION: None required.

elx_mes1838: Failed to INIT_VPI on vpi <vpi> status <rc>

DESCRIPTION: Failed to INIT_VPI.

DATA: None

ACTION: None required.

elx_mes1839: Create VPORT failed. vname allocation failed.

DESCRIPTION: Driver failed to allocate buffer for Virtual Machine name.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1840: Delete VPORT can not proceed at this time due to SCSI layer busy.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes1920: Exec format error, Dropping Link state event

DESCRIPTION: No dfchba instance available for Link State event - dropping.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1923: Exec format error, Dropping rscn event

DESCRIPTION: No dfchba instance available for RSCN event - dropping.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1926: Exec format error

DESCRIPTION: No dfchba instance available for IOCTL loopback test - dropping.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1927: Exec format error, Dropping temp event

DESCRIPTION: No dfchba instance available for Temperature event - dropping.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1928: Exec format error, Dropping dump event

DESCRIPTION: No dfchba instance available for Dump event - dropping.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1929: Exec format error

DESCRIPTION: No dfchba instance available for IOCTL loopback XRI read - dropping.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1934: ENOMEM DMA coherent resource unavailable

DESCRIPTION: Driver failed to allocate a DMA buffer for an IOCTL request.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1935: Loopback test did receive any data

DESCRIPTION: Driver ran loopback test, but did not receive a response.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1936: ENOMEM Kernel resource unavailable

DESCRIPTION: Driver failed to allocate DMA buffer during loopback test.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1944: ENOMEM kernel memory resource unavailable

DESCRIPTION: Driver failed to allocate kernel buffer for timed out I/O request.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1949: ENOEXEC NULL parameter passed to function

DESCRIPTION: Driver tried to post receive buffer, but no receive buffers available.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1950: ENOMEM IOCB resource not available

DESCRIPTION: Driver could not allocate IOCBs needed to post loopback receive buffers.

DATA: (1) (2) (3)

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1951: ENOMEM MBUF resource not available

DESCRIPTION: Driver failed to get memory buffer needed for loopback test.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1952: ENOMEM DMA resource not available

DESCRIPTION: Driver failed to get DMA buffers needed for loopback test

DATA: (1) (2) (3)

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes1957: EPERM Illegal BDE count [<value>]

DESCRIPTION: Driver received too many receive buffers for loopback operation.

DATA: (1) receive buffer count

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2000: Failed to allocate mbox for READ_FCF cmd

DESCRIPTION: Failed to allocate mailbox for READ_FCF command.

DATA: None

ACTION: None required.

elx_mes2001: Unable to allocate memory for issuing SLI_CONFIG_SPECIAL mailbox command

DESCRIPTION: Unable to allocate memory for issuing the SLI_CONFIG_SPECIAL mailbox command.

DATA: None

ACTION: None required.

elx_mes2002: Error Could not grow rpi count

DESCRIPTION: An error occurred because the RPI count could not be increased.

DATA: None

ACTION: None required.

elx_mes2004 Failed to allocate XRI. last XRITAG is <value> Max is <value>, Used XRI is <value>.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2007: Only Limited Edition cmd Format supported <iocb.ulpCommand>

DESCRIPTION: SLI-4 only supports the Limited Edition command format.

DATA: None

ACTION: None required.

elx_mes2008: Error <rc> posting all rpi headers

DESCRIPTION: The RPI headers could not be posted to the firmware.

DATA: None

ACTION: None required.

elx_mes2009: Failed to allocate mbox for ADD_FCF cmd

DESCRIPTION: Failed to allocate mailbox for ADD_FCF command.

DATA: None

ACTION: None required.

elx_mes2010: Resume RPI Mailbox failed status <status>, mbxStatus <mbx status>.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2011: Unable to allocate memory for issuing SLI_CONFIG_SPECIAL mailbox command

DESCRIPTION: Unable to allocate memory for issuing SLI_CONFIG_SPECIAL mailbox command.

DATA: None

ACTION: None required.

elx_mes2012: Mailbox failed, mbxCmd <mbx_cmd> READ_CONFIG, mbxStatus <mbx status>.

DESCRIPTION: The READ_CONFIG mailbox command failed.

DATA: None

ACTION: None required.

elx_mes2013: Could not manually add FCF record 0, status <rc>

DESCRIPTION: Could not add FCF record to the FCF list.

DATA: None

ACTION: None required.

elx_mes2014: Invalid command <iocb.ulpCommand>

DESCRIPTION: The IOCB command is invalid.

DATA: None

ACTION: None required.

elx_mes2015: Invalid CT command <iocb.ulpCommand>

DESCRIPTION: Invalid Command-Type in the IOCB is not supported.

DATA: None

ACTION: None required.

elx_mes2017: REG_FCFI mbxStatus error <mbx status> HBA state <port_state>.

DESCRIPTION: The REG_FCFI mailbox command has failed.

DATA: None

ACTION: None required.

elx_mes2018: REG_VFI mbxStatus error <mbx status> HBA state <port_state>.

DESCRIPTION: The REG_VFI mailbox command has failed.

DATA: None

ACTION: None required.

elx_mes2022: INIT VPI Mailbox failed status <status>, mbxStatus <mbxStatus>

DESCRIPTION: The INIT VPI mailbox command has failed.

DATA: None

ACTION: None required.

elx_mes2401: Failed to allocate memory for ELS XRI management array of size <els_xri_cnt>.

DESCRIPTION: Initialization failed to allocate memory for the ELS XRI management array.

DATA: None

ACTION: None required.

elx_mes2500: EQ_CREATE mailbox failed with status <shdr_status> add_status <shdr_add_status>, mbx status <rc>

DESCRIPTION: The mailbox command sent to create the event queue has failed.

DATA: None

ACTION: None required.

elx_mes2501: CQ_CREATE mailbox failed with status <shdr_status> add_status <shdr_add_status>, mbx status <rc>

DESCRIPTION: The mailbox command sent to create the completion queue has failed.

DATA: None

ACTION: None required.

elx_mes2502: MQ_CREATE mailbox failed with status <shdr_status> add_status <shdr_add_status>, mbx status <rc>

DESCRIPTION: The mailbox command sent to create the mailbox queue has failed.

DATA: None

ACTION: None required.

elx_mes2503: WQ_CREATE mailbox failed with status <shdr_status> add_status <shdr_add_status>, mbx status <rc>

DESCRIPTION: The mailbox command sent to create the work queue has failed.

DATA: None

ACTION: None required.

elx_mes2504: RQ_CREATE mailbox failed with status <shdr_status> add_status <shdr_add_status>, mbx status <rc>

DESCRIPTION: The mailbox command sent to create the receive queue has failed.

DATA: None

ACTION: None required.

**elx_mes2505: EQ_DESTROY mailbox failed with status <shdr_status>
add_status <shdr_add_status>, mbx status <rc>**

DESCRIPTION: The mailbox command sent to delete the event queue has failed.

DATA: None

ACTION: None required.

**elx_mes2506: CQ_DESTROY mailbox failed with status <shdr_status>
add_status <shdr_add_status>, mbx status <rc>**

DESCRIPTION: The mailbox command sent to delete the completion queue has failed.

DATA: None

ACTION: None required.

**elx_mes2507: MQ_DESTROY mailbox failed with status <shdr_status>
add_status <shdr_add_status>, mbx status <rc>**

DESCRIPTION: The mailbox command sent to delete the mailbox queue has failed.

DATA: None

ACTION: None required.

**elx_mes2508: WQ_DESTROY mailbox failed with status <shdr_status>
add_status <shdr_add_status>, mbx status <rc>**

DESCRIPTION: The mailbox command sent to delete the work queue has failed.

DATA: None

ACTION: None required.

**elx_mes2509: RQ_DESTROY mailbox failed with status <shdr_status>
add_status <shdr_add_status>, mbx status <rc>**

DESCRIPTION: The mailbox command sent to delete the receive queue has failed.

DATA: None

ACTION: None required.

**elx_mes2510: RQ_DESTROY mailbox failed with status <shdr_status>
add_status <shdr_add_status>, mbx status <rc>**

DESCRIPTION: The mailbox command sent to delete the receive queue has failed.

DATA: None

ACTION: None required.

**elx_mes2511: POST_SGL mailbox failed with status <shdr_status>
add_status <shdr_add_status>, mbx status <rc>**

DESCRIPTION: The mailbox command sent to post the SGL pages to the firmware has failed.

DATA: None

ACTION: None required.

**elx_mes2513: POST_SGL_BLOCK mailbox command failed status
<shdr_status> add_status <shdr_add_status> mbx status <rc>**

DESCRIPTION: The mailbox command sent to post the SGL pages to the firmware has failed.

DATA: None

ACTION: None required.

**elx_mes2514: POST_RPI_HDR mailbox failed with status <shdr_status>
add_status <shdr_add_status>, mbx status <rc>**

DESCRIPTION: The mailbox command sent to post the RPUI header pages to the firmware has failed.

DATA: None

ACTION: None required.

elx_mes2515: ADD_FCF_RECORD mailbox failed with status <rc>

DESCRIPTION: The mailbox command to add the FCF record has failed.

DATA: None

ACTION: None required.

**elx_mes2519: Unable to allocate memory for issuing NOP mailbox
command**

DESCRIPTION: Memory allocation for this mailbox command has failed.

DATA: None

ACTION: None required.

**elx_mes2521: READ_FCF_RECORD mailbox failed with status <shdr_status>
add_status <shdr_add_status>, mbx**

DESCRIPTION: The READ_FCF_RECORD mailbox command has failed.

DATA: None

ACTION: None required.

elx_mes2522: Synchronous READ_FCF_RECORD mailbox failed with status <value> add_status <value>

DESCRIPTION: Driver failed to read the active FCF Record on an FCoE link - FCF may not be available.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2523: Allocated DMA memory size (<alloc_len>) is less than the requested DMA memory size (<req_len>)

DESCRIPTION: The ADD_FCF_RECORD mailbox command failed to retrieve the length required from the firmware.

DATA: None

ACTION: None required.

elx_mes2524: Failed to get the non-embedded SGE virtual address

DESCRIPTION: The READ_FCF_RECORD mailbox command could not retrieve the Scatter Gather Entry (SGE) that was requested.

DATA: None

ACTION: None required.

elx_mes2527: Failed to allocate non-embedded SGE array.

DESCRIPTION: Failed to allocate the non-embedded SGE array.

DATA: None

ACTION: None required.

elx_mes2528: Mailbox command <vpi> cannot issue

DESCRIPTION: The mailbox command could not be issued because the mailbox interrupt is disabled.

DATA: (1) mbxCommand, (2) sli_flag, (3) flag

ACTION: None required.

elx_mes2529: Mailbox command <vpi> cannot issue

DESCRIPTION:

DATA: (1) mbxCommand, (2) sli_flag, (3) flag

ACTION: None required.

elx_mes2530: Mailbox command <vpi> cannot issue

DESCRIPTION: The SLI layer in the driver is inactive.

DATA: (1) mb.mbxCommand, (2) sli_flag, (3) flag

ACTION: None required.

elx_mes2531: Mailbox command <cpi> cannot issue

DESCRIPTION:

DATA: (1) mb.mbxCommand, (2) sli_flag, (3) flag

ACTION: None required.

elx_mes2532: Mailbox command <vpi> (<mbxCommand>) cannot issue

DESCRIPTION: The mailbox bootstrap code detected that the SLI layer is active.

DATA: (1) sli4_mbox_opcode, (2) sli_flag, (3) MBX_POLL

ACTION: None required.

elx_mes2533: Mailbox command <vpi> (<mbxCommand>) cannot issue

DESCRIPTION:

DATA: (1) sli4_mbox_opcode, (2) sli_flag, (3) MBX_NOWAIT

ACTION: None required.

elx_mes2535: Unsupported RQ count. (<entry_count>).

DESCRIPTION: The receive queue ring can only be 512, 1024, 2048, or 4096.

DATA: None

ACTION: None required.

elx_mes2536: Unsupported RQ count. (<entry_count>).

DESCRIPTION: The receive queue ring can only be 512, 1024, 2048, or 4096.

DATA: None

ACTION: None required.

elx_mes2537: Receive Frame Truncated!

DESCRIPTION: The receive unsolicited handler detected a truncated frame.

DATA: None

ACTION: None required.

elx_mes2540: Ring <value> handler: unexpected Rctl <value> Type <value> received

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2543: Mailbox command <vpi> (<mbxCommand>) cannot issue

DESCRIPTION: The mailbox command does not have all of the fields set correctly.

DATA: (1) sli4_mbx_opcode, (2) sli_flag, (3) flag

ACTION: None required.

elx_mes2544: Mailbox command <vpi> (<mbxCommand>) cannot issue

DESCRIPTION: The adapter cannot be accessed on the PCI bus.

DATA: (1) sli4_mbx_opcode, (2) sli_flag, (3) flag

ACTION: None required.

elx_mes2546: New FCF found index <index> tag <event_tag>

DESCRIPTION: A new FCF has been found.

DATA: None

ACTION: None required.

elx_mes2547: Read FCF record failed

DESCRIPTION: Could not read the FCF record from the firmware.

DATA: None

ACTION: None required.

elx_mes2548: FCF Table full count <count> tag <event_tag>

DESCRIPTION: The FCF table is full.

DATA: None

ACTION: None required.

elx_mes2549: FCF disconnected from network index <index> tag <event_tag>.

DESCRIPTION: The FCF has disconnected from the network.

DATA: None

ACTION: None required.

elx_mes2550: UNREG_FCFI mbxStatus error <u.mb.mbxStatus> HBA state <port_state>.

DESCRIPTION: The unregistered FCFI has failed.

DATA: None

ACTION: None required.

elx_mes2551: UNREG_FCFI mbox allocation failed HBA state <port_state>.

DESCRIPTION: The allocation for the UNREG_FCFI mailbox command has failed.

DATA: None

ACTION: None required.

elx_mes2552: UNREG_FCFI issue mbox failed rc <rc> HBA state <port_state>.

DESCRIPTION: The unregister FCFI mailbox command has failed.

DATA: None

ACTION: None required.

elx_mes2553: lpfc_unregister_unused_fcf failed to read FCF record HBA state.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2554: Could not allocate memory for fcf record

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2555: UNREG_VFI mbxStatus error <u.mb.mbxStatus> HBA state <port_state>

DESCRIPTION: The unregister VFI mailbox command has failed.

DATA: None

ACTION: None required.

elx_mes2556: UNREG_VFI mbox allocation failed HBA state <port_state>

DESCRIPTION: Could not allocate memory for UNREG_VFI mailbox command.

DATA: None

ACTION: None required.

elx_mes2557: UNREG_VFI issue mbox failed rc <rc> HBA state <port_state>

DESCRIPTION: Could not issue the UNREG_VFI mailbox command.

DATA: None

ACTION: None required.

**elx_mes2558: ADD_FCF_RECORD mailbox failed with status<shdr_status>
add_status <shdr_add_status>**

DESCRIPTION: The ADD_FCF_RECORD mailbox command has failed.

DATA: None

ACTION: None required.

elx_mes2560: Failed to allocate mbox cmd memory

DESCRIPTION: Failed to allocate mailbox command memory.

DATA: None

ACTION: None required.

**elx_mes2561: Allocated DMA memory size (<alloclen>) is less than the
requested DMA memory size (<reqlen>)**

DESCRIPTION: Could not get the memory required for the number of XRIs that are attempting to be posted.

DATA: None

ACTION: None required.

**elx_mes2562: No room left for SCSI XRI allocation:
max_xri=<sl4_hba.max_cfg_param.max_xri>, els_xri=<els_xri_cnt>**

DESCRIPTION: The number of allocated XRIs has reached the max_xri value.

DATA: None

ACTION: None required.

**elx_mes2563: Failed to allocate memory for SCSI XRI management array of
size <sl4_hba.scsi_xri_max>.**

DESCRIPTION: Initialization could not allocate memory to hold the XRIs.

DATA: None

ACTION: None required.

**elx_mes2564: POST_SGL_BLOCK mailbox command failed status
<shdr_status> add_status <shdr_add_status> mbx status <rc>**

DESCRIPTION: The list of XRI SGEs failed to be registered with the firmware.

DATA: None

ACTION: None required.

elx_mes2566: Failed to allocate connection table entry

DESCRIPTION: Failed to allocate connection table entry.

DATA: None

ACTION: None required.

elx_mes2567: Config region 23 has bad signature

DESCRIPTION: Configuration region 23 has an invalid signature.

DATA: None

ACTION: None required.

elx_mes2568: Config region 23 has bad version

DESCRIPTION: Configuration region 23 has an invalid version.

DATA: None

ACTION: None required.

elx_mes2572: Failed allocate memory for fast-path per-EQ handle array

DESCRIPTION: Failed to allocate memory for the fast-path per-EQ handle array.

DATA: None

ACTION: None required.

elx_mes2573: Failed allocate memory for msi-x interrupt vector entries

DESCRIPTION: Failed to allocate memory for MSI-X interrupt vector entries.

DATA: None

ACTION: None required.

elx_mes2574: Not enough EQs (<sl4_hba.max_cfg_param.max_eq>) from the pci function for supporting FCP EQs (<cfg_fcp_eq_count>)

DESCRIPTION: Failed to create the minimum fast-path event queues.

DATA: None

ACTION: None required.

elx_mes2576: Failed allocate memory for fast-path EQ record array

DESCRIPTION: Failed to allocate memory for the fast-path EQ record array.

DATA: None

ACTION: None required.

elx_mes2577: Failed allocate memory for fast-path CQ record array

DESCRIPTION: Failed to allocate memory for the fast-path CQ record array.

DATA: None

ACTION: None required.

elx_mes2578: Failed allocate memory for fast-path WQ record array

DESCRIPTION: Failed to allocate memory for the fast-path WQ record array.

DATA: None

ACTION: None required.

elx_mes2581: Not enough WQs (<sli4_hba.max_cfg_param.max_wq>) from the pci function for supporting FCP WQs (<cfg_fcp_wq_count>)

DESCRIPTION: The driver was not configured with the minimum number of fast-path work queues.

DATA: None

ACTION: None required.

elx_mes2597: Mailbox command <vpi> (<mbxCommand>) cannot issue

DESCRIPTION: Synchronous mailbox command failed after blocking asynchronous mailbox commands.

DATA: (1) sli4_mbx_opcode, (2) sli_flag, (3) flag

ACTION: None required.

elx_mes2598: Adapter Link is disabled.

DESCRIPTION: The adapter link is disabled.

DATA: None

ACTION: None required.

elx_mes2599: Adapter failed to issue DOWN_LINK mbox command rc <rc>.

DESCRIPTION: The adapter failed to issue a DOWN_LINK mailbox command.

DATA: None

ACTION: None required.

elx_mes2600: lpfc_sli_read_serdes_param failed to allocate mailbox memory

DESCRIPTION: Failed to allocate mailbox memory.

DATA: None

ACTION: None required.

elx_mes2605: lpfc_dump_static_vport: memory allocation failed

DESCRIPTION: Memory allocation failed.

DATA: None

ACTION: None required.

elx_mes2606: No NPIV Fabric support

DESCRIPTION: No NPIV Fabric support.

DATA: None

ACTION: None required.

elx_mes2607: Failed to allocate init_vpi mailbox

DESCRIPTION: Failed to allocate init_vpi mailbox.

DATA: None

ACTION: None required.

elx_mes2608: Failed to issue init_vpi mailbox

DESCRIPTION: Failed to issue init_vpi mailbox.

DATA: None

ACTION: None required.

elx_mes2609: Init VPI mailbox failed <u.mb.mbxStatus>

DESCRIPTION: Initialization of VPI mailbox has failed.

DATA: None

ACTION: None required.

elx_mes2610: HBA FCF index goes beyond driver's resource dimension.

DESCRIPTION: While updating the round robin FCF bmask, the FCF index goes beyond the driver's internal resource dimension.

DATA: None

ACTION: None required.

elx_mes2619: Config region 23 has bad signature

DESCRIPTION: Configuration region 23 has an invalid signature.

DATA: None

ACTION: None required.

elx_mes2620: Config region 23 has bad version

DESCRIPTION: Configuration region 23 has an invalid version.

DATA: None

ACTION: None required.

elx_mes2705: Failed to enable interrupt

DESCRIPTION: Driver to enable any interrupt mode - fatal - driver unloads.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2707: Ring <Ring#> handler: Failed to allocate iocb Rctl <fh_rctl> Type <fh_type> received

DESCRIPTION: Could not allocate an IOCB with which to associate this received frame.

DATA: None

ACTION: None required.

elx_mes2710: PCI channel disable preparing for reset

DESCRIPTION: Driver is resetting the PCI slot for this port - starting preparations.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2711: PCI channel permanent disable for failure

DESCRIPTION: Driver has detected a fatal port error - disabling PCI channel.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2712: lpfc_aer support attribute value <value> out of range, allowed values are 0 | 1, setting it to default value of 1

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2718: Clear Virtual Link Received for VPI <index> tag <event_tag>

DESCRIPTION: A Clear virtual link was received from the Fabric for this VPI.

DATA: None

ACTION: None required.

elx_mes2719: Invalid response length: tgt <TGT_ID> lun <LUN> cmdnd <CMD> rsplen <RSPLEN>

DESCRIPTION: The response length for this FCP command is not supported.

DATA: None

ACTION: None required.

elx_mes2723 PCI channel I/O abort preparing for recovery

DESCRIPTION: Driver is preparing port PCI channel for reset/recovery after IO error.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2726: READ_FCF_RECORD Indicates empty FCF table

DESCRIPTION: The driver requested the firmware provide a list of FCF entries to connect to and the firmware responded that the FCF table is empty.

DATA: None

ACTION: None required.

elx_mes2729: Unable to dma_map_single request_buffer: <value>

DESCRIPTION: Driver unable to map SCSI command scatter-gather buffer.

DATA: (1) dma mapping error.

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2731: Cannot find fabric controller node.

DESCRIPTION: Driver not able to find Fabric controller node in its data base.

DATA: None

ACTION: None required.

elx_mes2732: Failed to issue INIT_VPI mailbox command.

DESCRIPTION: The driver wanted to send a INIT_VPI mailbox command to initialize a VPort, but failed to send the mailbox command due to state of the adapter.

DATA: None

ACTION: None required.

elx_mes2745: Failed to allocate mbox for requesting FCF rediscover

DESCRIPTION: Driver is trying to rediscover FCF table, but failed to allocate memory needed.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2746: Failed FCF rediscover mailbox command failure.

DESCRIPTION: The adapter returned failure on FCF rediscover mailbox command.

DATA: None

ACTION: None required.

elx_mes2747: Failed to issue read FCF record mailbox command.

DESCRIPTION: The driver wanted to send a read FCF record mailbox command to start fast FCF failover FCF scan, but failed to send the mailbox command due to state of the adapter.

DATA: None

ACTION: None required.

**elx_mes2748 Failed to prepare for unregistering HBA's FCF record:
rc=<value>**

DESCRIPTION: Driver encountered an initialization error when preparing to rescan the FCF tables and needed to unregister an old FCF record.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

**elx_mes2749 Failed to prepare for unregistering HBA's FCF record:
rc=<value>**

DESCRIPTION: Driver encountered an initialization error when preparing to unregister an FCF and needed to prepare the command.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

**elx_mes2751: Adapter failed to restart, status reg <status>, FW Data: A8
<0xA8> AC <0xAC>**

DESCRIPTION: The adapter has failed to restart.

DATA: None

ACTION: If the issue persists, report the error to Emulex technical support.

elx_mes2752: KILL_BOARD command failed retval <retval>

DESCRIPTION: The KILL BOARD mailbox command failed to complete.

DATA: None

ACTION: If the issue persists, report the error to Emulex technical support.

elx_mes2753: PLOGI failure DID:<DID> Status:<Status>/<Extended Status>.

DESCRIPTION: A PLOGI to <DID> was failed either by the driver, firmware, or target. The <status> and <extended status> indicates why the PLOGI failed.

DATA: None

ACTION: If the issue persists, report the error to Emulex technical support.

elx_mes2754: PRLI failure DID:<DID> Status:<Status>/<Extended Status>.

DESCRIPTION: A PRLI to <DID> was failed either by the driver, firmware, or target. The <status> and <extended status> indicates why the PRLI failed.

DATA: None

ACTION: If the issue persists, report the error to Emulex technical support.

elx_mes2755: ADISC failure DID:<DID> Status:<Status>/<Extended Status>.

DESCRIPTION: A ADISC to <DID> was failed either by the driver, firmware, or target. The <status> and <extended status> indicates why the ADISC failed.

DATA: None

ACTION: If the issue persists, report the error to Emulex technical support.

elx_mes2756: LOGO failure DID:<DID> Status:<Status>/<Extended Status>.

DESCRIPTION: A LOGO to <DID> was failed either by the driver, firmware, or target. The <status> and <extended status> indicates why the LOGO failed.

DATA: None

ACTION: If the issue persists, report the error to Emulex technical support.

elx_mes2757: Protocol failure detected during processing of FCP I/O op: tgt <tgt ID> lun <LUN> cmd <CMD> rspInfo3 <rspInfo3>

DESCRIPTION: The FCP response from a target indicated that the response length is valid, but rspInfo3 indicates that there is no Failure. This is a FCP specification violation by the target.

DATA: None

ACTION: If the issue persists, report the error to Emulex technical support.

elx_mes2758: Failed to allocate mempool for read FCF record mbox command.

DESCRIPTION: The driver failed to allocate memory from the mempool for issuing FCF read mailbox command during the round robin FCF bmask update.

DATA: None

ACTION: None required.

elx_mes2759: Failed to allocate memory for round robin FCF failover bmask.

DESCRIPTION: The driver failed to allocate memory for the round robin FCF failover bmask.

DATA: None

ACTION: Make sure system has enough kernel memory, might need to reload the driver after memory issue resolved.

elx_mes2762: HBA reported FCF index go beyond driver bmask dimension.

DESCRIPTION: Adapter reports an FCF record index goes beyond the driver's internal resource dimension for the bmask.

DATA: None

ACTION: Inform Emulex about this.

elx_mes2763: Failed to allocate mempool for read FCF record mbox command.

DESCRIPTION: The driver failed to allocate memory from the mempool for issuing an FCF read mailbox command during the round robin FCF failover.

DATA: None

ACTION: None required.

elx_mes2765 Mailbox command READ_FCF_RECORD failed to retrieve a FCF record

DESCRIPTION: Driver failed to find an FCF record when the FCF table scan completed.

DATA:

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2772: Failed to issue FCF rediscovery mailbox command due to dead FCF.

DESCRIPTION: The driver wanted to send an FCF rediscovery mailbox command to start fast FCF failover due to a dead FCF asynchronous event, but failed to send the mailbox command due to state of the adapter.

DATA: None

ACTION: None required.

elx_mes2774: Failed to issue FCF rediscovery mailbox command due to CVL.

DESCRIPTION: The driver wanted to send an FCF rediscovery mailbox command to start fast FCF failover due to a Clear Virtual Link asynchronous event, but failed to send the mailbox command due to state of the adapter.

DATA: None

ACTION: None required.

New Events

elx_mes2796: Mailbox memory allocation failed

DESCRIPTION: The driver failed to get memory resources to release an RPI.

DATA: None.

ACTION: None. The driver's heap is exhausted. A server reboot is required to fix the exhaustion. Contact Emulex technical support if the issue persists.

elx_mes2798: Unreg_vpi failed vpi <value>, mb status = <value>

DESCRIPTION: The driver attempted to unregister a virtual port index and failed. The failure status is printed.

DATA: None.

ACTION: This condition is not catastrophic, but is unexpected. If issues persist, contact Emulex technical support.

elx_mes2813: Mgmt IO is Blocked <value> - mbox cmd <value> still active.

DESCRIPTION: The HBA's management interface is marked as blocked in preparation for an online or offline state transition. All user space access to the HBA via libdfc interface will be blocked.

DATA: None.

ACTION: None. Notification of a run-state change only.

elx_mes2814: MultiQueue not supported on this server platform. Data <values>

DESCRIPTION:

DATA: None.

ACTION: None required.

elx_mes2815: MultiQueue supported with <value> queues and MSI-X vectors.

DESCRIPTION:

DATA: None.

ACTION: None required.

elx_mes2816: Failed to register WQ->MSIX vectors, status <value>, disabling MQ and using INTX

DESCRIPTION:

DATA: None.

ACTION: None required.

elx_mes2817: Failed to get a valid queue ID failing MQ IO request.

DESCRIPTION:

DATA: None.

ACTION: None required.

elx_mes2822: IOCB failed <value> iotag <value> xri <value>

DESCRIPTION: The driver is attempting to drain an internal queue and failed. The failure reason and some state variables are written to the console.

DATA: None

ACTION: None required. This should be a transient condition. If not, contact Emulex technical support.

elx_mes2823: txq empty and txq_cnt is <value>

DESCRIPTION: The driver has detected a discrepancy between the elements queued to the txq and the counter tracking the number of items.

DATA: None

ACTION: None required. There is nothing for the driver to do except correct the counter - the txq is empty.

elx_mes2824: Cannot re-enable interrupt after slot reset.

DESCRIPTION: The driver failed to re-enable interrupts following a PCI slot reset command.

DATA: None

ACTION: A system reboot may be required to fully recover. Contact Emulex technical support if issues persist.

elx_mes2825: Unknown PCI error state: <value>, state

DESCRIPTION: The driver writes this message to the console when the PCI subsystem has detected an error on an Emulex port and called the driver. The driver reacts by resetting the port.

DATA: None

ACTION: None required. The driver resets the device in an attempt to recover. Contact Emulex technical support if issues persist.

elx_mes2826: PCI channel disable preparing for reset

DESCRIPTION: The driver writes this message to the console when it is preparing the port for a reset operation.

DATA: None

ACTION: None required. This message is notification of a corrective measure. Contact Emulex technical support if issues persist.

elx_mes2827: PCI channel permanent disable for failure

DESCRIPTION: The driver writes this message to the console when a recovery mechanism has failed and the driver wants to mark the port with a permanent failure.

DATA: None

ACTION: A system reboot may correct the failure. If not, contact Emulex technical support.

elx_mes2828: PCI channel I/O abort preparing for recovery

DESCRIPTION: The driver writes this message to the console when it is preparing the port for a recovery operation.

DATA: None

ACTION: None required. This is a notification message for the recovery action.

**elx_mes2831: FLOGI response with cleared Fabric bit fcf_index <value>
Switch Name <value> Fabric Name <value>**

DESCRIPTION: When the driver completed a FLOGI, the common service parameters did not indicate an FPort or NPort remote node. The driver treats this as an error.

DATA: None

ACTION: Validate the external cable connection and FPort/Nport configuration. Contact Emulex technical support if issues persist.

**elx_mes2856: Config Port Security Crypto Error: <value>,
pmb->u.mb.un.varCfgPort.sec_err**

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2858: FLOGI failure Status:<value>/<value> TMO:<value>

DESCRIPTION: The driver issued a FLOGI, but never received any completion with the timeout period. The driver is marking the FLOGI as failed and stops discovery.

DATA: None

ACTION: Check your Fabric to ensure it is operating correctly. Contact Emulex technical support if issues persist.

elx_mes2860: SLI authentication is required for INIT_LINK but has not been done yet

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2862: FCF (<value>) matches property of in-use FCF (<value>)

DESCRIPTION: The driver has found an FCF record that matches the properties of the current FCF record, except for the VLAN ID and Index. The driver will attempt to use this FCF.

DATA: None

ACTION: None required. The driver is in its FCF discovery phase and is trying to recover a match to its in-use FCF.

elx_mes2863: New FCF (<value>) matches property of in-use FCF (<value>)

DESCRIPTION: The driver has found a new FCF record that matches the properties of the current FCF record, but the record instance numbers do not match.

DATA: None

ACTION: None required. The driver is in its FCF discovery phase and is trying to recover a match to its in-use FCF.

elx_mes2877: FCP XRI exchange busy wait time: <value> seconds

DESCRIPTION: An FCP exchange cannot be released - no port completion. Driver is waiting.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2878: ELS XRI exchange busy wait time: <value> seconds

DESCRIPTION: An ELS exchange cannot be released - no port completion. Driver is waiting.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2881: RRQ failure DID:<value> Status:<value>/<value>

DESCRIPTION: Driver RRQ request failed - driver write target DID and status values.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2882: RRQ completes to NPort <value> with no ndlp. Data: <value> <value> <value>

DESCRIPTION: Driver completes a RRQ, but there is no node association.

DATA: (1) Status (2) Reason (3) IoTag

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2884: Vport array allocation failed

DESCRIPTION: Driver could not create a buffer list of VPorts.

DATA: None

ACTION: Software driver error. If this issue persists, report these errors to Emulex technical support.

elx_mes2885: Port Status Event: port status reg <value>, port smphr reg <value>, error 1=<value>, error 2=<value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2886: HBA Error Attention on unsupported if type <value>.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2887: Reset Needed: Attempting Port Recovery

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2888: Port Error Detected during POST: port status reg <value>, port_smphr reg <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2889: Port Overtemperature event, taking port

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2890: Port Error Detected during Port Reset: port status reg <value>, error 1=<value>, error 2=<value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2891: Init VFI mailbox failed <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2892: Failed to allocate init_vfi mailbox

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2893: Failed to issue init_vfi mailbox

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2894: SLI_INTF reg contents invalid sli_intf reg <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2895: Non FC link Event detected.(<value>)

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2897: The mboxq allocation failed

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2898: The lpfc_dmabuf allocation failed

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2899: The mbuf allocation failed

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2919: Failed to release resource extents for type <value> - Status <value> Add'l Status <value>. Resource memory not released.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2920: Failed to alloc Resource IDs rc = <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2925: Failed to issue CT ABTS RSP <value> on xri <value>, Data <value>

DESCRIPTION: The driver attempted and failed to issue a response to an unsolicited ABTS from the SAN.

DATA: None

ACTION: None required.

elx_mes2929: Resource Extent Opcode <value> is unsupported

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2930: Failed to get resource extents Status <value> Add'l Status <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2933: Failed to allocate mbox cmd memory

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2934: Allocated DMA memory size (<value>) is less than the requested DMA memory size (<value>)

DESCRIPTION:

DATA: None

ACTION: None required.

**elx_mes2935: POST_SGL_BLOCK mailbox command failed status <value>
add_status<value> mbx status <value>**

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2936: Could not find Vport mapped to vpi <value>

DESCRIPTION:

DATA: None

ACTION: None required.

**elx_mes2945: SLI_CONFIG(mse) rd, ext_buf_cnt(<value>) out of
range(<value>)**

DESCRIPTION:

DATA: None

ACTION: None required.

**elx_mes2946: SLI_CONFIG(hbd) rd, ext_buf_cnt(<value>) out of
range(<value>)**

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2950: Failed SLI_CONFIG(hbd) rd (<value>)

DESCRIPTION:

DATA: None

ACTION: None required.

**elx_mes2953: SLI_CONFIG(mse) wr, ext_buf_cnt(<value>) out of
range(<value>)**

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2954: SLI_CONFIG(hbd) wr to interface type:<value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2987: Allocated DMA memory size (<value>) is less than the requested DMA memory size (<value>)

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2988: POST_SGL_BLOCK mailbox command failed status <value> add_status <value> mbx status <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes2999: Unsupported SLI4 Parameters Extents and RPI headers enabled.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3008: No available Resource Extents for resource type <value>: Count: <value>, Size <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3010: Run link diag test mailbox failed with mbx_status <value> status <value>, add_status <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3021: SCSI SGL post error <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3029: SLI_CONFIG(hbd) rd to interface type:<value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3042: Failed SLI_CONFIG(hbd) wr (<value>)

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3045: SLI_CONFIG(hbd) wr, ext_buf_cnt(<value>) out of range(<value>)

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3061: Last IDX <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3069: Clearing FCP rules

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3070: lpc_clr_ndlps_pri: fcp_priority sz = <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3071: no memory for priority rules

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3084: Allocated DMA memory size (<value>) is less than the requested DMA memory size (<value>)

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3089: Failed to allocate queues

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3094: Start rport recovery on shost id <value> fc_id <value> vpi <value> rpi <value> state <value> flags <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3103: Adapter Link is disabled.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3104: Adapter failed to issue

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3105: Failed to allocate mailbox memory

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3112: lpfc_link_speed attribute cannot be set to <value>. Speed is not supported in loop mode.

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3113: Loop mode not supported at speed <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3125: Not receiving unsolicited event

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3141: Loopback mode: <value> not supported

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3142: Failed loopback test issue iocb: <value> iocb_stat: <value>

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3143: Port Down: Firmware Restarted

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3144: Port Down: Debug Dump

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3145: Port Down: Provisioning

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3147: Fast-path EQs not allocated

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3148: Fast-path FCP CQ array not allocated

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes3149: Fast-path FCP WQ array not allocated

DESCRIPTION:

DATA: None

ACTION: None required.

elx_mes9000: Allocated DMA memory size (<value>) is less than the requested DMA memory size (<value>)

DESCRIPTION:

DATA: None

ACTION: None required.

Troubleshooting the NIC Driver

The following section includes NIC troubleshooting information. Be sure to check the readme.txt file located on CD1 for other troubleshooting issues.

The following table provides troubleshooting information for the NIC driver.

Table 4-3 Troubleshooting the NIC Driver

Issue	Resolution
<p>1) When there is a great deal of network traffic in some VMs, a few VMs appear to have lost network connectivity.</p> <p>2) Several “alloc_skb() failed” messages appear in the log file: /proc/vmware/log</p>	<p>This could be due to low configured value for netPktHeapMaxSize. Try increasing it to a higher value. To read the current value, run:</p> <pre># esxcfg-advcfg -j netPktHeapMaxSize</pre> <p>(A value of 0 indicates default - 64 MB) To increase the size to (for example, 128 MB), run:</p> <pre># esxcfg-advcfg -k 128 netPktHeapMaxSize</pre> <p>(netPktHeapMaxSize can also be configured through VI Client using Configuration > Advanced Settings > VMKernel.)</p> <p>After configuring the size, reboot the system.</p>
<p>Unable to ping from one VM to another VM.</p>	<p>The NIC driver creates two vmnic interfaces, one for each port. If these interfaces are configured as uplinks in two separate vSwitches, the VMs in each of these switches are in separate networks with no network path between them. Thus, pinging between the VMs in the two groups fails. If you want all these VMs in the same network, configure them as teaming uplinks to one vSwitch option. Each of the vmnics, vmnic1 to vmnic16, must be configured in a separate vSwitch. In this configuration, there is no network path between the vSwitches and pinging between these VMs does not work.</p>
<p>When inserting or removing a 1Gb SFP-RJ45 module on a OneConnect adapter without RJ45 copper cables attached, the operating system indicates link up or down status. When inserting or removing copper cables attached to a switch to the module, link up or down events are not reported to the operating system.</p>	<p>There is no solution to this issue as the link status is not reported due to a PHY limitation on the card.</p>
<p>Flow control setting is not stored per port after rebooting the system.</p>	<p>With flow control, there is no persistence across reboot. It always starts with both RX and TX on. For persistence, run a config command from an RC file at reboot.</p>

NIC Event/Error Logging

Retrieving ESX/ESXi Server NIC Error Log Codes

For ESX/ESXi Server systems, the NIC driver generates error codes to the /var/log/vmkernel log file. The vmkernel log file is an ASCII text file that can be viewed and searched with a text editor such as vim. The vmkernel log file is automatically rotated as it gets larger, and the rotated log files are named vmkernel.x, where x is an integer.

To search the log file for error messages, at the command prompt, type:

```
#cd /var/log
#less vmkernel
```

For example, you might see the following message:

```
Sep 9 19:48:04 esx-server vmkernel: WARNING: Found a OneConnect card
in Gen 1 x8 PCI-e slot. Should be in Gen 2, x8 slot for best
performance.
```

ESX/ESXi Server NIC Event Log Entries

The following is a list of ESX/ESXi Server network event log error messages. It includes the severity of the error, the message displayed, and the message description. When reporting a problem with the OneConnect UCNA to Emulex, check the message log (/proc/vmware/log) and report any of these entries that may be present.

Note: In the following table, <D>, <DD>, or <DDD> in the 'Message Displayed' column refers to decimal values that appear in the error messages.

Table 4-4 ESX Server NIC Event Log Entries

Severity	Displayed Message	Description
Error	OneConnect POST failed	Power ON Self Test of the OneConnect UCNA failed. This indicates either a hardware or a firmware problem. Try rebooting the system after a reset.
Error	OneConnect initialization failed	Either the initialization of the OneConnect UCNA or the allocation of some resource for initializing the driver failed. In most cases, this message is accompanied by another more specific error message. Try rebooting the system after a power cycling. If the problem persists, this could indicate a hardware problem or corrupted firmware.
Warning	Using INTx interrupts. NetQueues feature will be disabled	The driver could not allocate MSIx vector for interrupt. The driver may continue to work, but the performance may be impacted.

Table 4-4 ESX Server NIC Event Log Entries (Continued)

Severity	Displayed Message	Description
Warning	WARNING: Found a OneConnect card in Gen <D> x<D> PCI-e slot. Should be in Gen 2, x8 slot for best performance	The OneConnect UCNA is an x8, Gen2 PCI-e device. For best performance, the UCNA should be installed in a Gen2 PCI-e slot 8 or 16 channels wide. The driver displays this warning if it finds the device in a slower or narrower PCI-e slot. The device continues to work with reduced performance.
Warning	Command to get pause frame settings failed	The firmware command to get PAUSE settings failed.
Warning	Command to set pause frame settings failed	The firmware command to change PAUSE settings failed.
Warning	Command to apply MAC address filter failed	The driver could not set the MAC address filter on the hardware. The device continues to work. There may be an impact on the performance.
Warning	Command to delete MAC address filter failed	The firmware command to delete a MAC address filter failed. The device should continue to work.
Warning	Unable to get Firmware Version	The command to get the firmware revision number failed. The version number is not shown. The device will continue to work.
Warning	Did not receive completions for all TX requests	While the driver was unloading, some outstanding transmit requests were found. This is an indication that the hardware is not functioning properly.
Warning	Failed to register char device	Could not create the char device used for certain management functions. The driver will continue to work. You may not be able to use HBACMD to interact with the device.
Warning	alloc_skb failed. Try increasing netPktHeapMaxSize	Could not allocate the skb structure to send a frame received from the network to the operating system. This is a transient failure that can be ignored. If this message appears continually, you may need to allocate more memory to the network heap. For example, to increase the heap size to 128MB, run: # esxcfg-advcfg -k 128 netPktHeapMaxSize

Table 4-4 ESX Server NIC Event Log Entries (Continued)

Severity	Displayed Message	Description
Warning	Invalid MTU requested. MTU must be between 64 and 9000 bytes.	Invalid MTU size in MTU configuration IOCTL. The MTU will not be changed.
Warning	Invalid vlan priority labeled. Must be 0 - 7	A request to set a VLAN priority tag was made with an invalid value.
Warning	Failed to allocate memory for pass through command	The memory allocation for a pass through command failed. The driver will continue to function. The configuration utility that issued the pass through IOCTL will fail.
Warning	Pass through command failed. opcode <DDD>, status 0x<XXX>	The pass through firmware command with the indicated opcode failed. The driver should continue to function. The configuration utility that issued the pass through IOCTL will fail.
Warning	Command to modify EQ delay failed	The firmware command to change the EQ delay failed. The driver will continue to function. Adaptive interrupt coalescing does not function correctly.

NIC Adapter Firmware Error

The following POST message appears if you have loaded firmware on the OneConnect adapter that the controller does not support:

```
POST Error : Firmware halted. This firmware does not support this
controller.
```

Troubleshooting the iSCSI Driver (For ESX/ESXi 4.1 and ESXi 5.0 Systems Only)

The following table provides information on troubleshooting the iSCSI driver.

Table 4-5 Troubleshooting the iSCSI Driver

Issue	Resolution
Mutual CHAP authentication cannot be configured with the vSphere client.	One-way CHAP is the only authentication method that can be configured with the vSphere Client. In order to set Mutual CHAP authentication, you must use iSCSISelect.

Retrieving iSCSI Error Log Codes

The iSCSI driver generates error codes to the /var/log/vmkernel log file. The vmkernel log file is an ASCII text file that can be viewed and searched with a text editor such as vim. The vmkernel log file is automatically rotated as it gets larger, and the rotated log files are named vmkernel.x, where x is an integer.

To search the log file for error messages, at the command prompt type:

```
#cd /var/log  
#vim vmkernel
```

For example, you may see the following message:

```
Sep 9 19:48:04 esx-server vmkernel: OneConnect iSCSI Driver: The  
be2iscsi driver received a Task Management Function that is not  
supported and rejected this request. The error log entry immediately  
following this entry will indicate the TMF function code that was  
rejected.
```

iSCSI Error Log Code Entries

The following is a brief description of the error log codes generated by the iSCSI driver. It includes the message displayed, the meaning of the message, and the recommended resolution.

Table 4-6 iSCSI Error Log Code Entries

Message	Recommended Resolution
The be2iscsi driver failed to load because initialization failed during a power management boot-up.	This failure may be due to the firmware not being present or running currently. This failure may also indicate a hardware problem.
The be2iscsi driver failed was unable to map one or more PCI Base Address Register and hence failed to load.	This failure may indicate a low memory condition or a hardware error.
The be2iscsi driver ignored a configuration entry since the entry was invalid.	Check the registry configuration for any recent entries added for driver parameters. The invalid entry must be removed or corrected.

Table 4-6 iSCSI Error Log Code Entries (Continued)

Message	Recommended Resolution
The be2iscsi driver failed to load due to memory allocation failure.	This failure occurred due to a failed memory allocation in the driver. Check low memory conditions.
The be2iscsi driver failed to load because initialization failed during normal boot-up.	This failure may be due to the firmware not being present or running currently. This failure may also indicate a hardware problem.
An internal API failed in be2iscsi driver during initialization.	This failure may indicate a low memory condition.
There was an Unrecoverable Error detected by the be2iscsi driver. Following this error log entry, the next 3 entries will indicate the error codes.	This may be due to hardware errors or due to unhandled exceptions in the hardware or firmware.
The be2iscsi driver failed an IOCTL request since the number of scatter gather elements required for the IOCTL buffer exceeded the OneConnect adapter's firmware limit. Following this error log entry, the next entry will indicate the IOCTL opcode and the payload length requested.	This error may indicate an incorrect configuration option for the iSCSI driver. It may also indicate a low memory condition.
The be2iscsi driver detected an error during offloading the iSCSI connection. The operation will be retried again. Following this error log entry, the next entry will indicate the session handle and the OneConnect firmware error code.	This may indicate a target is in error or may point to transient network connectivity issues. It may also indicate a firmware error.
The be2iscsi driver did not receive an iSCSI command window update up to 25 seconds during I/O operations. Following this error log entry, the next entry will indicate the session handle where this error occurred. The be2iscsi driver will trigger a session recovery on the session and continue.	Check for any errors reported at the target. The iSCSI initiator is only supported with certified targets. Check for the latest software at the target vendor's website. Check for the latest software at the Emulex website. If the above fails, contact Emulex technical support.
The be2iscsi driver received an invalid iSCSI Command Sequence Number update from the target. Following this error log entry, the next three entries will indicate the session handle and the iSCSI parameters - MaxCmdSN and ExpCmdSN respectively.	Check for any errors reported at the target. The iSCSI initiator is only supported with certified targets. Check for the latest software at the target vendor's website. Check for the latest software at the Emulex website. If the above fails, contact Emulex technical support.

Table 4-6 iSCSI Error Log Code Entries (Continued)

Message	Recommended Resolution
A connection to the target was lost for a period exceeding the Extended Timeout (ETO). The error log entry immediately following this entry will indicate the session ID of the target that lost the connection. There will be event log entries from the disk subsystem indicating that the drives were lost. If any I/Os were in progress, the system may see I/O errors or failures.	Check the connection to the target or the state of the target device. If the target is made available, any sessions that existed previously will be reestablished and the devices will be available for I/O.
The be2iscsi driver received a Task Management Function that is not supported and rejected this request. The error log entry immediately following this entry will indicate the TMF function code that was rejected.	The operating system version is not supported.
The be2iscsi driver received a Task Management Function Abort request for an I/O request that is not present with the driver.	This message may indicate a slow connection to the target. Check network connectivity to the target for any errors.
The be2iscsi driver encountered a mismatched version of the firmware running on the board. This error may be followed by more error codes 0x31840001 or 0x31880001 indicating that the be2iscsi driver failed to load.	This failure indicates that the driver version that is running on the system does not match the version of the firmware flashed on the board. Fix this by installing the desired version.
The be2iscsi driver detected a failure in the hardware during initialization. This error may be followed by more error codes 0x31840001 or 0x31880001 indicating that the be2iscsi driver failed to load.	This failure indicates that the hardware has not been initialized or is malfunctioning. This may also indicate that the firmware is not running correctly.
Both Port 0 and Port 1 links were down for a period exceeding the Link Down Timeout (LDTO). If the initiator has connection to the target, there will be event log entries from the disk subsystem indicating that the drives were lost. If any I/Os were in progress, the system may see I/O errors or failures.	Check the links to the OneConnect UCNA. If the link is reestablished, any sessions that existed previously will be reestablished and the devices will be available for I/O.
Both Port 0 and Port 1 links are down.	Check the links to the OneConnect UCNA.

Additional iSCSI Driver Messages

The following iSCSI error messages are returned when you specify illegal options when loading the driver:

Table 4-7 Additional iSCSI Driver Messages

Message
"WARNING: dic value = %d out of range. Valid Range is 0 - 1. Using Default Value = 1"
"WARNING: eto value = %d out of range. Valid Range is 0 - 30. Using Default Value = 30"
"WARNING: ldto value = %d out of range. Valid Range is 0 - 30. Using Default Value = 20"
"WARNING: ios_per_ctrl value = %d out of range. Valid Range is 1 - 512. Using Default Value = 512"
"WARNING: max_io_size value = %d out of range. Valid Range is 4 - 256 (KByte). Using Default Value = 256"
"WARNING: tmf_reset value= %d out of range. Valid Range is 1 - 3. Using Default Value= 1"
"WARNING: ddm value= %d out of range. Valid Range is 0 - 1. Using Default Value= 0"

Note: %d represents a signed integer outside of the valid range. The driver will return a number in the Warning message.

Any other messages will be returned in the following form:

```
"be2iscsi: FUNCTION_NAME:LINE:MESSAGE"
```

For example:

```
"be2iscsi:1088: kmalloc failed."
```

You will be requested to find the function FUNCTION_NAME at line LINE in the source.

Description of Mandatory and Optional Parameters

The following table describes the parameters used in the data string for option 43.

Table 4-8 Data String Parameters for Option 43

Parameter	Description	Field Type
<TargetIP>	Replace it with a valid IPv4 address in dotted decimal notation.	Mandatory
<TargetTCPPort>	Replace it with a decimal number ranging from 1 to 65535 (inclusive). The default TCP port 3260 is assumed, if not specified.	Optional
<LUN>	It is hexadecimal representation of Logical Unit number of the boot device. If not provided, LUN 0 is assumed to be the boot LUN. It is an eight-byte number which should be specified as a hexadecimal number consisting of 16 digits, with an appropriate number of 0's padded to the left, if required.	Optional
<TargetName>	Replace it with a valid iSCSI target iqname of up to 223 characters.	Mandatory

Table 4-8 Data String Parameters for Option 43 (Continued)

Parameter	Description	Field Type
<InitiatorName>	Replace it with a valid iSCSI iqn name of up to 223 characters. If not provided the default Initiator name (generated by the UCNA based on the board's MAC address) will be used.	Optional
<HeaderDigest>	Replace it with either "E" or "D". <ul style="list-style-type: none"> "E" denotes header digest is enabled "D" denotes that it is disabled. 	Optional
<DataDigest>	Replace it with either "E" or "D". <ul style="list-style-type: none"> "E" denotes data digest is enabled and "D" denotes that it is disabled. If not provided it is assumed that Data Digest is disabled by default.	Optional
<AuthenticationType>	If applicable replace it with "D", "E" or "M". <ul style="list-style-type: none"> "D" denotes authentication is disabled, "E" denotes that one-way CHAP is enabled - the username and secret to be used for oneway CHAP must be specified by non-DHCP means "M" denotes that MutualCHAP is enabled - user name and passwords required for mutual CHAP authentication must be specified by non-DHCP means. If not specified, this field defaults to authentication disabled.	Optional

Examples

The following is an example of Default Initiator name and Data Digest Settings:

```
iscsi:"192.168.0.2": "3261": "0000000000000000E": "iqn.2009-4.com:1234567890": "E": "E"
```

where the following is:

Target IP address: 192.168.0.2

Target TCP port: 3261

Target boot LUN: 0x0E

Target iqn name: iqn.2009-04.com:1234567890

Initiator name: Not specified. Use the Initiator name already configured. Use the default name if none was configured.

Header Digest: Enabled

Data digest: Not specified. Assume disabled.

Authentication Type: 1-way CHAP.

The following is an example of Default TCP Port and Mutual CHAP Settings:

```
iscsi:"192.168.0.2": "0000000000000000E": "iqn.2009-4.com:1234567890": "E": "D": "M"
```

where the following is:

Target IP address: 192.168.0.2

Target TCP port: Use default from RFC 3720 (3260)

Target boot LUN: 0x0E

Target iqn name: iqn.2009-04.com:1234567890

Initiator name: Not specified. Use the Initiator name already configured. Use the default name if none was configured.

Header Digest: Enabled

Data digest: Data Digest disabled

Authentication Type: Mutual CHAP

Appendix A. Configuring iSCSI Through DHCP

Dynamic Host Configuration Protocol (DHCP) Recommendations

If you are using a DHCP server to obtain an IP address for your iSCSI initiator, it is recommended that you set up a reservation. A reservation will assign a specific IP address based on the MAC address of your iSCSI function. If you do not reserve an IP address through DHCP, then you must set the lease length for the iSCSI initiator IP address to unlimited. This allows the IP address lease not to expire.

Vendor-Specific Option 43

The following section describes the format for the data returned in DHCP vendor-specific option 43. The method and format for specifying the Vendor ID is outside the scope of this document and is not included here. The initiator offers this Vendor ID to the DHCP server to retrieve data in the format described in the following section.

Format of Vendor-Specific Option 43

The data returned in DHCP vendor-specific option 43 uses the following format:

```
'iscsi:'<TargetIP>' : '<TargetTCPPort>' : '<LUN>' : '<TargetName>' : '<InitiatorName>' : '<HeaderDigest>' : '<DataDigest>' : '<AuthenticationType>
```

The guidelines for creating the data string include:

- Strings shown in quotes are part of the syntax and are therefore mandatory.
- Fields enclosed in angular brackets (including the angular brackets) should be replaced with their corresponding values. Some of these fields are optional and may be skipped.
- If an optional field is skipped, a colon must be used as a placeholder to indicate the default value for that field.
- When specified, the value of each parameter should be enclosed in double quotes.

All options are case sensitive.