

OneCommand Manager Application for Solaris Release Notes

Version: 11.0.243.13
System: Solaris 10, and 10 Update 13
Solaris 11, and 11 Update 3
Solaris 12 (64-bit, x86, and SPARC)
Date: March 1, 2016

Purpose and Contact Information

These release notes describe the new features, resolved issues, known issues, and technical tips associated with this OneCommand® Manager application version for the Broadcom® Emulex® drivers for Solaris. For the latest product documentation, go to www.broadcom.com. If you have questions or require additional information, contact an authorized Broadcom technical support representative at tech.support@broadcom.com, 800-854-7112 (US/Canada toll free), +1 714-885-3402 (US/International), or +44 1189-772929 (Europe, Middle East, and Africa).

New Features

- Adds support for LPe31000-series and LPe32000-series adapters.
- Adds support for Java Runtime Environment (JRE) version 8.
- Adds support for port removal for OCe14000-series adapters.
- Adds support for Secure Firmware Update for OCe14000B- series, LPe31000-series, and LPe32000-series adapters.
- Adds support for Solaris 10 update 13.
- Adds support for Solaris 11 update 3.

Resolved Issues

1. The OneCommand Manager GUI and CLI now correctly display the PCI function number for ARI FCoE functions, and the Discovery Tree in the GUI now lists the ARI FCoE functions in the correct order.
2. The discovery refresh interval that can be set in the OneCommand Manager's Discovery Settings dialog now changes the discovery interval for the adapters on the local system.

Known Issues

1. Known Issues related to updating firmware.

For OCe14000-series adapters, firmware version 11.x includes new features that require new flash regions to support them. Firmware versions earlier than 10.0.803.37 did not have the ability to configure the flash regions to support these new features.

If you are updating from a firmware version earlier than 10.0.803.37, use one of these methods to update the firmware to 11.x:

- Use the ISO flash tool.
- Use the released 11.x version of the OneCommand Manager application GUI or OneCommand Manager CLI application. You must perform the firmware update procedure twice to ensure that the flash regions are properly configured, and you must reboot the system after each firmware update.

Note: After you have updated the firmware, you must not downgrade the firmware to a version earlier than 10.0.803.37.

2. The OneCommand Manager CLI PortAttributes command reports the wrong VEPA state on SPARC clients.

Workaround

Use the OneCommand Manager application GUI.

3. The NIC driver must be installed and enabled to run the OneCommand Manager application on an FCoE OneConnect® adapter.

If the OneConnect FCoE adapter is run without the NIC driver installed and enabled, many of the management functions are unavailable and erroneous or corrupted information is displayed by the OneCommand Manager application.

Unavailable management functions include:

- Downloading
- All diagnostics, including beaconing and diagnostic dumps
- Core Dump
- Disabling or enabling a port

Erroneous or corrupt display information includes:

- FCoE storage ports are incorrectly grouped under the physical port
- NIC, FCoE, and iSCSI ports do not appear under the correct adapter
- Active and flash firmware versions
- Firmware status
- BIOS version
- Boot code version
- Transceiver data display
- Physical port link status
- All DCB settings
- Event log display (OneCommand Manager CLI only)

Workaround

Install and enable the NIC driver before running the OneCommand Manager application GUI or OneCommand Manager CLI.

4. Changing the channel management mode may disrupt network traffic.

When the channel management mode of the OneConnect CNA is changed from SIMode to vNIC1 mode, the existing SIMode LPVID settings carry over to the vNIC1 LPVID settings (also called Inner VLAN ID settings). This carry-over may disrupt network traffic. The OneCommand Manager application GUI and OneCommand Manager CLI do not allow you to change the vNIC1 LPVIDs.

Workaround

Use the Broadcom Emulex PXESelect Utility to set the vNIC1 LPVID value:

- a) Start or reboot the system. When prompted, hold down <Ctrl> and press <P> to enter the Broadcom Emulex PXESelect Utility.
- b) In the Controller Configuration menu, press <Tab> until **Continue** is highlighted. Press <Enter>.
- c) Select the adapter and port number to be configured and press <Enter>.
- d) Under the MultiChannel Configuration menu, set the LPVID for each NIC channel to either 0 (default) or the desired value. Press <Tab> until **Save** is highlighted and press <Enter>.
- e) Continue to press <Esc> until you are prompted with the following message:

Do you want to exit from the utility?

- f) Press <Y> to exit.

5. A reboot is required if you change the volatile WWN on an LPe16000-series adapter.**Workaround**

None.

6. Rebooting the system after a firmware update does not activate the new firmware.**Workaround**

- Perform a standard reboot using one of the following methods:
 - Issue the `reboot -p` command.
 - Configure the boot-config service to issue the standard reboot by default.
 - On x86 platforms running Solaris 11, disable Fast Reboot.

Note: See the Solaris documentation for more details on Fast Reboot.

- If a standard reboot does not resolve the issue, power-cycle the system.

7. While running the OneCommand Manager application and during high converged I/O traffic, a panic can occur when enabling or disabling Ethernet switch ports.**Workaround**

Stop the OneCommand Manager application daemons before enabling or disabling Ethernet ports.

- 8. The OneCommand Manager application GUI and the OneCommand Manager CLI may fail to run and return an error.**

The OneCommand Manager application and OneCommand Manager CLI may fail to run and return the following error:

```
ld.so.1: hbacmd: fatal: libgcc_s.so.1: open failed: No such file or directory
```

This error is caused by an unsatisfied dependency on the GCC Runtime library.

Workaround

Install the SUNWgccruntime package.

- 9. When you install the OneCommand Manager application on a guest operating system, the installer prompts you for a management mode.**

When installing the OneCommand Manager application on a guest operating system running on a virtual machine, the installer prompts you for a management mode (for example, local-only, full-management, read-only, etc.). However, when the OneCommand Manager application runs on a guest operating system, it runs in local-only and read-only modes, so it does not matter how these modes are specified during installation.

Workaround

None.

- 10. OneCommand Manager Secure Management mode on Solaris systems require PAM authentication configuration on the host machine.**

In Secure Management mode, a user is authenticated on the machine at OneCommand Manager application GUI startup. This is handled via the PAM interface.

Workaround

Place the correct setting in the auth section of `/etc/pam.d/other` file or its earlier equivalent, `/etc/pam.conf`. Refer to the *OneCommand Manager Application User Manual* for more information about Secure Management mode.

- 11. The OCe11101-E adapter cannot run loopback diagnostic tests (PHY, MAC, External). Any attempt to run a loopback test on the OCe11101-E CNA results in failure.**

Workaround

None.

- 12. OneCommand Manager Secure Management Group Assignment/Configuration on Solaris using the `useradd` command requires a `-G` option.**

If you assign users to one of the four OneCommand Manager application groups using the `useradd` command, using the `-g` option instead of the `-G` option results in the user membership data not being returned in the `getent group` command and associated OneCommand Manager Secure Management code failure to retrieve OneCommand Manager application user group membership data (and thus provide privileges to user).

Workaround

Use the `-G` option instead.

- 13. On OCe11100-series adapters, if the Mode is set to Force and the Speed is set to 1 Gb per second (Gbps), do not perform a MAC loopback test using the OneCommand Manager application.**

The Mode and Speed can be set from the Physical Port info tab in the OneCommand Manager application or with the `SetPhyPortSpeed` OneCommand CLI command. If you perform a MAC loopback test, the link does not come back up after the test is performed.

Workaround

None.

- 14. On Solaris 10 systems, the OneCommand Manager application, OneCommand Manager CLI, and all OneCommand Manager services may not run. The following error message appears:**

```
HBA_LoadLibrary: previously unfreed libraries exist, call  
HBA_FreeLibrary()
```

The problem may be caused by devices on the SAN behaving incorrectly. This has been seen only on Solaris 10 x86 and SPARC platforms, beginning with update 6.

Workaround

Any one of the following solutions may resolve this problem.

- Reboot the system.
- Check for any malfunctioning adapters.
- Check SAN infrastructure for connections or elements that may create excessive network latency. Make adjustments and reduce complexity where possible.
- Remove unneeded virtual ports.

- 15. The OneCommand Manager application, OneCommand Manager CLI, and all OneCommand Manager services are unable to run. The following error message repeatedly prints to the syslog and/or console:**

```
ElxInitBrdMap: HBAAPI initialization attempt failed
```

This known issue occurs when the HBAAPI fails to report all adapters in the system.

Workaround

This known issue often resolves itself after several minutes. If the problem does not resolve itself, the following actions may resolve the problem:

- Reboot the system.
- Check for any malfunctioning adapters.
- Check SAN infrastructure for connections or elements that may create excessive network latency. Make adjustments and reduce complexity where possible.
- Remove unneeded virtual ports.

- 16. If a system contains several HBAs or CNAs and is experiencing slow performance, the `elxhbamgrd` service may fall into a maintenance state during boot. This would prevent the system from being managed by a remote OneCommand Manager application client.**

Workaround

Any one of the following solutions may correct this problem.

- Remove any unused HBAs or CNAs.

- After each reboot, restart the OCM services using the commands:

```
/opt/ELXocm/stop_ocmanager  
/opt/ELXocm/start_ocmanager
```
- After each reboot, restart the elxhbamgrd service using the commands:

```
svcadm disable elxhbamgrd  
svcadm enable elxhbamgrd
```

17. The Web Launch browser client must be run with administrator/root privileges.

When running the OneCommand Manager Web Launch GUI, you must have administrator privileges when logged into the Web Launch client. On Solaris browser clients, you must be logged in as the root user. Unusual behavior may occur if this requirement is not met.

Workaround

None.

18. Set Link Speed Issue after SFP Hot Swap

LPe16000-series adapters do not support SFP hot swap if the replacement SFP is not the same model as the original SFP. There are two ramifications in the OneCommand Manager application:

1. The Port Attributes tab in the OneCommand Manager application GUI or the OneCommand Manager CLI `PortAttributes` command may display incorrect data for the Supported Link Speeds attribute. This issue is cosmetic.
2. Boot From SAN management may be unable to set the Boot Code Link Speed parameter to 16 Gbps.

Workaround

After changing the SFP, reset the LPe16000-series adapter port or reboot the server.

19. Core dump is not supported on the FC/FCoE driver for Solaris SPARC.

Workaround

None.

20. If you are using the OneCommand Manager application to update firmware from a previous version to version 11.x, you must first update the OneCommand Manager application to version 11.x.

21. When using an Internet Explorer 11 browser, navigating to the Index or Search pages in the online help results in those pages being blank.

Workaround

Click on **Contents** and refresh the browser, or load the help URL in a different browser.

22. When the following command is used to enable DHCP on an iSCSI initiator, an incorrect error message will be displayed.

```
>hbacmd SetNetworkConfiguration MAC_ADDRESS VLAN_Enabled=0 DHCP=1
```

Incorrect error message:

```
Invalid format for option automatic IPv6 assignment
```

Workaround

When enabling DHCP, make sure to specify the IPv6 settings as well, even if the IPv6 settings are not being changed. For example, the `SetNetworkConfiguration MAC_ADDRESS VLAN_Enabled=0 DHCP=1` command will work if the IPv6 Automatic Assignment parameter (AA) is also specified, as shown below:

```
>hbacmd SetNetworkConfiguration MAC_ADDRESS VLAN_Enabled=0 DHCP=1 AA=1
```

- 23. The reference to FCoE in the title of Section 8.2.16 of the *OneCommand Manager Application User Manual Versions 11.0 and 11.1* should be removed. The title should be updated as follows:**

8.2.16 Managing FC ExpressLane LUNS (LPe16000, LPe31000, and LPe32000-series FC adapters)

- 24. When an adapter is configured with iSCSI in pNIC mode and you log into an iSCSI target, if boot flag has been enabled for the target LUN, target logout is successful with UEFI but not with OCM.**

Workaround

None.

Technical Tips

- 1. The OneCommand Manager CLI `UmEnableChanLink` command has been removed.**

To enable the logical link status of a channel, use the `CMSetBW` command to set the minimum bandwidth to a value greater than 0. To disable the logical link status, set the minimum bandwidth to 0.

- 2. Roles-based Secure Management mode is available.**

Secure Management mode is a management mode available with this release. It is a roles-based security implementation. During the OneCommand Manager application installation, you are prompted whether or not to run in Secure Management mode. When the OneCommand Manager application is installed in this mode, the following operational changes occur:

- A non-root or non-administrator user can run the OneCommand Manager application.
- The OneCommand Manager application host uses a user's credentials for authentication.
- A user has OneCommand Manager application configuration privileges according to the OneCommand Manager application group to which the user is assigned.
- In Secure Management mode, a root or administrator user is provided full privileges on the local machine (OneCommand CLI does not require credentials) but no remote privileges.

Note: Refer to the *OneCommand Manager Application User Manual* for more information on Secure Management mode.

- 3. OneCommand Manager Secure Management mode requires OneCommand Manager user groups to be configured on the domain or if the host is not running in a domain, the host machine.**

OneCommand Manager Secure Management must be able to get the OneCommand Manager application group to which the user belongs from the host's domain (Active

Directory or Lightweight Directory Access Protocol [LDAP]) or if the host is not part of a domain, the host's local user accounts. This access is associated with the user groups, not with specific users. An administrator needs to create these user groups and then set up user accounts such that a user belongs to one of these four OneCommand Manager application user groups:

Table 1 Secure Management User Privileges

User Group	OneCommand Manager Capability
ocmadmin	Allows full active management of local and remote adapters.
ocmlocaladmin	Permits full active management of local adapters only.
ocmuser	Permits read-only access of local and remote adapters.
ocmlocaluser	Permits read-only access of local adapters.

These four OneCommand Manager application groups must be created and configured on the host machine or network domain. OneCommand Manager Secure Management uses the C-library API calls `getgrnam` and `getgrid` to retrieve the OneCommand Manager Secure Management group information. The equivalent to these can be obtained on the shell command line by typing `getent group` command. If the four OneCommand Manager application groups are listed, along with their member users, this is an indication that the host machine is sufficiently configured to work with OneCommand Manager Secure Management.

4. **FC in-band management is no longer supported.**
5. **The OneCommand Manager application no longer installs OneCommand Vision components.**
6. **On OneConnect adapters, if you change the port speed via the Change Port Speed dialog box, and the selected speed is supported by the adapter's port but is not supported by the connected hardware, the link does not come up.**
7. **Requirement if DCB settings are connected to a non-data center bridging exchange (DCBX) switch.**

If DCB settings are required when connected to a non-DCBX switch (or switch with DCBX disabled), DCBX must be disabled on the OneConnect adapter to use the adapter's configured parameters. If DCBX is enabled, the DCB PFC and Priority Groups are ignored (the adapter assumes that the switch does not support these parameters) and for FCoE adapters, the FCoE priority (COS) is 3.

8. **The OneCommand Manager application Firmware tab is in a different location for 8 Gb and lower Fibre Channel adapters than it is for 16 GFC adapters and OneConnect CNAs.**
Because the 16 GFC adapters and OneConnect CNAs share a single firmware image for all ports on the adapter, the Firmware tab for them is at the adapter level. Because 8 GFC and lower adapters have a separate firmware images for each individual port, the Firmware tab for them is at the port level.

9. **DH-CHAP FC authentication is no longer supported.**
10. **To view online help using the Google Chrome browser, you must disable Chrome's security check using the `--allow-file-access-from-files` option.**
 - a) Create a copy of the Chrome shortcut on the desktop and rename it to RH Chrome L.
 - b) Right-click on the new Chrome icon and choose **Properties**.
 - c) Add the `--allow-file-access-from-files` text to the end of the path appearing in Target. You must leave a space between the original string and the tag you are adding to the end of it.
 - d) Click **OK** to save your settings.
 - e) Close any open instances of Chrome.
 - f) To open a local copy of the online help, use the new shortcut to open Chrome, then hold down **<Ctrl>** and press **Open** and browse to the start page; or open Chrome with the new shortcut, then right-click the start page and click **Open With > Google Chrome**.
11. **The OneCommand Manager application supports a maximum of 16 ASICs for OneConnect adapters. Most OneConnect adapters have a single ASIC, so a maximum of 16 adapters can be seen and managed by the OneCommand Manager application. There are some OneConnect adapter models that have two ASICs. When all the adapters have two ASICs, a maximum of eight adapters can be seen and managed by the OneCommand Manager application.**
12. **SR-IOV is not supported by the OneCommand Manager application. SR-IOV management is provided through the Solaris operating system.**

Broadcom, the pulse logo, Connecting everything, the Connecting everything logo, Avago Technologies, and Emulex are among the trademarks of Broadcom Ltd. and/or its affiliates in the United States, certain other countries and/or the EU. Any other trademarks or trade names mentioned are the property of their respective owners. Broadcom Ltd. reserves the right to make changes without further notice to any products or data herein to improve reliability, function, or design. Information furnished by Broadcom Ltd. is believed to be accurate and reliable. However, Broadcom Ltd. does not assume any liability arising out of the application or use of this information, nor the application or use of any product or circuit described herein, neither does it convey any license under its patent rights nor the rights of others. Copyright © 2012-2016 Broadcom Ltd. All Rights Reserved.