


MegaRAID® SAS 8704ELP/SAS 8708ELP RAID Controllers

LSI LOGIC®

Quick Installation Guide

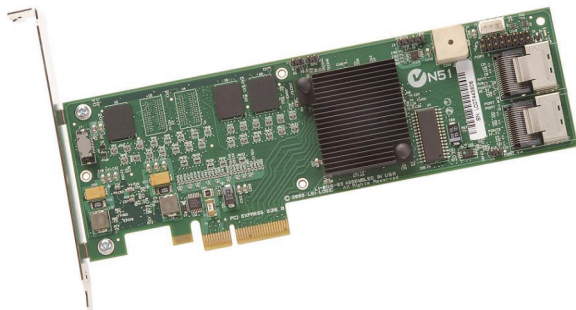

Thank you for purchasing the MegaRAID® 1078-based SAS (Serial Attached SCSI/Serial ATA II) 8704ELP (PCI Express Low-Profile) RAID Controller or the 1078-based SAS 8708ELP RAID Controller.

Note: The SAS 8704ELP RAID Controller does not contain the J9 connector. The missing J9 connector is the only difference between the SAS 8704ELP RAID Controller, which supports one connector and four ports, and the SAS 8708ELP RAID Controller, which supports two connectors and eight ports.

Please take a few minutes to read this quick installation guide before you install the RAID controller. If you need more information about any topic covered in this guide, refer to the related documents on your *MegaRAID Universal Software Suite* CD.

Note: SATA II is the only type of SATA supported by these RAID controllers.

You can connect the LSI Logic intelligent Battery Backup Unit 05 (LSIiBBU05) to the SAS 8704ELP RAID Controller and the SAS 8708ELP RAID Controller by using a small board-to-board connector (daughter card). For more information about this battery, refer to the *Intelligent Battery Backup Unit for 1078-based MegaRAID Products User's Guide* on the *MegaRAID Universal Software Suite* CD.

RAID CONTROLLER INSTALLATION



Back up your data before you change your system configuration. Otherwise, you might lose data.

Step 1

Unpack the RAID Controller

Unpack the RAID controller in a static-free environment. Remove it from the antistatic bag, and inspect it for damage. If the RAID controller appears to be damaged, or if the *MegaRAID Universal Software Suite* CD is missing, contact LSI Logic or your MegaRAID OEM support representative.

The CD contains utility programs, device drivers for various operating systems, and the following documentation:

- *MegaRAID 1078-based SAS RAID Controllers User's Guide*
- *MegaRAID SAS Software User's Guide*
- *MegaRAID SAS Device Driver Installation User's Guide*
- *Intelligent Battery Backup Unit for 1078-based MegaRAID Products User's Guide*
- Software license agreement

Step 2

Prepare the Computer

Turn off the computer, and unplug the power cords from the rear of the power supply. Remove the cover from the computer.



CAUTION

Before you install the RAID controller, make sure that the computer is disconnected from the power and from any networks.

Step 3

Review the Jumpers and Connectors

Figure 1 shows the location of the jumpers and the connectors on the SAS 8708ELP RAID Controller. The jumpers are set at the factory, and you usually do not need to change them.

Figure 1 Layout of the MegaRAID SAS 8708ELP RAID Controller

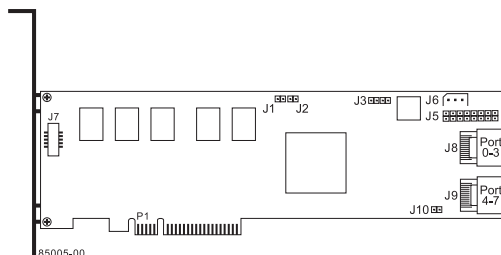


Table 1 describes the jumpers and the connectors on the SAS 8704ELP RAID Controller and the SAS 8708ELP RAID Controller.

Table 1 Jumpers and Connectors

Jumper/Connector	Type	Description
J1	Cache Write Pending LED	2-pin connector. The connector for the enclosure LED. It provides a signal that indicates when the on-board cache contains data and a write from the cache to the hard drives is pending. Optional.
J2	On-board BIOS Enable	2-pin shielded header. The optional BIOS function is enabled or disabled in software depending on the status of this jumper. No jumper: BIOS is enabled (default). Jumper: BIOS is disabled.
J3	Universal Asynchronous Receiver/Transmitter debugging	4-pin connector. Reserved for LSI Logic use.
J5	Individual Fault LED header for eight SAS ports	16-pin connector. Provides an LED interface individually to eight SAS ports. The LED indicates errors on particular ports.
J6	IPMI-style SMBus (System Management)/I ² C header	3-pin shielded header. Provides enclosure management support.
J7	Board-to-board connector for battery backup unit daughter card	20-pin connector. Provides an interface to the daughter card that contains the battery backup unit.
J8	x8 SAS Ports 0–3	The x4 SAS connectors connect the cables from the RAID controller to SAS or SATA II physical drives or to a SAS expander.
J9	x8 SAS Ports 4–7 1. The SAS 8704ELP RAID Controller does not contain this connector.	The x4 SAS connectors connect the cables from the RAID controller to SAS or SATA II physical drives or to a SAS expander.
J10	Straps Default Boot Straps Controller	2-pin connector. Loads the defaults in case the boot strap controller (the serial ROM that controls the memory and processor speeds) becomes corrupt.


Step 4 Install the RAID Controller

Insert the RAID controller in a PCI Express slot on the motherboard, as shown in Figure 2. Press down gently, but firmly, to seat the card correctly in the slot. Secure the RAID controller to the computer chassis with the bracket screw.

Note: Refer to the guide for your motherboard for information about the PCI Express slot.

Note: This is a PCI Express x4 card, and it can operate in 4x, 8x, and 16x slots.

Figure 2 Installing the MegaRAID SAS 8708ELP RAID Controller

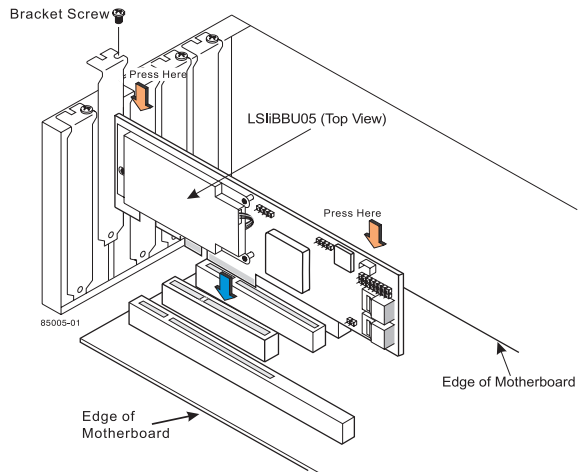

Step 5 Configure and Install the SAS Devices, SATA II Devices, or Both in the Host Computer Case

Refer to the documentation for the devices for any preinstallation configuration requirements.

Step 6 Configure and Install the SAS Devices, SATA II Devices, or Both in the Host Computer Case

Use SAS cables to connect the SAS RAID controller to SAS devices, SATA II devices, or both. See Figure 1 to view the connector locations on the RAID controller.

Refer to the *MegaRAID 1078 SAS RAID Controllers User's Guide* on the *MegaRAID Universal Software Suite* CD for detailed information about the SAS cables.

Step 7 Turn on the Power to the Computer

Reinstall the computer cover, and reconnect the power cords. Turn on the power to the computer. Make sure that the power is turned on to the SAS devices and the SATA II devices before or at the same time that the power to the host computer is turned on. If the power is turned on to the computer before it is turned on to the devices, the computer might not recognize the devices.

The firmware takes several seconds to initialize. During this time, the RAID controller scans the ports.

Step 8 Run the WebBIOS Configuration Utility

Run the WebBIOS Configuration Utility to configure the physical arrays and the logical drives. When the message `Press <Ctrl><H>` for WebBIOS appears on the screen, immediately press CTRL+H to run the utility.

Note: Refer to the *MegaRAID SAS Software User's Guide* on the *MegaRAID Universal Software Suite* CD for detailed steps on configuring physical arrays and logical drives.

Step 9 Install the Operating System Driver

The RAID controller can operate under various operating systems, but you must install the software drivers first.

The *MegaRAID Universal Software Suite* CD includes the software drivers for the supported operating systems, along with documentation. You can view the supported operating systems on and download the latest drivers for RAID controllers from the LSI Logic web site at: <http://www.lsi.com/cm/DownloadSearch.do>. Access the download center, and follow the steps to download the driver.

Refer to the *MegaRAID SAS Device Driver Installation User's Guide* on the *MegaRAID Universal Software Suite* CD for details on installing the driver. Be sure to use the latest service packs that are provided by the operating system manufacturer and to review the `readme` file that accompanies the driver.

of each disk stores parity information that reconstructs data if a disk fails. RAID 5 provides good data throughput for applications with high read request rates.

- **RAID 6 (disk striping with distributed parity across two disks):** Data is striped across all disks in the array and two parity disks are used to provide protection against the failure of up to two physical disks. In each row of data blocks, two sets of parity data are stored.
- **RAID 10 (RAID 1 and RAID 0 in spanned arrays):** RAID 10 uses mirrored pairs of disks to provide complete data redundancy. RAID 10 provides high data throughput rates.
- **RAID 50 (RAID 5 and RAID 0 in spanned arrays):** RAID 50 uses both parity and disk striping across multiple disks to provide complete data redundancy. RAID 50 provides high data throughput rates.
- **RAID 60 (RAID 6 and RAID 0 in spanned arrays):** RAID 60 uses both distributed parity across two parity disks and disk striping across multiple disks to provide complete data redundancy. RAID 60 provides high fault tolerance.

TECHNICAL SUPPORT

For assistance in installing, configuring, or running your SAS RAID controller, contact LSI Logic Technical Support.

Phone Support:

1-800-633-4545 (North America)

Web Site:

<http://www.lsi.com/support>

SUPPORTED RAID LEVELS

The SAS 8704ELP RAID Controller and the SAS 8708ELP RAID Controller support disk arrays using the following RAID levels:

- **RAID 0 (data striping):** Data is striped across all disks in the array, enabling very fast data throughput. There is no data redundancy. All data is lost if any disk fails.
- **RAID 1 (disk mirroring):** Data is written simultaneously to two disks, providing complete data redundancy if one disk fails. The maximum array capacity is equal to the available size of the smaller of the two hard drives.
- **RAID 5 (disk striping with distributed parity):** Data is striped across all disks in the array. Part of the capacity



PN: 80-00158-01 Rev.A

February 2007

Find a list of LSI Logic Corporation's U.S. distributors, international distributors, sales offices, and design resource centers on the LSI Logic web site at: <http://www.lsi.com/contacts/index.html>

LSI Logic, the LSI Logic logo design, and MegaRAID are registered trademarks of LSI Logic Corporation. All other brand and product names may be trademarks of their respective companies.

Copyright © 2007 by LSI Logic Corporation. All rights reserved.

LSI Logic products are not intended for use in life-support appliances, devices, or systems. Use of any LSI Logic product in such applications without written consent of the appropriate LSI Logic officer is prohibited.

Purchase of I²C components of LSI Logic Corporation, or one of its sublicensed Associated Companies, conveys a license under the Philips I²C Patent Rights to use these components in an I²C system, provided that the system conforms to the I²C standard Specification as defined by Philips.

LSI Logic Corporation reserves the right to make changes to any products and services herein at any time without notice. LSI Logic does not assume any responsibility or liability arising out of the application or use of any product or service described herein, except as expressly agreed to in writing by LSI Logic; nor does the purchase, lease, or use of a product or service from LSI Logic convey a license under any patent rights, copyrights, trademark rights, or any other of the intellectual property rights of LSI Logic or of third parties.