



OneConnect[®] OCe14000-Series Adapters Installation Manual

Copyright © 2013–2015 Emulex. All rights reserved worldwide. No part of this document may be reproduced by any means or translated to any electronic medium without the prior written consent of Emulex.

Information furnished by Emulex is believed to be accurate and reliable. However, no responsibility is assumed by Emulex for its use; or for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent, copyright or related rights of Emulex.

Emulex, the Emulex logo, Emulex BladeEngine, Emulex InSpeed, Emulex LightPulse, Emulex OneCommand, Emulex OneConnect, and SLI are registered trademarks, and Emulex Advanced-8, Emulex Connect, Emulex CrossLink, Emulex Engine, Emulex Edge, Emulex ExpressLane, Emulex GreenState, Network Xceleration, Emulex OneCore, Emulex Pilot, Emulex SURF, Emulex Universal Multi-Channel, Emulex vEngine, Emulex Virtual Fabric, Emulex Virtual Network Exceleration, Emulex vPath, Emulex vScale, AutoPilot, AutoPilot Installer, and BlockGuard are trademarks, of Emulex. All other brands or product names referenced herein are trademarks or registered trademarks of their respective companies or organizations.

Emulex provides this manual "as is" without any warranty of any kind, either expressed or implied, including but not limited to the implied warranties of merchantability or fitness for a particular purpose. Emulex may make improvements and changes to the product described in this manual at any time and without any notice. Emulex assumes no responsibility for its use, nor for any infringements of patents or other rights of third parties that may result. Periodic changes are made to information contained herein; although these changes will be incorporated into new editions of this manual, Emulex disclaims any undertaking to give notice of such changes.

Emulex, 3333 Susan Street
Costa Mesa, CA 92626

Table of Contents

List of Figures	4
List of Tables	5
1. Introduction	6
Features.....	9
General Features.....	9
OCe14101 Adapters	10
OCe14102 Adapters	10
OCe14104 Adapters	10
Protocol-Specific Capabilities.....	11
Adapter Identification.....	12
Abbreviations	12
2. Installation.....	14
Preparing the Adapter for Installation	14
Installing the Adapter	16
3. Attaching Devices to the Adapter.....	17
Connecting Devices to Adapters Using a DAC or AOC Cable	17
Emulex OneConnect Accessories	19
Connecting Devices to Adapters Using an Optical Cable with LC Connectors.....	20
Connecting Devices to Adapters Using a UTP or CAT Cable	22
4. Applying Power and Viewing the LEDs.....	23
Applying Power	23
LED Indicators.....	23
For the OCe14102-NT/UT Adapter	23
For All Other OCe14000-series Adapters	23
Viewing the LEDs	23
5. References	26
Specifications	26
FCC and Regulatory Notices.....	27
Declarations of Conformity.....	29
Laser Safety Notice	30

List of Figures

Figure 1-1	Emulex OCe14102 Adapter	8
Figure 1-2	Emulex OCe14102-NT/UT Adapter	8
Figure 1-3	Emulex OCe14401 Adapter	9
Figure 2-1	Optical Transceiver Example	14
Figure 2-2	Releasing the Latch on an Optical Transceiver	15
Figure 2-3	Removing the Bracket	15
Figure 3-1	Connecting a DAC Cable to the OCe14100-series -NX/-UX Adapters	18
Figure 3-2	Connecting a DAC Cable to the OCe14100-series -NX/-UX Adapters	18
Figure 3-3	Installing an Optical Transceiver for the OCe14000-series -NM/-UM Adapters	21
Figure 3-4	Connecting a Fiber Optic Cable for the OCe14000-series -NM/-UM Adapters	21
Figure 4-1	OCe14101-NM/-NX, OCe14102-NM/-NX, and OCe14102-UX/-UM Adapter LED Indicators	24
Figure 4-2	OCe14401-NX/-UX Adapter LED Indicators	24
Figure 4-3	OCe14102-NT and OCe14102-UT LED Indicators	25
Figure 4-4	OCe14104-NM/-UM LED Indicators	25

List of Tables

Table 1-1	OCe14000-series Adapters	6
Table 3-1	OCe14101-NX, OCe14102-NX/-UX, and OCe14104-NX/-UX Cable and Connector Specifications.....	17
Table 3-2	OCe14401-NX/-UX Cable and Connector Specifications.....	17
Table 3-3	OCe14101-NX, OCe14102-NX, and OCe14104-NX/-UX Adapter Emulex OneConnect Accessories	19
Table 3-4	OCe14401-NX/UX Adapter Emulex OneConnect Accessories	19
Table 3-5	OCe14101-NM, OCe14102-NM/-UM, and OCe14104-NM/-UM Adapter Cable and Connector Specifications	20
Table 3-6	OCe14102-NT/-UT Adapter Cable and Connector Specifications	22
Table 5-1	Adapter Specifications	26

1. Introduction

This manual describes the following Emulex® OneConnect® OCe14000-series of multi-protocol Peripheral Component Interconnect Express (PCIe) adapters that provide Ethernet networking, RDMA over Converged Ethernet (RoCE), internet Small Computer System Interface (iSCSI) functionality, and Fibre Channel over Ethernet (FCoE) functionality for convergence of Fibre Channel (FC) traffic onto a Ethernet fabric.

Table 1-1 lists the OCe14000-series adapters.

Table 1-1 OCe14000-series Adapters

Adapter Models	Number of Ports	Supported Protocols	Cable Type
OCe14101-NX	1x10GbE	NIC RoCE	10GbE SFP+ Passive Direct-attach Copper (DAC) Cable 10GbE SFP+ Active DAC Cable 10GbE SFP+ Active Optical (AOC) Cable
OCe14101-NM	1x10GbE	NIC RoCE	10GbE SFP+ fiber optic cable with LC connector
OCe14102-NX	2x10GbE	NIC RoCE	10GbE SFP+ Passive DAC Cable 10GbE SFP+ Active DAC Cable
OCe14102-UX	2x10GbE	NIC RoCE iSCSI FCoE	10GbE SFP+ AOC Cable
OCe14102-NM	2x10GbE	NIC RoCE	10GbE SFP+ fiber optic cable with LC connector
OCe14102-UM	2x10GbE	NIC RoCE iSCSI FCoE	
OCe14102-NT	2x10GbE	NIC RoCE	Unshielded twisted pair (UTP) copper Shielded twisted pair (STP) copper
OCe14102-UT	2x10GbE	NIC RoCE iSCSI FCoE	

Table 1-1 OCe14000-series Adapters (Continued)

Adapter Models	Number of Ports	Supported Protocols	Cable Type
OCe14104-NX	4x10GbE	NIC RoCE	10GbE SFP+ Passive DAC Cable 10GbE SFP+ Active DAC Cable 10GbE SFP+ AOC Cable
OCe14104-UX	4x10GbE	NIC RoCE iSCSI FCoE	
OCe14104-NM	4x10GbE	NIC RoCE	10GbE SFP+ fiber optic cable with LC connector
OCe14104-UM	4x10GbE	NIC RoCE iSCSI FCoE	
OCe14401-NX	1x40GbE	NIC RoCE	40GbE QSFP+ Passive DAC Cable 40GbE QSFP+ Active DAC Cable
OCe14401-UX	1x40GbE	NIC RoCE iSCSI FCoE	

Note: Illustrations in this manual are only examples. The actual hardware may vary.

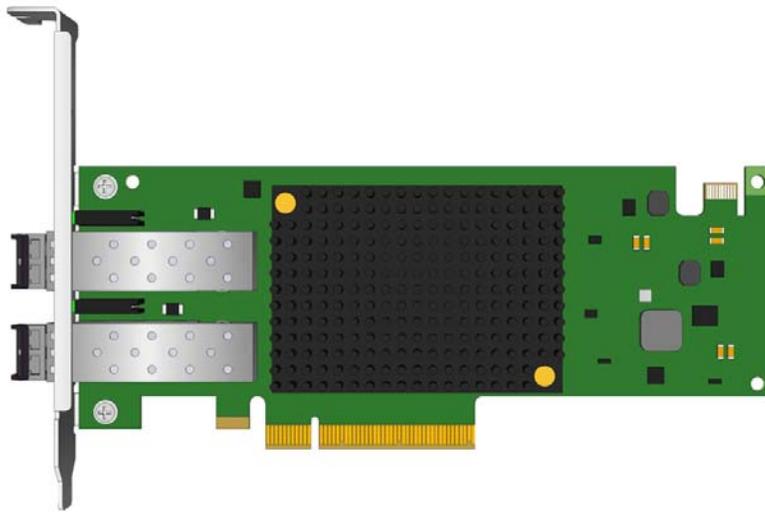


Figure 1-1 Emulex OCe14102 Adapter

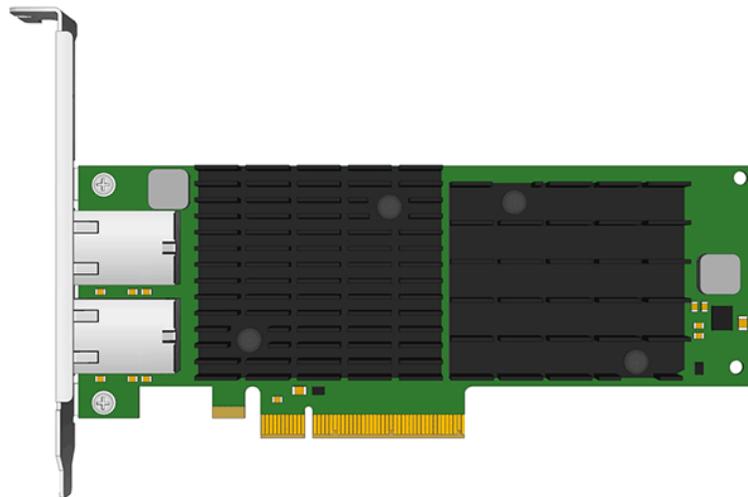


Figure 1-2 Emulex OCe14102-NT/UT Adapter

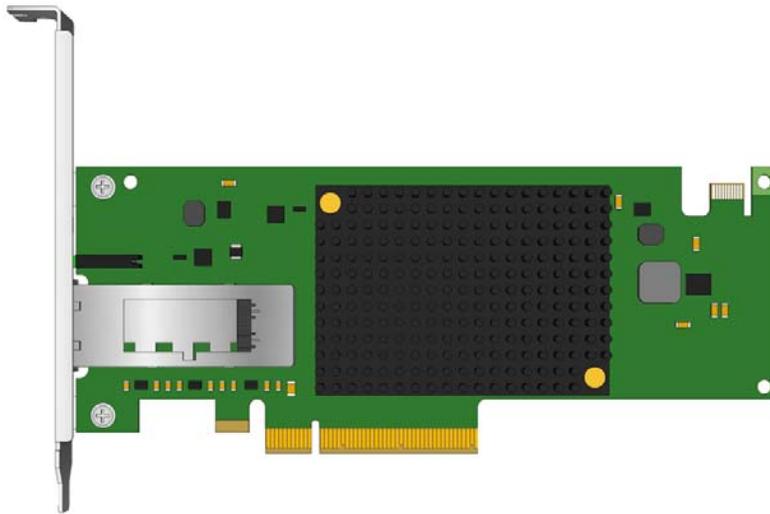


Figure 1-3 Emulex OCe14401 Adapter

All Emulex adapters support NIC single root I/O virtualization (SR-IOV) and are fully compliant to the PCIe Card Electromechanical (CEM) Specification Rev. 3.0/2.0/1.1. Converged network adapters (CNAs) combine two major functional components: a 10GbE networking media access control (MAC) sublayer and an FC I/O controller (IOC) to interface with a unified lossless Ethernet switch. Adapters serve as a common interface for both storage and Internet Protocol (IP) traffic retaining familiar FC and networking software stacks, OS drivers, and management. The supported Peripheral Component Interconnect Express (PCIe) connector is an x8 or x16.

Features

General Features

- Eight-lane (x8) Generation 3 PCIe interface at 8GT/s, 5GT/s, or 2.5GT/s (auto-negotiated with system)
- Parts and construction are compliant to the European Union Directive of RoHS, and similar regulatory requirements for other countries.
- Comes with a standard, full height I/O bracket installed. The standard, full-height form factor is 6.600 inches by 4.3760 inches (167.64 mm by 111.15 mm); for low-profile adapters, an optional low-profile I/O bracket is included. The low-profile PCIe form factor PCBA is 6.600 inches by 2.713 inches (167.64 mm by 68.910mm).
- External volatile memory: 2GB/4GB DDR3 SDRAM technology
- On-board flash memory: The flash is 128Mbit with a SPI interface. The flash contains the firmware, VPD, and Boot BIOS images. You can update the flash with Emulex utilities.
- Interoperates with existing FC SAN infrastructures – switches, arrays, SRM tools (including Emulex utilities), SAN practices, and so forth.

- Host interface support is provided through Emulex standard drivers
- Support for RoCE NIC operating system drivers (Windows Server and Linux OFED)
- As supported, a comprehensive array of NIC, iSCSI, FCoE, operating system drivers, including support for Windows, Linux, VMware, and Solaris.
- As supported, Unified Ethernet-to-FC SAN connectivity provided by an FCoE switch.

OCe14101 Adapters

- Up to eight PCIe functions per adapter, individually configurable to NIC and RoCE personalities.
- Low-profile PCIe form factor
- OCe14101-NM - SFF-8431 Small Form Factor Pluggable Module SFP+ compliant

OCe14102 Adapters

- Up to sixteen PCIe functions per adapter
 - OCe14102-NX/-NM/-NT - individually configurable to NIC and RoCE personalities
 - OCe14102-UX/-UM/-UT - individually configurable to NIC, RoCE, iSCSI, or FCoE personalities
- Low-profile PCIe form factor
- OCe14102-NM/-UM - SFF-8431 Small Form Factor Pluggable Module SFP+ compliant

OCe14104 Adapters

- Up to sixteen PCIe functions per adapter
 - OCe14104-NX/-NM - individually configurable to NIC and RoCE personalities
 - OCe14104-UX/-UM - individually configurable to NIC, RoCE, iSCSI, or FCoE personalities
- Standard, full-height form factor only
- OCe14104-NM/-UM - SFF-8431 Small Form Factor Pluggable Module SFP+ compliant

OCe14401 Adapters

- OCe14101-NX and the OCe14101-NM adapters support eight functions
- Up to sixteen PCIe functions per adapter, if the system supports ARI
 - OCe14401-NX - individually configurable to NIC and RoCE personalities
 - OCe14401-UX - individually configurable to NIC, RoCE, iSCSI, or FCoE personalities
- Low-profile PCIe form factor
- SFF-8436 compliant QSFP+ interface supporting optics and direct attach cables

Protocol-Specific Capabilities

- NIC capabilities include
 - NDIS 5.2, 6.0, and 6.2-compliant Ethernet functionality
 - IPv4/IPv6 TCP, UDP checksum offload
 - IPv4/IPv6 RSS
 - IPv4/IPv6 LRO
 - IPv4/IPv6 LSO
 - Programmable MAC addresses
 - Up to 128 MAC/VLAN addresses
 - Supports hash-based multicast MAC address filters
 - Supports hash-based broadcast frame filters per port
 - VLAN insertion and extraction
 - Jumbo packet support up to 9000 bytes
- iSCSI capabilities include
 - Full iSCSI protocol offload
 - Header, data digest (CRC), and PDUs
 - Direct data placement of SCSI data
 - Up to 4K outstanding commands (iSCSI initiator mode only)
 - Up to 512 offloaded iSCSI connections (iSCSI initiator mode only)
 - iSCSI initiator and concurrent initiator/target modes
 - Supports multipath I/O
 - T10 PI support for end-to-end data integrity (for target mode drivers)
- FCoE capabilities include
 - Hardware offloads of Ethernet TCP/IP and concurrent iSCSI and FCoE
 - ANSI T11 FC-BB-5 support
 - Programmable WWN
 - Supports FIP and FCoE ether types
 - Concurrent logins (RPI): up to 8K per adapter
 - Open exchanges (XRI): up to 4K per adapter
 - FCoE initiator and target modes
 - NPIV Interfaces:
 - ◆ For 2x10GbE and 1x40GbE adapters, up to 255 NPIV interfaces per port
 - ◆ For the 4x10GbE adapter, up to 127 NPIV interfaces per port
 - ◆ T10 PI support for end-to-end data integrity (for target mode drivers)
 - RoCE capabilities include
 - ◆ Direct data placement in application buffers without CPU intervention
 - ◆ Supports IBTA RoCE specifications
 - ◆ Supports Linux Open Fabrics Enterprise Distribution (OFED)
 - ◆ Low latency queues for small packet sends and receives

- ◆ Windows Server SMB Direct (SMB over RDMA)

Adapter Identification

Each adapter ships with several numbers clearly marked on the board. Emulex recommends recording these numbers before installation.

- Institute of Electrical and Electronics Engineers (IEEE) address – a unique 64-bit identifier used for system configuration
- WWN – derived from the IEEE address; the FC industry uses the WWN for FC connectivity.
- Serial number – assigned by Emulex and used when communicating with Emulex

If the adapter has two ports, it has two IEEE addresses and two WWNs, one for each port.

Abbreviations

AOC	active optical cable
ARI	alternative routing-ID interpretation
CNA	Converged Network Adapter
CPU	central processing unit
CRC	cyclic redundancy check
DAC	direct-attach copper
DDR3	double data rate type three
ESD	Electrostatic Discharge
FC	Fibre Channel
FCoE	Fibre Channel over Ethernet
FIP	FCoE Initialization Protocol
GB	gigabyte
Gb	gigabit
GbE	gigabit Ethernet
Gbps	gigabits per seconds
GT/s	gigatransfers per second
IBTA	InfiniBand Trade Association
IEEE	Institute of Electrical and Electronics Engineers
IOC	I/O controller
IP	Internet Protocol
iSCSI	Internet Small Computer System Interface
LED	light-emitting diode

LRO	large receive offload
LSO	large segment offload
MAC	Media Access Control
Mbit	megabit
mm	millimeters
NDIS	Network Driver Interface Specification
NIC	network interface card
NPIV	N_Port ID Virtualization
OFED	OpenFabrics Enterprise Distribution
PCBA	printed circuit board assembly
PCIe	Peripheral Component Interconnect Express
PCIe CEM	PCIe Card Electromechanical
PDU	protocol data unit
POST	power-on self-test
QSFP+	Quad Small Form Factor Pluggable
RDMA	remote direct memory access
RH	relative humidity
RoCE	RDMA over Converged Ethernet
RoHS	Restriction of Hazardous Substances
RSS	receive-side scaling
SAN	storage area network
SDRAM	synchronous dynamic random-access memory
SFP	small form-factor pluggable
SMB	server message block
SPI	Serial Peripheral Interface
SR-IOV	single root I/O virtualization
SRM	storage resource management
T10 PI	T10 Protection Information
TCP	Transmission Control Protocol
TOR	top of rack
UDP	User Datagram Protocol
VLAN	virtual local area network
vNIC	virtual network interface card
VPD	vital product data
WWN	World Wide Name

2. Installation

This section provides information on converting from the standard bracket to a low-profile adapter bracket, if applicable, and installing the adapter in a computer.

Preparing the Adapter for Installation

A standard, full-height PCIe bracket is installed. A low-profile bracket is included in the box with the adapter (except for the OCe14104 adapter, which cannot use the low-profile bracket).

If you want to change the bracket to the low-profile version, follow the procedure in this section; otherwise, proceed to “Installing the Adapter” on page 16.

To change the bracket:

1. Some adapters come with optical transceivers embedded in their cage assemblies. These optical transceivers must be removed before the bracket can be removed. If the adapter does not include optical transceivers, skip to step 4.

The low-profile mounting bracket is shorter than the standard bracket; approximately 3.11 in. (7.9 cm) compared to 4.75 in. (12.06 cm) long.

Caution: This is a delicate operation—take care not to damage the optical transceiver.

The adapter uses different types of optical transceivers. Figure 2-1 on page 14 shows an example of one type with the bail (handle) extended.

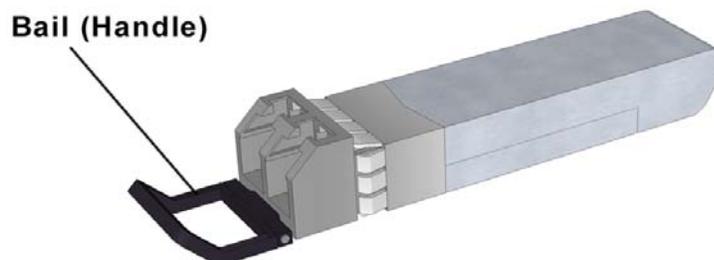


Figure 2-1 Optical Transceiver Example

2. To remove a transceiver, pull the bail (handle) out and down to release the latch and gently pull the transceiver out. Do not force it. After the latch is released, the transceiver slides out easily.

Figure 2-2 on page 15 shows a transceiver with the latch released (bail extended) and another transceiver latched in place.

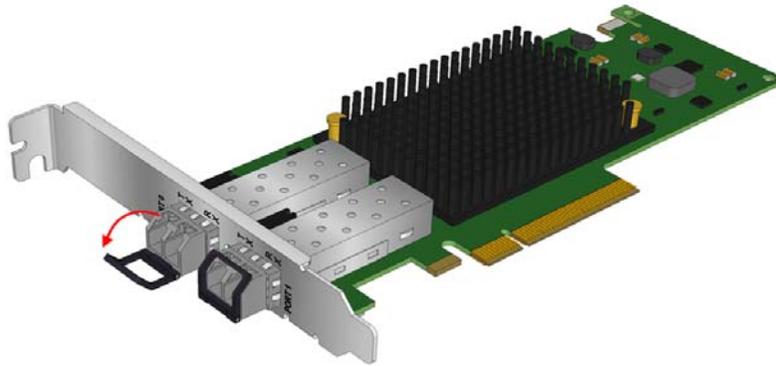


Figure 2-2 Releasing the Latch on an Optical Transceiver

3. Observing ESD precautions, store the transceiver in an ESD-safe place.
4. Remove the mounting bracket screws from the top of the adapter. Figure 2-3 on page 15 shows the screws that are removed from the bracket.

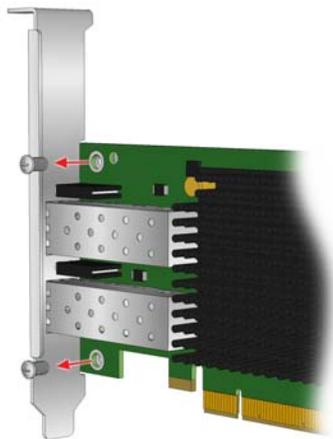


Figure 2-3 Removing the Bracket

5. Remove the bracket and store it for future use.
6. Align the new mounting bracket tabs with the holes in the adapter.
Note: For some adapters, be careful not to push the bracket past the transceiver. Ensure that the LEDs are properly aligned with the holes in the bracket.
7. Re-install the screws that attach the adapter to the bracket.
8. Re-install the transceiver, if it was removed, by sliding it into the housing. When the latch engages, it clicks. Push the bail back into place.

Installing the Adapter

To install the adapter in the computer, perform the following steps:

1. Turn off the computer and unplug it.
2. Remove the computer case.
3. Remove the blank panel from an empty PCIe bus slot.
4. Insert the adapter into the empty x8 or x16 PCIe bus slot. Press firmly until the adapter is seated.
5. Secure the adapter's mounting bracket to the case with a panel screw or clip.
6. Replace the computer case and tighten the case screws.

The adapter is now installed in the server and is ready to be attached to devices.

3. Attaching Devices to the Adapter

An adapter does not allow normal data transmission on a copper link, unless it is connected to a compatible copper interface connection. The following sections describe how to connect devices to the adapter using different cable types.

Connecting Devices to Adapters Using a DAC or AOC Cable

The following adapters can be connected to a DAC or AOC cable:

- OCe14101-NX
- OCe14102-NX
- OCe14102-UX
- OCe14104-NX
- OCe14104-UX
- OCe14401-NX
- OCe14401-UX

The cable and connector specifications are listed in Table 3-1 on page 17 and Table 3-2 on page 17.

Table 3-1 OCe14101-NX, OCe14102-NX/-UX, and OCe14104-NX/-UX Cable and Connector Specifications

Cable Type	Maximum Length (meters)	Minimum Length (meters)	Connector
10GbE SFP+ Passive DAC Cable	5	0.5	DAC
10GbE SFP+ Active DAC Cable	10	0.5	DAC
10GbE SFP+ Active Optical Cable	7	1	AOC

Table 3-2 OCe14401-NX/-UX Cable and Connector Specifications

Cable Type	Maximum Length (meters)	Minimum Length (meters)	Connector
40GbE QSFP+ Passive DAC Cable	5	0.5	DAC
40GbE QSFP+ Active DAC Cable	10	0.5	DAC

To attach devices to the adapter:

1. Connect the cable to the adapter. When connecting a DAC or AOC cable, ensure that the SFP+ cages do not have optical transceivers installed in them. To remove optical transceivers, see “Preparing the Adapter for Installation” on page 14.
2. After confirming that there are no optical transceivers installed, insert the DAC or AOC transceiver into the SFP+ cage on the OCe14100-series adapter as shown in

Figure 3-1 on page 18 or the OCe14400-series adapter as shown in Figure 3-2 on page 18.

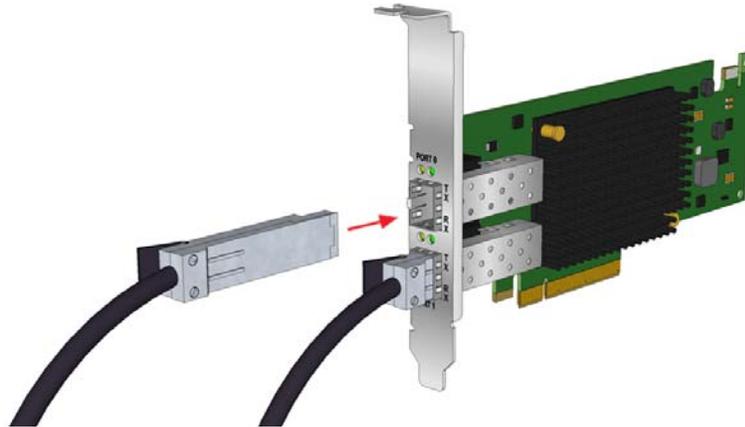


Figure 3-1 Connecting a DAC Cable to the OCe14100-series -NX/-UX Adapters

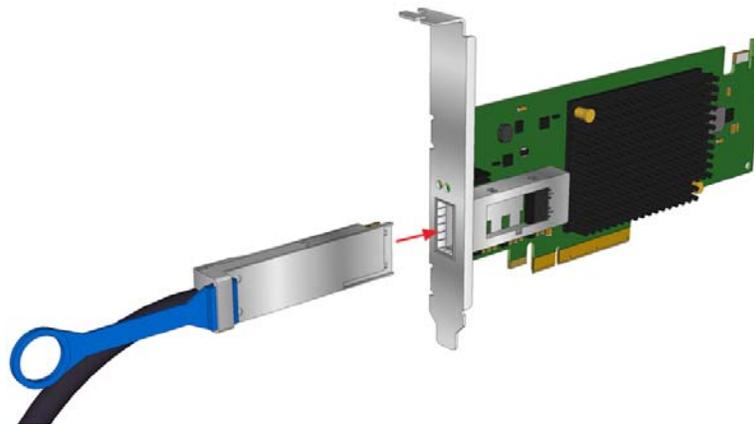


Figure 3-2 Connecting a DAC Cable to the OCe14100-series -NX/-UX Adapters

3. After the cable is connected to the adapter, connect the other end of the cable to a suitable device, such as a TOR switch.

After the device is connected to the adapter, you are ready to apply power to the computer. See “Applying Power” on page 23.

After the device is powered on, you can view the LED indicators. See “Viewing the LEDs” on page 23.

Emulex OneConnect Accessories

Table 3-3 on page 19 and Table 3-4 on page 19 provide model number, name, interface, and required quantities, if you want to order additional or replacement transceivers or cables.

Table 3-3 OCe14101-NX, OCe14102-NX, and OCe14104-NX/-UX Adapter Emulex OneConnect Accessories

Model Number	Model Name	Quantity	Interface
OC10-SR-OPT-1	Emulex OneConnect 10Base-SR Optical SFP+ Transceiver	1 pc	10GBASE-SR Optical
OC10-SR-OPT-2	Emulex OneConnect 10Base-SR Optical SFP+ Transceivers (2 pcs)	2 pcs	10GBASE-SR Optical
OC10-LR-OPT-1	Emulex OneConnect 10Base-LR Optical SFP+ Transceiver	1 pc	10GBASE-LR Optical

Table 3-4 OCe14401-NX/UX Adapter Emulex OneConnect Accessories

Model Number	Model Name	Quantity	Interface
OC40-SR4-OPT-1	Emulex OneConnect 40Base-SR4 Optical QSFP+ Transceiver	1 pc	40Gbase-SR4 Optical

Notes

- For optical adapter support, you must order either a short reach optical adapter model (-NM or -UM) or a direct attach model with an Emulex OneConnect accessory transceiver kit.
- Only Emulex accessories are warranted and fully supported by Emulex Technical Support.

Connecting Devices to Adapters Using an Optical Cable with LC Connectors

The following adapters can be connected to a fiber optic cable with an embedded optical transceiver:

- OCe14101-NM
- OCe14102-NM
- OCe14102-UM
- OCe14104-NM
- OCe14104-UM

The cable and connector specifications are listed in Table 3-1 on page 17. For AOC cables see Table 3-6 on page 22.

Table 3-5 OCe14101-NM, OCe14102-NM/-UM, and OCe14104-NM/-UM Adapter Cable and Connector Specifications

Cable Type	Maximum Length (meters)	Minimum Length (meters)	Connector
Fiber Optic Cable (Ethernet Only) Long Range, LC-LC Singlemode Fiber (SMF) 10 Gb per second (Gbps)	10,000	2	LC
OM3 - Multimode 50/125 micron fiber (2000 MHz*km bandwidth cable) with LC connectors:			
1 Gbps (Not specified by IEEE 802.3)	550	2	LC
10 Gbps	300	2	LC
OM2 - Multimode 50/125 micron fiber (500 MHz*km bandwidth cable) with LC connectors:			
1 Gbps	550	2	LC
10 Gbps	82	2	LC
OM1 - Multimode 62.5/125 micron fiber (200 MHz*km bandwidth cable) with LC connectors:			
1 Gbps	275	2	LC
10 Gbps	26	2	LC

To attach devices to the adapter:

1. Connect the optical cable to the adapter. When connecting an optical cable, ensure that the cages have optical transceivers installed in them (Figure 3-3 on page 21).

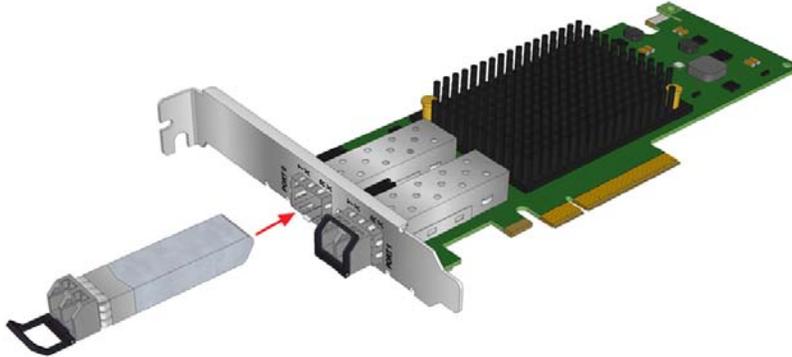


Figure 3-3 Installing an Optical Transceiver for the OCe14000-series -NM/-UM Adapters

2. After the optical transceivers are installed, insert the optical cable into the LC connectors on the adapter as shown in Figure 3-4 on page 21.

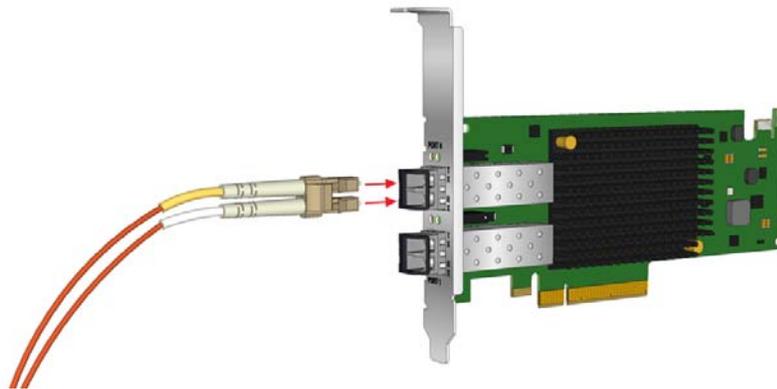


Figure 3-4 Connecting a Fiber Optic Cable for the OCe14000-series -NM/-UM Adapters

3. After the appropriate cable is connected to the adapter, connect the other end of the cable to a suitable device, such as a TOR switch.

After the device is connected to the adapter, you are ready to apply power to the computer. See “Applying Power” on page 23.

After the device is powered on, you can view the LED indicators. See “Viewing the LEDs” on page 23.

Connecting Devices to Adapters Using a UTP or CAT Cable

The OCe14102-NT and OCe14102-UT adapters can be connected with an unshielded twisted pair (UTP) or shielded twisted pair (STP) copper cable (commonly referred to as a Category or 'CAT' cable).

The cable and connector specifications are listed in Table 3-1 on page 17.

Table 3-6 OCe14102-NT/-UT Adapter Cable and Connector Specifications

Cable Type	Maximum Length	Connector
CAT 6 STP, CAT 6A UTP/STP, CAT 7 STP in 10G mode	100 meters (328 feet)	RJ-45
CAT 6 UTP (screened) in 10G mode	55 meters (180 feet)	RJ-45
CAT 5E (or higher category cable) in 1G (1000BASE-T) mode	100 meters (328 feet)	RJ-45

To attach devices to the adapter:

1. Connect one end of the CAT cable to the 10GBASE-T adapter.
2. After the appropriate cable is connected to the adapter, connect the other end of the cable to a suitable device, such as a TOR switch or female RJ45 patch panel.
3. After the device is connected to the adapter, you are ready to apply power to the computer. See “Applying Power” on page 23.
4. After the device is powered on, you can view the LED indicators. See “Viewing the LEDs” on page 23.

4. Applying Power and Viewing the LEDs

This section provides instructions on how to apply power and how to interpret the LEDs for various adapter models.

Applying Power

To apply power:

1. Verify that the adapter is securely installed in the computer.
2. Verify that the correct device is attached.
3. Plug in and turn on the computer.
4. Observe the boot banner for POST results.

LED Indicators

For the OCe14102-NT/UT Adapters

Dual Color Amber/Green LED (Link)

- On (constantly green) = Link up at 1000BASE-T
- On (constantly amber) = Link up at 10GBASE-T
- Off = Link down

Green LED (Ethernet Activity)

- Blink = Activity on the Ethernet link
- Off = No activity on the Ethernet link

For All Other OCe14000-series Adapters

Amber LED (Link)

- On (constantly) = Link up
- Off = Link down

Green LED (Ethernet Activity)

- Blink = Activity on the Ethernet link
- Off = No activity on the Ethernet link

Viewing the LEDs

The LED indicators in Figure 4-1 on page 24 pertain to the following adapter models:

- OCe14101-NM/-NX,

- OCe14102-NM/-NX
- OCe14102-UX/-UM

Each port connector has two LEDs: an amber LED and a green LED.

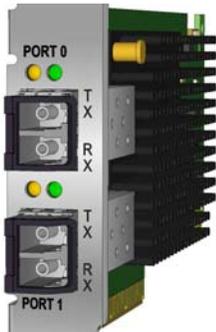


Figure 4-1 OCe14101-NM/-NX, OCe14102-NM/-NX, and OCe14102-UX/-UM Adapter LED Indicators

The LED indicators as shown in Figure 4-2 on page 24 pertain to the single port OCe14401-NX/-UX adapter models. The OCe14401 adapters have one green light and one amber light.

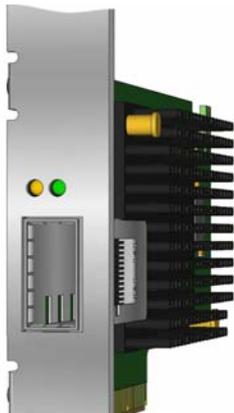


Figure 4-2 OCe14401-NX/-UX Adapter LED Indicators

The LED indicators as shown in Figure 4-3 on page 25 pertain to the dual port OCe14102-NT/-UT adapter models. Each port connector has a dual color amber/green LED.

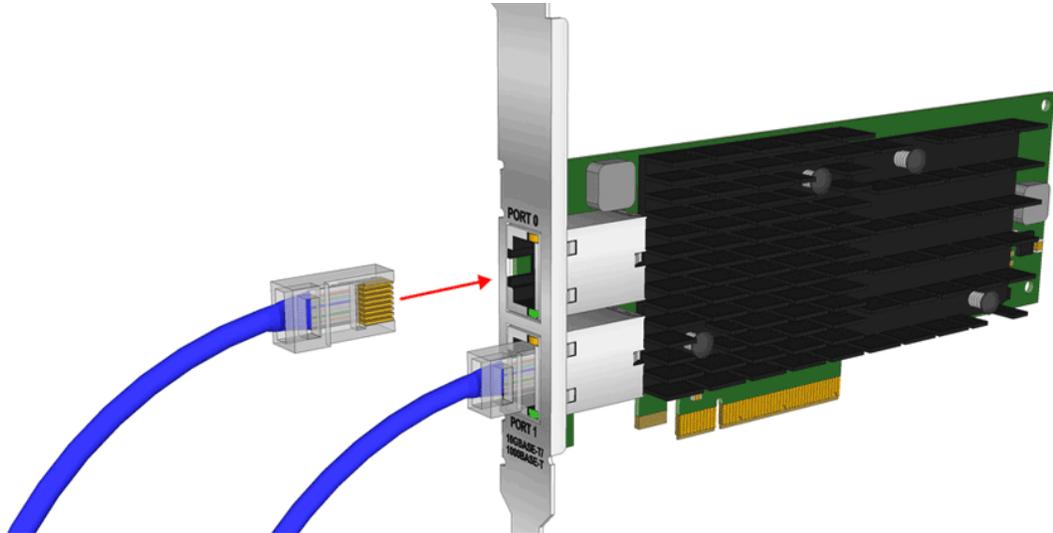


Figure 4-3 OCe14102-NT and OCe14102-UT LED Indicators

The LED indicators in Figure 4-4 on page 25 pertain to the OCe14104-NM and OCe14104-UM adapter models. Each port connector has a dual color amber/green LED.

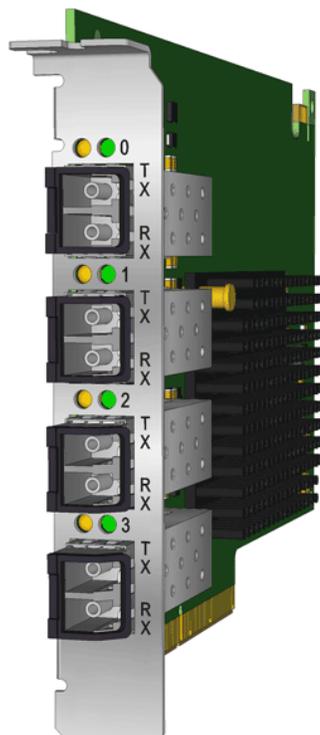


Figure 4-4 OCe14104-NM/-UM LED Indicators

5. References

Specifications

Table 5-1 on page 26 provides information for OCe14101, OCe14102, OCe14104, and OCe14401 adapters.

Table 5-1 Adapter Specifications

Parameter	Range
Physical Dimensions	<p>OCe14104-NX, OCe14104-UX, OCe14104-NM, and OCE14104-UM 4 port SFP+ adapters are available in the standard, full-height form factor only.</p> <ul style="list-style-type: none"> ○ Standard, full-height form factor, 6.600 inches by 4.3760 inches (167.64 mm by 111.15 mm) and accommodates the full-height profile bracket only. <p>All 1 port and 2 port SFP+, 1 port QSFP+ and 2 port 10GbE OneConnect adapters:</p> <ul style="list-style-type: none"> ○ Low-profile form factor, 6.600 inches by 2.713 inches (167.64 mm by 68.910mm), and accommodates both the full-height and low-profile brackets.
Power Requirements	<p>OCe14101 and OCe14102 SFP+ adapters:</p> <ul style="list-style-type: none"> ○ 9.2 Watts (typical optical, 10GbE) ○ 8.2 Watts (typical passive 10GbE DAC cable) <p>OCe14102 10GBASE-T adapters:</p> <ul style="list-style-type: none"> ○ 16.0 Watts (typical 10 Gbps, 2-ports) ○ 11.5 Watts (typical 1 Gbps, 2-ports) ○ 12.9 Watts (typical 10 Gbps, 1-port) ○ 10.8 Watts (typical 1 Gbps, 1-port) <p>OCe14104 adapters</p> <ul style="list-style-type: none"> ○ 11.33 Watts (typical card power with optic modules) ○ 8.69 Watts (typical power with passive Cu DAC cables) <p>OCe14401 QSFP+ adapters:</p> <ul style="list-style-type: none"> ○ 9.96 Watts (typical optical, 40GbE) ○ 8.63 Watts (typical passive 40GbE DAC cable)
Airflow	<p>OCe14101, OCe14102, and OCe14104 SFP+ adapters: 150 linear feet per minute (minimum)</p> <p>OCe14102 10GBASE-T and OCe14401 QSFP+ adapters: 200 linear feet per minute (minimum)</p>
Temperature	<p>0°C to 55°C (operating)</p> <p>-40°C to 70°C (non-operating)</p> <p>Note: Operating the adapter in higher temperatures or lower air flow may result in premature failures.</p>
Humidity	<p>Operating: 10% to 90% RH, non-condensing, 22°C wet bulb</p> <p>Non-operating: 5% to 95% RH, non-condensing, 22°C wet bulb</p>

Table 5-1 Adapter Specifications (Continued)

Parameter	Range
Agency Approvals	<ul style="list-style-type: none"> • Class 1 Laser Product per DHHS 21CFR (J) & EN60825-1 when equipped with approved optical devices • UL recognized to UL60950-1 2nd Edition • cUR recognized to CSA 22.2, No. 60950-1-07 • TUV certified to EN60950-1:2006 +A11 +A1 +A12+A2 • FCC Rules, Part 15, Subpart B, Class A • Industry Canada, ICES-003, Class A • EMC Directive 2004/108/EC and 2014/30/EU (CE Mark) EN55022:2010, Class A EN55024:2010 • Australian EMC Framework (C-Tick Mark) AS/NZS CISPR22:2009 +A1, Class A • Japan VCCI, Class A • Taiwan BSMI, Class A • Korea MSIP, Class A • RoHS Compliant (Directive 2011/65/EU) • China RoHS compliant
Vibration, peak acceleration	0.25g (5 Hz to 500 Hz) (Sweep Rate = 1 octave/min.)

FCC and Regulatory Notices

OCe14000-series Adapters

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

Jeff Benck, President and Chief Executive Officer

Emulex Corporation (714) 662-5600

3333 Susan St. Costa Mesa, CA. 92626 USA

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. The reader is cautioned that changes or modifications made to the equipment not

expressly approved by Emulex could void the user's authority to operate this equipment. The above statement applies to products marketed in the USA.

This class A digital apparatus meets all requirements of the Industry Canada (IC) Interference - Causing Equipment Standard (ICES-003).

Cet appareil numérique de la classe A respecte toutes les exigences du règlement sur le matériel brouilleur du Canada. CAN ICES-3 (A)/ NMB-3 (A)

Notice for Japan and Translations (VCCI)

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

Translation:

This is a Class A product. If this equipment is used in a domestic environment, radio interference may occur, in which case, the user may be required to take corrective action. VCCI-A.

Notice for Taiwan and Translations (BSMI)

警告使用者：
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Translation:

This equipment is a Class A ITE, and operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

Notice for South Korea and Translations (MSIP)

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

Translation:

Sellers and users of this equipment take note that this equipment is EMC approved for Class A industrial use, and as such is not intended for residential use.

Declarations of Conformity

OCe14000-series Adapters

This equipment complies with CISPR22/EN55022 Class A.

WARNING: This is a class A product. In a domestic environment, this product may cause radio interference requiring the user to take adequate measures.

Note: Changes or modifications not expressly approved by Emulex Corporation, including the use of non-Emulex approved optical transceivers, could void the user's authority to operate this equipment.

DECLARATION OF CONFORMITY	
Manufacturer:	Emulex Design and Manufacturing Corporation 3333 Susan Street Costa Mesa, CA. 92626 USA
declares under sole responsibility that the product:	
Product Name:	OneConnect® UCNA
Regulatory Model:	P008827, P008933, P009956, P010215
Assembly Number:	P008827-xxx, P008933-xxx, P009956-xxx, P010215-xxx (<i>x=alphanumeric</i>)
To which this Declaration relates is in conformity with the following standards or other documents for Information Technology Equipment (ITE):	
Product Safety:	Electromagnetic Compatibility (Class A):
UL Recognized to UL 60950-1:2007, Second Edition	FCC Rules, CFR Title 47, Part 15, Subpart B
cUR Recognized to CSA 22.2, No. 60950-1-07	Industry Canada, ICES-003:2012 (Issue 5)
IEC 60950-1:2005 +A1 +A2 (CB Scheme)	EN55022:2010 / CISPR 22:2008
EN 60950-1:2006 +A11 +A1 +A12 +A2	EN55024:2010 / CISPR 24:2010
EN 60825-1:2007*	AS/NZS CISPR22:2009+A1
CFR Title 21, Laser AEL Class 1, FDA/CDRH*	VCCI:2014
* when equipped with approved optical transceivers	CNS 13438:2006 (complete), KN22, KN24
Hazardous Substances:	
The object of this declaration described above is in conformity with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment, and has been validated per EN 50581:2012.	
Supplementary Information:	<ol style="list-style-type: none"> The product was tested in a typical configuration. The product is in compliance with the following directives: <ul style="list-style-type: none"> European Union Low Voltage Directives 2006/95/EC and 2014/35/EU European Union EMC Directives 2004/108/EC and 2014/30/EU European Union RoHS Directive 2011/65/EU Australian C-Tick Mark framework
January 12, 2015 Costa Mesa, CA	 Jeff Benck President and Chief Executive Officer
European Contact:	Emulex Ireland Company Plaza 255, Blanchardstown Corporate Park 2, Ballycoolin, Dublin 15 Ireland +353 (0)1 652 1700 www.emulex.com

Laser Safety Notice

Emulex products incorporating optical laser transceivers contain Class 1 laser devices, which comply with DHHS/CDRH 21CFR Sub-chapter J, and the international laser safety standard EN/IEC 60825-1. Class 1 laser devices are not considered to be hazardous.

The use of non-Emulex approved optical transceivers, or transceivers which do not comply with the Class 1 radiation performance requirements defined in DHHS/CDRH 21CFR Sub-chapter J and IEC 60825-1, may expose the user to hazardous laser radiation, and such devices should not be used with Emulex products.

