



# **Broadcom® 95xx PCIe 4.0 MegaRAID™ and HBA Tri-Mode Storage Adapters**

**User Guide  
Version 2.13**

---

Copyright © 2018–2025 Broadcom. All Rights Reserved. The term “Broadcom” refers to Broadcom Inc. and/or its subsidiaries. For more information, go to [www.broadcom.com](http://www.broadcom.com). All trademarks, trade names, service marks, and logos referenced herein belong to their respective companies.

Broadcom reserves the right to make changes without further notice to any products or data herein to improve reliability, function, or design. Information furnished by Broadcom is believed to be accurate and reliable. However, Broadcom does not assume any liability arising out of the application or use of this information, nor the application or use of any product or circuit described herein, neither does it convey any license under its patent rights nor the rights of others.



# Table of Contents

<b>Broadcom PCIe 4.0 MegaRAID and HBA Tri-Mode Storage Adapters.....</b>	<b>5</b>
Overview.....	5
<b>Features.....</b>	<b>7</b>
RAID Features.....	7
Operating System Support.....	7
PCIe Host Interface.....	8
LED Management.....	8
Tri-Mode Storage Interface Features.....	8
<b>Tri-Mode Storage Interface.....</b>	<b>10</b>
SAS/SATA Support.....	10
PCIe (NVMe) Support.....	11
Common REFCLK Support.....	12
<b>Backplane Management.....</b>	<b>13</b>
Universal Backplane Management.....	13
Virtual Pin Port Management.....	13
Sideband Signals.....	13
<b>Cables and Cabling Configurations.....</b>	<b>16</b>
Storage Interface Cabling.....	17
Backplane Connectors.....	18
External Adapter Connector Pinout.....	18
<b>CacheVault Data Protection.....</b>	<b>20</b>
<b>Adapter Security.....</b>	<b>21</b>
<b>Adapter Installation Instructions.....</b>	<b>22</b>
Adapter Installation.....	22
OCP Adapter Installation.....	25
Removing the OCP Adapter.....	26
M.2 Adapter Installation Instructions.....	27
<b>Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics.....</b>	<b>28</b>
MegaRAID 9560-16i Adapter – Connector and LED Designations.....	28
MegaRAID 9560-8i Adapter – Connector and LED Designations.....	29
MegaRAID 9580-8i8e Adapter – Connector and LED Designations.....	31
MegaRAID 9540-8i Adapter – Connector and LED Designations.....	32
MegaRAID 9520-8i Adapter – Connector and LED Designations.....	34
MegaRAID 9524-8i Adapter – Connector and LED Designations.....	35
MegaRAID 9562-16i Adapter – Connector and LED Designations.....	36

HBA 9500-16i Adapter – Connector and LED Designations.....	37
HBA 9500-8i Adapter – Connector and LED Designations.....	38
HBA 9500-16e Adapter – Connector and LED Designations.....	40
HBA 9500-8e Adapter – Connector and LED Designations.....	41
HBA 9502-16i Adapter – Connector and LED Designations.....	42
<b>Tri-Mode Storage Adapter Technical Specifications.....</b>	<b>44</b>
Board Storage Conditions.....	44
Board Operating Conditions.....	44
Power Supply Requirements.....	45
MegaRAID Tri-Mode Storage Adapter Power Supply Requirements.....	45
HBA Tri-Mode Storage Adapter Power Supply Requirements.....	45
MegaRAID and HBA Tri-Mode OCP Adapter Power Supply Requirements.....	46
<b>Marks, Certifications, Compliance, and Safety Characteristics.....</b>	<b>47</b>
Marks, Certifications, and Compliance.....	47
FCC Compliance.....	48
Safety Characteristics.....	49
VCCI – Japan.....	49
Taiwan BSMI Compliance.....	49
<b>Appendix A: Cable Drawings and Pinouts.....</b>	<b>50</b>
Cable 05-60001-00.....	50
Cable 05-60002-00.....	52
Cable 05-60003-00.....	53
Cable 05-60004-00.....	54
Cable 05-60005-00.....	55
Cable 05-60006-00.....	56
Cable 05-60007-00.....	58
Cable 05-60009-00.....	59
<b>Appendix B: Revision History.....</b>	<b>60</b>

# Broadcom PCIe 4.0 MegaRAID and HBA Tri-Mode Storage Adapters

This document is the primary reference and user guide for the Broadcom® PCIe 4.0 MegaRAID™ tri-mode storage adapters and Broadcom PCIe 4.0 HBA tri-mode storage adapters, based on the Broadcom PCIe 4.0 tri-mode controller devices. This document contains the complete installation instructions and specifications for the following PCIe 4.0 tri-mode storage adapters, referred to as adapters:

- MegaRAID 9560-16i
- MegaRAID 9560-8i
- MegaRAID 9580-8i8e
- MegaRAID 9540-8i
- MegaRAID 9520-8i
- MegaRAID 9524-8i
- MegaRAID 9562-16i
- HBA 9500-16i
- HBA 9500-8i
- HBA 9500-16e
- HBA 9500-8e
- HBA 9502-16i

## Overview

The adapters, based on the SAS3916, SAS3908, SAS3816, SAS3808, or SAS3808N tri-mode controller, are high-performance PCIe-to-SATA/SAS/PCIe (tri-mode) storage adapters. Broadcom tri-mode SerDes technology enables operation of SAS, SATA, or PCIe (NVMe) storage devices in a single drive bay. A single controller can operate in all three modes concurrently: SAS, SATA, and PCIe/NVMe. The adapters negotiate between the speeds and the protocols to recognize and concurrently interface with these three storage devices types.

The adapters provide the following storage interface data transfer rates:

- SAS data transfer rates of 12Gb/s, 6Gb/s, and 3Gb/s per phy
- SATA transfer rates at 6Gb/s and 3Gb/s per phy
- PCIe (NVMe) data transfer rates of 16 GT/s, 8 GT/s, 5 GT/s, and 2.5 GT/s per lane

The following tables summarize key adapter features.

**Table 1: MegaRAID Tri-Mode Storage Adapter (with DDR) Features**

Adapter	9560-16i	9560-8i	9580-8i8e	9562-16i
<b>Ports</b>	16 internal	8 internal	8 internal, 8 external	16 internal
<b>I/O Processor</b>	SAS3916	SAS3908	SAS3916	SAS3916
<b>Form Factor</b>	LP-MD2	LP-MD2	LP-MD2	OCF NIC 3.0 SFF
<b>Storage Interface Connectors</b>	Two SFF-8654 x8	One SFF-8654 x8	One SFF-8654 x8, Two SFF-8644 x4	Two SFF-8654 x8 (vertical)
<b>Host Interface</b>	x8 PCIe 4.0	x8 PCIe 4.0	x8 PCIe 4.0	x8 PCIe 4.0

Adapter	9560-16i	9560-8i	9580-8i8e	9562-16i
Storage Interface	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)
RAID Level Support	00, 0, 1, 5, and 6	00, 0, 1, 5, and 6	00, 0, 1, 5, and 6	00, 0, 1, 5, and 6
RAID Span Support	10, 50, and 60	10, 50, and 60	10, 50, and 60	10, 50, and 60
Cache Memory	8 GB, 2666 MT/s, DDR4 SDRAM	4 GB, 2666 MT/s, DDR4 SDRAM	8 GB, 2666 MT/s, DDR4 SDRAM	8 GB, 2666 MT/s, DDR4 SDRAM
Cache Protection	Yes	Yes	Yes	Yes
Super Capacitor	CVPM05 module	CVPM05 module	CVPM05 module	CVPM05 module

Table 2: MegaRAID Tri-Mode Storage Adapter (without DDR) Features

Adapter	9540-8i	9520-8i	9524-8i
Ports	8 internal	8 internal	8 internal
I/O Processor	SAS3808	SAS3808	SAS3808N
Form Factor	LP-MD2	LP-MD2	M2
Storage Interface Connectors	One SFF-8654 x8	One SFF-8654 x8	One SFF-8654 x8
Host Interface	x8 PCIe 4.0	x8 PCIe 4.0	x4 PCIe 4.0
Storage Interface	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)
RAID Level Support	0, 1	0, 1	0, 1
RAID Span Support	10	10	10
Requires Reserved Memory Region Reporting (RMRR)	Yes	No	No

Table 3: HBA Tri-Mode Storage Adapter Features

Adapter	9500-16i	9500-8i	9500-16e	9500-8e	9502-16i
Ports	16 internal	8 internal	16 external	8 external	16 internal
I/O Processor	SAS3816	SAS3808	SAS3816	SAS3808	SAS3816
Form Factor	LP-MD2	LP-MD2	LP-MD2	LP-MD2	OCP NIC 3.0 SFF
Storage Interface Connectors	Two SFF-8654 x8	One SFF-8654 x8	Four SFF-8644 x4	Two SFF-8644 x4	Two SFF-8654 x8 (vertical)
Host Interface	x8 PCIe 4.0	x8 PCIe 4.0	x8 PCIe 4.0	x8 PCIe 4.0	x8 PCIe 4.0
Storage Interface	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe	SAS, SATA, and PCIe	SAS, SATA, and PCIe (NVMe)

# Features

---

This chapter describes the features that the adapters support.

## RAID Features

The following list includes primary RAID features that the MegaRAID adapters support. For a full description of the RAID features, refer to the *12Gb/s MegaRAID Tri-Mode Software User Guide*, located at [Support Documents and Downloads](#).

- JBOD for SDS environments
- Online Capacity Expansion (OCE)
- Auto resume after loss of system power during array rebuild or OCE
- Single controller multipathing
- Load balancing
- Configurable stripe size up to 1 MB
- Fast initialization for quick array setup
- Check Consistency for background data integrity
- SSD support with SSD Guard™ technology
- Patrol read for media scanning and repairing
- Disk data format (DDF)-compliant Configuration on Disk (COD)
- Self-Monitoring, Analysis, and Reporting Technology (S.M.A.R.T) support
- Global and dedicated hot spare with revertible hot spare support
- Automatic rebuild
- Enclosure affinity
- Emergency SATA hot spare for SAS arrays
- Enclosure management
- SCSI Enclosure Services (SES) (inband)
- SGPIO (sideband)
- DataBolt bandwidth optimizer technology support for compatible expander-based enclosures
- Shield state drive diagnostic technology

## Operating System Support

The tri-mode storage adapters support the operating systems in the following list.

For specific version information, refer to the *MegaRAID Tri-Mode Device Driver Installation User Guide*, which you can download from [Support Documents and Downloads](#).

- Microsoft Windows
- VMware® vSphere®/ESXi
- Red Hat Enterprise Linux
- SuSE Linux
- Ubuntu Linux
- Citrix XenServer
- CentOS Linux
- Debian Linux
- Oracle Enterprise Linux
- Fedora
- FreeBSD

Firmware and drivers are routinely updated. Visit the Broadcom [Support Documents and Downloads](#) page to download the latest firmware and driver for the adapter.

## PCIe Host Interface

The adapter's PCIe 4.0 host interface provides maximum transmission and reception rates of up to 16 GT/s per lane. The tri-mode controller uses a packet-based communication protocol to communicate over the serial interconnect. Other PCIe host interface features include the following:

- Eight-lane PCIe host interface
- PCIe hot plug
- Power management:
  - Supports the *PCI Bus Power Management Interface Specification Revision 1.2*
  - Supports Active State Power Management, including the L0 states, by placing links in a power-saving mode during times of no link activity
- Error handling
- High bandwidth per pin with low overhead and low latency
- Lane reversal and polarity inversion
- Single-phy (one-lane) link transfer rate of 16 GT/s, 8 GT/s, 5 GT/s, and 2.5 GT/s in each direction
- Eight-lane aggregate bandwidth of up to 16GB/s
- Support for x8, x4, x2, and x1 link widths

## LED Management

Broadcom adapter LED management support differs between internal and external connecting adapters.

The internal adapters offer LED management support for SAS/SATA backplanes and (PCIe) NVMe backplanes. External connect adapters offer enclosure LED management support for enclosure implementations through SES. See [Backplane Management](#) for more information.

## Tri-Mode Storage Interface Features

The adapter's storage interface supports concurrent operation with SAS, SATA, and PCIe (NVMe) devices to provide a fully functional solution for any storage environment:

- PCIe (NVMe) interface features:

- Up to sixteen x1, eight x2, or four x4 NVMe direct-attach drive support
- Data transfer at 16 GT/s, 8 GT/s, 5 GT/s, and 2.5 GT/s
- Independent resets and configuration
- Common reference clock and separate reference clock independent SSC (SRIS) support
- SAS features:
  - SAS data transfers at 12Gb/s, 6Gb/s, and 3Gb/s
  - DataBolt technology on all SAS phys to improve performance
  - Serial, point-to-point, enterprise-level storage interface
  - Wide ports that contain multiple phys
  - Narrow ports that contain a single phy
  - SAS phy power management
  - Data transfer by using SCSI information units
  - T10 data protection management
  - Support for persistent connection capability
  - Support for SPL-3 initiate close capability
  - Configurable Rx and Tx polarity inversion
  - Configurable phy-to-disk mapping
  - Configurable SSC
- SATA interface features:
  - SATA and STP data transfers at 6Gb/s and 3Gb/s
  - Addressing of multiple SATA targets through an expander

## Tri-Mode Storage Interface

The internal adapters can direct attach to SAS, SATA, or NVMe drives. The internal and external adapters support drive attach through PCIe switches or expanders.

### NOTE

Carefully assess any decision to mix SAS and SATA drives within the same virtual drive (VD). Although you can mix drives, the practice is discouraged.

MegaRAID does not permit mixing SAS and NVMe drives or SATA and NVMe drives within the same VD. To mix NVMe and SAS/SATA drives on a MegaRAID adapter, you must configure the drives in separate VDs.

## SAS/SATA Support

The adapters support internal and external storage devices, which allow you to use a system that supports enterprise-class SAS drives and desktop-class SATA III drives.

The storage interface is comprised of either 16 phys or 8 phys, depending on the controller. Dedicated hardware manages the phys in groups of eight, in ascending phy order. One dedicated instance of the SAS phy management hardware manages PHY 0 to PHY 7, and a separate instance of the SAS phy management hardware manages PHY 8 to PHY 15. These SAS phy management hardware instances, or SAS cores, cannot communicate with each other.

When you configure a wide port, the connections must attach exclusively to phys all managed by the same SAS core. If the ports are not managed by the same SAS core, unexpected controller and host behavior occurs. Port 0 to port 7 can be configured as eight separate ports or combined into one or more groups called wide ports (one x4, two x4s, one x8, and so on). Similarly, port 8 to port 15 can be configured as eight separate ports or combined into one or more wide ports. A single wide port cannot combine individual ports or phys sourced by different SAS cores.

The following table indicates the connector-to-SAS core mapping for each adapter. The card layout figures in [Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics](#) show the connector designations for each adapter.

**Table 4: Adapter Port-to-SAS Port Associations**

Adapter	Connector 0	Connector 1	Connector 2	Connector 3
9560-16i	SAS Core 0	SAS Core 1	N/A	N/A
9560-8i	SAS Core 0	N/A	N/A	N/A
9580-8i8e	SAS Core 1	SAS Core 0	SAS Core 0	N/A
9540-8i	SAS Core 0	N/A	N/A	N/A
9520-8i	SAS Core 0	N/A	N/A	N/A
9524-8i	SAS Core 0	N/A	N/A	N/A
9562-16i	SAS Core 0	SAS Core 1	N/A	N/A
9500-16i	SAS Core 0	SAS Core 1	N/A	N/A
9500-8i	SAS Core 0	N/A	N/A	N/A
9500-16e	SAS Core 0	SAS Core 0	SAS Core 1	SAS Core 1
9500-8e	SAS Core 0	SAS Core 0	N/A	N/A
9502-16i	SAS Core 0	SAS Core 1	N/A	N/A



When you configure a boot device in a multipath environment, the target must connect to one or more ports on the same SAS core with AutoPortConfig enabled. The boot device appears to the host system as a single device on the active path. The multipath environment manages a different controller as the passive path.

When you configure data-storage devices in a multipath environment, the rule for creating wide ports applies, but multiple ports from different SAS cores can connect to the data-storage devices. The multipath environment manages data-storage devices that the controller presents more than once.

## PCIe (NVMe) Support

The following table shows how many NVMe drives or Broadcom PEX88000-series switches can directly attach to each adapter. The HBA 9500-16e and HBA 9500-8e adapters do not support direct attach to NVMe drives. The expected topology for the HBA 9500-16e and HBA 9500-8e adapters is a typical JBOF scenario that uses a switch to connect the NVMe drives.

The adapters do not support switch connections wider than x4 and one level deep.

**Table 5: NVMe Devices or PCIe Switch Direct-Attach Options Supported for Each Adapter**

Adapter	x4 NVMe Drives	x2 NVMe Drives	x1 NVMe Drives	x4 Switch
9560-16i	4	8	16	4
9560-8i	2	4	8	2
9580-8i8e	2	4	8	4
9540-8i	2	4	4	0
9520-8i	2	2	2	0
9524-8i	2	2	2	0
9562-16i	4	8	16	4
9500-16i	4	8	16	4
9500-8i	2	4	8	2
9500-16e	0	0	0	4
9500-8e	0	0	0	2
9502-16i	4	8	16	4

The tri-mode device interface contains a SAS core and a PCIe device bridge (PDB). The PDB enables the PCIe (NVMe) storage interface connections, and each PDB can support direct connect to NVMe devices or to x4 PCIe switches. The storage interface is comprised of 16 phys or 8 phys depending on the controller. One PDB manages PHY 0 to PHY 7, and a second PDB manages PHY 8 to PHY 15. The PDBs cannot communicate with each other. This means that a PCIe port of greater than one lane must attach exclusively to phys all managed by the same PDB and must be comprised of adjacent lanes.

The following table indicates how the connectors map to the PDB for each adapter. The card layout figures in [Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics](#) show the connector designations for each adapter.

**Table 6: Adapter Lanes-to-PDB Core Associations**

Adapter	Connector 0	Connector 1	Connector 2	Connector 3
9560-16i	PDB 0	PDB 1	N/A	N/A
9560-8i	PDB 0	N/A	N/A	N/A

Adapter	Connector 0	Connector 1	Connector 2	Connector 3
9580-8i8e	PDB 1	PDB 0	PDB 0	N/A
9540-8i	PDB 0	N/A	N/A	N/A
9520-8i	PDB 0	N/A	N/A	N/A
9524-8i	PDB 0, PDB 1	N/A	N/A	N/A
9562-16i	PDB 0	PDB 1	N/A	N/A
9500-16i	PDB 0	PDB 1	N/A	N/A
9500-8i	PDB 0	N/A	N/A	N/A
9500-16e	PDB 0	PDB 0	PDB 1	PDB 1
9500-8e	PDB 0	PDB 0	N/A	N/A
9502-16i	PDB 0	PDB 1	N/A	N/A

## Common REFCLK Support

Connections that require a common REFCLK include one REFCLK for each quadrant. Each connector is divided into two quadrants.

The adapter uses x8 SFF-8654 (SlimSAS) connectors. For x4 NVMe or PCIe switch connections, the REFCLK sourced by each quadrant directly clocks each attached x4 PCIe connection.

To directly attach x2 or x1 NVMe drives that require a common REFCLK, where more than one drive is sourced from a single quadrant, you must properly fan out the shared REFCLK on the backplane. For x2 and x1 NVMe connections, use SRIS-enabled drives to avoid fanning the clock out on the backplane.

## Backplane Management

Use the information in this chapter to set up the adapter's backplane management options.

The SFF-8448 standard defines how to detect whether the backplane supports a SGPIO or two-wire interface (I<sup>2</sup>C ) for SAS/SATA usage. SFF-9402 is a superset of SFF-8448, adding the PCIe-defined sideband signal, which means that SAS/SATA users see no change in backplane management detection when using the adapters.

### Universal Backplane Management

The adapters provide LED operation and other backplane management of NVMe only, SAS/SATA only, or mixed-protocol backplanes based on the SFF-TA-1005 specification.

SFF-TA-1005 is an industry-standard backplane management specification commonly known as UBM. As long as the backplane management controller is designed in accordance with the UBM specification, the adapter automatically detects the backplane type and functions appropriately.

The adapter supports the industry-standard *SFF-TA-1005 Specification for Universal Backplane Management (UBM)*. UBM provides the following key features:

- Reports the backplane capabilities, including the following:
  - NVMe drive widths
  - Common REFCLK or separate REFCLK support
  - Maximum speeds
  - Designed slot power
- Supports cable order independence, that is, the drive LED control and slot ID are not dependent on cable order.
- Enables drive hot plug insertion through control of PERST# timing.

For existing SAS/SATA backplanes, if BP\_TYPE = 0, the adapter uses SGPIO for legacy backplane management. Refer to the SFF-8485 specification for functionality details. Design new backplanes with the industry-standard SFF-TA-1005 (UBM) specification for backplane management.

### Virtual Pin Port Management

Broadcom requires new designs to enable UBM for backplane management.

The adapter maintains support for Virtual Pin Port (VPP) backplane management for legacy implementations. The adapters provide LED operation for NVMe devices based on the VPP over I<sup>2</sup>C definition. Standard VPP implementation calls for one PCA9555 target per two devices. For each drive pair, the adapter expects to see one PCA9555 target responding to address 0x40 on each pair of NVMe drives.

### Sideband Signals

The internal adapters have one or two x8 SFF-8654 connectors. Each x8 connector provides two sets of sidebands. This section describes the sideband signal usage. The following table defines the sideband signal's pins on the SFF-8654 connector. The last column in the table indicates the strength of the pull-up resistor or pull-down resistor values on the adapter. See [Table 8, Sideband Management Pin Settings](#), for the signal descriptions, and see [Table 9, Internal x8 SFF-8654 Connector Pinout](#), for a complete connector pinout.

**Table 7: Sideband Signal Pinout**

Connector A Side	Connector B Side	Sideband or Vendor Specific Pin Number	UBM Assignments	Direction	Resistor Value
A8	A26	7	BP_TYPE	Input	100-kΩ pull-down
A9	A27	4	2W_RESET#	Output	2.0-kΩ pull-up
A10	A28	3	GND	—	—
A11	A29	+	REFCLK+	Output	—
A12	A30	—	REFCLK-	Output	—
B8	B26	0	2W_CLK	Input/Output	2.0-kΩ pull-up
B9	B27	1	2W_DATA	Input/Output	2.0-kΩ pull-up
B10	B28	2	GND	—	—
B11	B29	5	PERST#	Input/Output	2.0-kΩ pull-up
B12	B30	6	C_TYPE, D_INPL#, CHANGE_DET#	Input/Output	10-kΩ pull-up

The following table describes the sideband signal pin settings.

**Table 8: Sideband Management Pin Settings**

Pin Name	Settings	Description
BP_TYPE	<ul style="list-style-type: none"> <li>0: SGPIO</li> <li>1: Two-wire interface</li> </ul>	Indicates if the backplane uses SGPIO or two-wire interface for management. To maintain backwards compatibility with SPGIO-based backplanes, the adapter has a weak pull-down to default to SGPIO if the backplane does not explicitly drive the signal.
2W_RESET#	<ul style="list-style-type: none"> <li>0: Reset is asserted</li> <li>1: Reset is not asserted</li> </ul>	Optional reset driven by the host if the UBM target reports that the target can be reset.
REFCLK+/-	—	PCIe REFCLK HCSL 100-MHz clock driven by the device side ports to PCIe devices that require REFCLK. If D_INPL# is 0 and BP_TYPE is 1, the adapter enables the REFCLK outputs for that quad of high-speed lanes. When BP_TYPE is 0 or the UBM Clock Routing bit on the backplane is 0, this output is turned off.
2W_CLK	—	The two-wire interface clock signal.
2W_DATA	—	The two-wire interface data signal.
PERST#	<ul style="list-style-type: none"> <li>0: Reset is asserted</li> <li>1: Reset is not asserted</li> </ul>	The adapter drives the PCIe RESET# signal. This signal uses a clamp to ground so that the signal on the adapter powers up LOW until backplane detection warrants the release of this signal for open-drain use. This method ensures that PERST# does not deassert until the directly connected NVMe drive is successfully detected.


Pin Name	Settings	Description
C_TYPE, D_INPL#, CHANGE_DET#	—	<p>Open collector/drain input or output signal:</p> <ul style="list-style-type: none"><li>• C_TYPE. If BP_TYPE is 0, the adapter drives this signal LOW. If BP_TYPE is 1, this signal adheres to the SFF-8448 requirement to drive this signal to 1 in response to floating the signal. Because this signal is an open drain signal, <i>driving</i> to 1 is when a pull-up resistor pulls this signal HIGH.</li><li>• D_INPL#. When C_TYPE is HIGH, the backplane pulls this signal to ground to indicate an NVMe device is connected and a two-wire interface backplane management target might be on the sideband's two-wire interface.</li><li>• CHANGE_DET#. If D_INPL# is 0 and a UBM FRU device is discovered on the two-wire interface, the UBM FRU data can inform the adapter that the device is CHANGE_DET# feature capable. The adapter can rely on this signal as the CHANGE_DET# signal as described in the UBM specification. In this mode, the UBM controller drives this signal LOW to assert CHANGE_DET#.</li></ul>

## Cables and Cabling Configurations

The internal adapter follows the SFF-9402 standard for connector signal assignments.

Each x8 connector includes eight PCIe transmit and receive lanes and two sets of sidebands designated as A and B, in accordance with the SFF-9402 specification. The following figure shows the x8 SFF-8654 pin designations.

**Figure 1: x8 SFF-8654 Pin Designations**

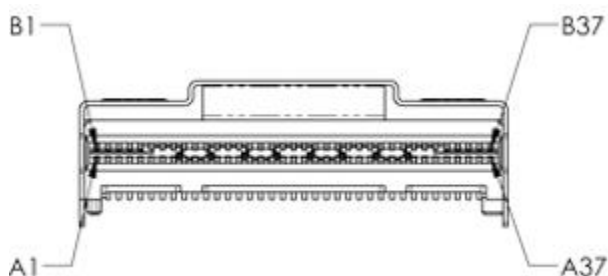

The following table defines the adapter's internal SFF-8654 connector pinouts.

**Table 9: Internal x8 SFF-8654 Connector Pinout**

Pin	Name	Pin	Name
A1	GND	B1	GND
A2	PERp0, RX0+	B2	PETp0, TX0+
A3	PERn0, RX0-	B3	PETn0, TX0-
A4	GND	B4	GND
A5	PERp1, RX1+	B5	PETp1, TX1+
A6	PERn1, RX1-	B6	PETn1, TX1-
A7	GND	B7	GND
A8	BP_TYPEA	B8	2W-CLKA, SClockA
A9	2W_RESETA, SDataOutA	B9	2W-DATAA, SloadA
A10	GND	B10	GND
A11	REFCLKA+	B11	PERSTA#, SDataInA
A12	REFCLKA-	B12	CPRSNTA#, CNTRLR_TYPEA
A13	GND	B13	GND
A14	PERp2, RX2+	B14	PETp2, TX2+
A15	PERn2, RX2-	B15	PETn2, TX2-
A16	GND	B16	GND
A17	PERp3, RX3+	B17	PETp3, TX3+
A18	PERn3, RX3-	B18	PETn3, TX3-
A19	GND	B19	GND
A20	PERp0, RX4+	B20	PETp0, TX4+

Pin	Name	Pin	Name
A21	PERn0, RX4-	B21	PETn0, TX4-
A22	GND	B22	GND
A23	PERp1, RX5+	B23	PETp1, TX5+
A24	PERn1, RX5-	B24	PETn1, TX5-
A25	GND	B25	GND
A26	BP_TYPEB	B26	2W-CLKB, SClockB
A27	2W_RESETB, SDataOutB	B27	2W-DATAB, SLoadB
A28	GND	B28	GND
A29	REFCLKB+	B29	PERSTB#, SDataInB
A30	REFCLKB-	B30	CPRSNTB#, CNTRLR_TYPEB
A31	GND	B31	GND
A32	PERp2, RX6+	B32	PETp2, TX6+
A33	PERn2, RX6-	B33	PETn2, TX6-
A34	GND	B34	GND
A35	PERp3, RX7+	B35	PETp3, TX7+
A36	PERn3, RX7-	B36	PETn3, TX7-
A37	GND	B37	GND

## Storage Interface Cabling

Choose the proper cable for the given backplane type and connectors.

The correct choice is especially important for backplanes that use SFF-8643 for the NVMe connectors. Many of these backplanes use an older legacy-recommended pinout for the NVMe connector instead of a connector pinout based on the SFF-9402 specification. Most backplanes that use either SFF-8612 or SFF-8654 connectors follow the SFF-9402 specification. The pinout recommended in the *PCI Express OCuLink Specification* is equivalent to that recommended for SFF-9402. Verify the connector pinout for the intended backplane to make sure the proper cable is used when connecting to NVMe drives.

Broadcom provides the following cables to use for the adapter. Use the MPN listed to order a cable from Broadcom. If you source your own cables, use the Broadcom part number from the following table and the drawings and pinouts in [Cable Drawings and Pinouts](#).

**Table 10: Internal Adapter Cables**

MPN	Broadcom Cable Part No.	Cable Description	Backplane Connector
05-60001-00	5067-6865	x8 8654 to 2x4 8612, AltWiring 1M	Two x4 SFF-8612 (OCuLink)
05-60002-00	5067-6862	x8 8654 to 2x4 8643 (W), SMC 1M	Two x4 SFF-8643 (mini-SAS HD)
05-60003-00	5067-6866	x8 8654 to 2x4 8643, 9402 SAS 1M	Two x4 SFF-8643 (mini-SAS HD)
05-60004-00	5067-6103	x8 8654 to 2x4 8654, 9402 1M	Two x4 SFF-8654 (SlimSAS)
05-60005-00	5067-6682	x8 8654 to 2xU.2 Direct, 1M	Two U.2 SFF-8639
05-60006-00	5067-7542	x8 8654 to 8xU.3 Direct, 1M	Eight U.3 SFF-8639

MPN	Broadcom Cable Part No.	Cable Description	Backplane Connector
05-60007-00	5067-6869	x8 8654 to 1x8 8654, 9402 1M	One x8 SFF-8654 (SlimSAS)

**Table 11: Adapter Broadcom Cable Use Cases**

MPN	Type	Description
05-60001-00	SAS/SATA and NVMe	Use for backplanes with x4 SFF-8612 connectors with pinouts that follow the SFF-9402 specification.
05-60002-00	NVMe	Specialty cable that provides NVMe connections for SuperMicro Purley backplanes. This cable has white SFF-8643 connectors to indicate that it must connect to the white SFF-8643 connectors on the SuperMicro Purley backplanes.
05-60003-00	SAS/SATA	Use for traditional SAS/SATA connections. Usually backplanes designed to support SAS/SATA only or are double plumbed for U.2 and SAS/SATA drives use SFF-8643 connectors.
05-60004-00	SAS/SATA and NVMe	Use for backplanes with x4 SFF-8654 connectors with pinouts that follow the SFF-9402 specification.
05-60005-00	NVMe	Enables direct connect from the adapter to a U.2 NVMe drive. Use for proof-of-concept type applications.
05-60006-00	SAS/SATA and NVMe	Enables direct connect from the adapter to a U.3 NVMe or SAS/SATA drive. This cable does not send a PCIe REFCLK or PERST# to each drive connector; that is, the U.3 drive must support SRIS and not require PERST#. Use for proof-of-concept type applications.
05-60007-00	SAS/SATA and NVMe	Use for backplanes with x8 SFF-8654 connectors with pinouts that follow the SFF-9402 specification.

## Backplane Connectors

The SFF-8612 or SFF-8654 connectors are the preferred connectors to use for the NVMe backplane or multiprotocol backplanes, based on the SFF-TA-1001 universal bay definition.

Backplanes that use OCUlink connectors should follow the *PCI Express OCUlink Specification*. This pinout is also equivalent to the SFF-9402 specification recommendations. Verify the backplane connector pinout to make sure you use proper cabling to the NVMe drive. Refer to the *PCI Express OCUlink Specification* and the SFF-9402 specification for backplane NVMe connector pinout information.

## External Adapter Connector Pinout

External adapters support SAS and PCIe connections.

The PCIe cable specification swaps lanes 0 and 1 compared to the SAS specification. For PCIe connections, this swap means the external pinout must place lanes 0 and 1 on the same pins as the JBOF. This swap does not impact SAS connections because lane ordering does not impact SAS designs.

For external PCIe JBOF connections, as defined by the *PCI Express External Cabling Specification*, the adapter does not connect REFCLK and PERST#. The adapter only supports an SRIS-capable endpoint, that is, no REFCLK. The JBOF handles the drive (connected to the JBOF switch) start-of-day reset, hot insertion, and clocking requirements.

The adapter expects a local (single master) two-wire bus connection to the cable or active module's EEPROM. A cable requires a local EEPROM on each end to identify cable properties, such as length, loss budget, ganging, and so on. The adapter supports no direct communication to the enclosure over two-wire. SES performs enclosure management.

The following table shows the cable pinout for the cable that Broadcom provides for the external adapter. See [Cable 05-60009-00](#) for the cable drawing and pinout. Use the drawing if you source your own cable.



**Table 12: External Adapter Cable Pinout**

Pin	Signal	Pin	Signal
A1	No Connect	C1	CMICLK
A2	CINT#	C2	CMIDAT
A3	GND	C3	GND
A4	PERp0, RX0+	C4	PETp0, TX0+
A5	PERn0, RX0-	C5	PETn0, TX0-
A6	GND	C6	GND
A7	PERp3, RX3+	C7	PETp3, TX3+
A8	PERn3, RX3-	C8	PETn3, TX3-
A9	GND	C9	GND
B1	PWR	D1	PWR
B2	CBLPRSNT#	D2	MGTPWR
B3	GND	D3	GND
B4	PERp1, RX1+	D4	PETp1, TX1+
B5	PERn1, RX1-	D5	PETn1, TX1-
B6	GND	D6	GND
B7	PERp2, RX2+	D7	PETp2, TX2+
B8	PERn2, RX2-	D8	PETn2, TX2-
B9	GND	D9	GND

Broadcom provides the following cable to use for external adapters. Use the MPN listed to order the cable from Broadcom. If you source your own cables, use the Broadcom part number from the following table, and the drawing and pinout in [Cable 05-60009-00](#).

**Table 13: External Adapter Cable**

MPN	Broadcom Cable Part No.	Cable Description	Backplane Connector
05-60009-00	5067-9643	G4/S4 x4 8644 to x4 8644, 3M	Two x4 SFF-8644

## CacheVault Data Protection

---

The MegaRAID Tri-Mode storage adapters support data retention by using NAND flash memory on the adapter, backed up by a CacheVault™ Power Module 05 (CVPM05).

The CVPM05 module is a super-capacitor pack that provides power for the backup of your data in case of host power loss or server failure. The CVPM05 module connects to the controller remotely by cable. The data is backed up to the NAND flash memory available on the MegaRAID storage adapter.

### NOTE

If you do not use the remote mount board or clip included with the CacheVault kit, do not damage the CVPM05 module when mounting in the system. For more information about mounting the CVPM05 module, refer to *CVPM02, CVPM05 Power Modules | CVFM04 Cache Module MegaRAID CacheVault Protection Products User Guide*.

In the event of host power loss or server failure, any data available in the cache is offloaded to the onboard NAND memory. During this process, the CVPM05 power module powers the necessary components needed for offload.

### NOTE

You cannot hot plug CVPM05 modules. Removing or inserting a CVPM05 module with the adapter powered on might damage the board and the super-capacitor functionality. To attach or remove a CVPM05 module from an adapter, you must fully power down the adapter before you attach the module to or remove the module from its mating connector.


For more information about installation of the CVPM05 module, visit [Support Documents and Downloads](#) to download the *CacheVault Power Module 05 Getting Started Guide*.

## Adapter Security

The adapter hardware secure boot security feature protects your system from malicious activity.

Hardware secure boot permits only authenticated firmware to execute on the adapter. The adapter boots from an internal boot ROM, which establishes the initial root of trust (RoT). Hardware secure boot authenticates and builds a chain of trust (CoT) with succeeding firmware images by using the RoT, meaning only authorized firmware executes on the adapter.

**Figure 2: Authenticated Firmware Example**

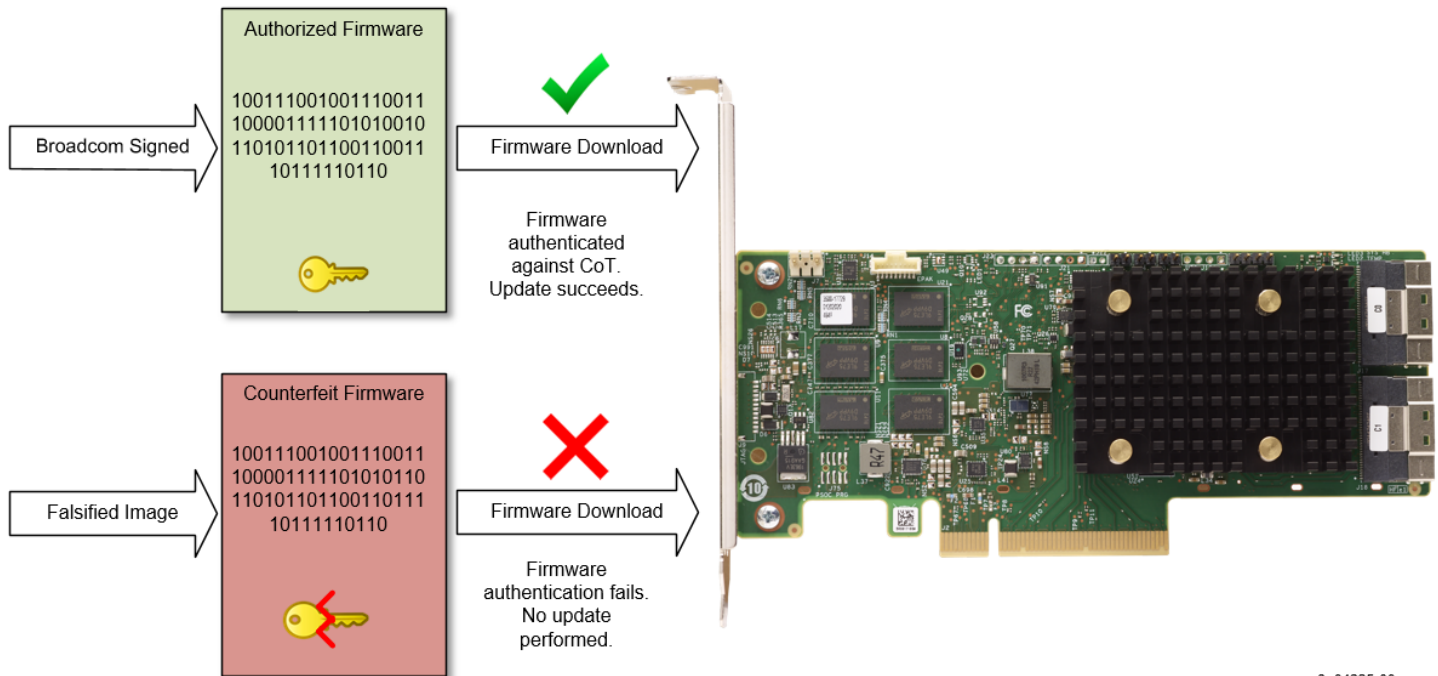

3\_04225-00

Hardware secure boot requires that each image be signed with a valid digital signature; otherwise, the image is considered invalid and does not execute. The adapter ships with a valid signed firmware image. All Broadcom-supplied firmware includes a valid digital signature; therefore, the hardware secure boot process is transparent unless the adapter encounters a counterfeit image. If the adapter downloads a counterfeit image, the image authentication fails and the download utility, such as StorCLI, displays the appropriate failure messages. Contact Broadcom Technical Support for assistance.

# Adapter Installation Instructions

---

Make sure to use the proper installation steps for your adapter:

- [Adapter Installation](#): MegaRAID 9560-16i, MegaRAID 9560-8i, MegaRAID 9580-8i8e, MegaRAID 9540-8i, MegaRAID 9520-8i, HBA 9500-16i, HBA 9500-8i, HBA 9500-16e, or HBA 9500-8e
- [OCP Adapter Installation](#): MegaRAID 9562-16i or HBA 9502-16i
- [M.2 Adapter Installation Instructions](#): MegaRAID 9524-8i

## Adapter Installation

Use the following steps to install any of the following adapters:

- MegaRAID 9560-16i
- MegaRAID 9560-8i
- MegaRAID 9580-8i8e
- MegaRAID 9540-8i
- MegaRAID 9520-8i
- HBA 9500-16i
- HBA 9500-8i
- HBA 9500-16e
- HBA 9500-8e

### 1. **Unpack your adapter.**

Unpack and remove the adapter. Inspect the adapter for damage. If it appears damaged, contact Broadcom Technical Support.

#### **ATTENTION**

To avoid the risk of data loss, back up your data before you change your system configuration.

### 2. **Turn off the power to the system.**

Turn off the power to the computer and disconnect the AC power cord. Remove the computer cover. Refer to the system documentation for instructions. Before you install the adapter, make sure that the computer is disconnected from the power and from any networks.



#### **CAUTION**

Disconnect the computer from the power supply and from any networks to which you will install the adapter, or you risk damaging the system or experiencing electrical shock.

3. **Review the adapter connectors.** See [Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics](#) for descriptions of the adapters that show their connectors.

4. **Check the mounting bracket on the adapter.**

If required for your system, replace the full-profile mounting bracket that ships on the adapter with the low-profile bracket supplied. Complete the following steps to attach the low-profile bracket:

- a) Using a No. 1 Phillips screwdriver that is ESD safe, remove the two Phillips screws that connect the full-profile bracket to the board. Unscrew the two screws located at the top and bottom edges of the board. Avoid touching any board components with the screwdriver or the bracket.
- b) Remove the full-profile bracket. Do not damage the adapter.
- c) Place the adapter on top of the low-profile bracket. Position the bracket so that the screw holes in the tabs align with the openings in the board.
- d) Using a No. 1 Phillips torque screwdriver that is ESD safe, set to a maximum torque of  $4.8 \pm 0.5$  inch-pounds. Replace the two Phillips screws removed in Step a.

**ATTENTION**

Exceeding this torque specification can damage the board, connectors, or screws, and can void the warranty on the board.


**ATTENTION**

Damage caused to the board as a result of changing the bracket can void the warranty on the board. Adapters returned without a bracket mounted on the board will be sent back without return merchandise authorization (RMA) processing.

5. **Insert the adapter into an available PCIe slot.** Select a PCIe slot, and align the adapter's PCIe bus connector to the slot, as shown in the following figure. Press down gently, but firmly, to make sure that the adapter is seated correctly in the slot. Secure the bracket to the computer chassis with the bracket screw.

**NOTE**

Adapters with a x8 host interface can operate in x8 or x16 slots. However, some x16 PCIe slots support only PCIe graphics cards; an adapter installed in one of these slots will not function. Refer to the guide for your motherboard for information about the PCIe slots.

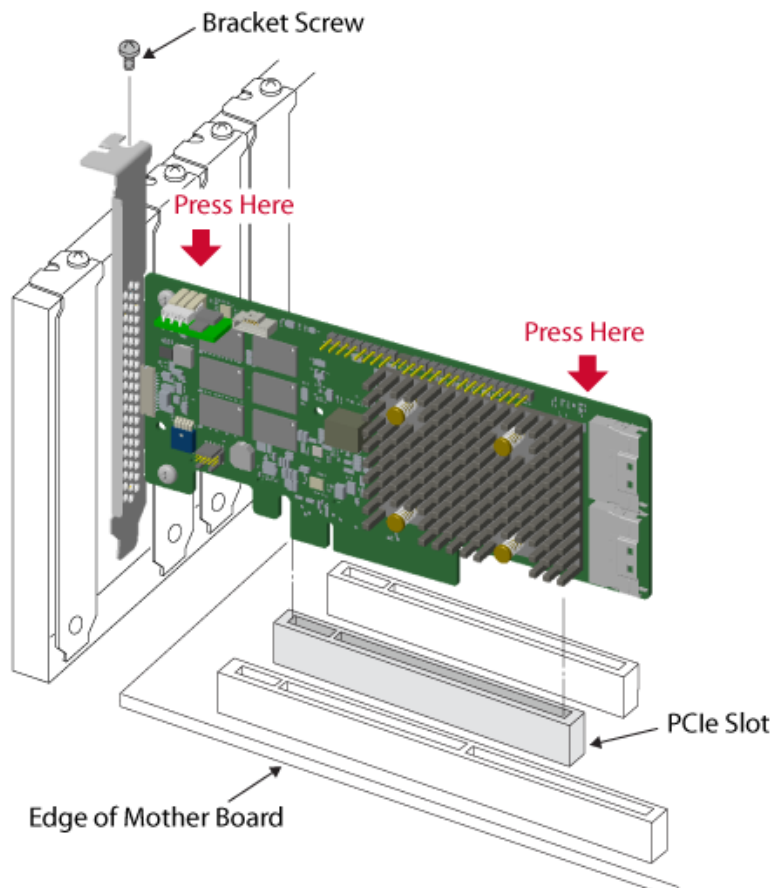**Figure 3: Installing an Adapter in a PCIe Slot**

**6. Configure and install the SAS, SATA, or PCIe (NVMe) devices in the host computer case.**

Refer to documentation for the devices for any preinstallation configuration requirements.

**7. Connect the adapter to the devices.** Connect the appropriate cable that has the connectors on one end for the adapter. Connect the appropriate connector on the other end to attach to the backplane connector.

The maximum cable length is 1 meter (39.37 in.). A single wide-port SAS or multilane PCIe (NVMe) device cannot connect to phys controlled by different SAS cores or PDBs. See [Tri-Mode Storage Interface](#) for more information.

**8. Provide the required airflow for the installed adapter.** See [Board Operating Conditions](#) to find the adapter's cooling requirements.

**9. Turn on the power to the system.** Reinstall the computer cover, and reconnect the AC power cords. Make sure that the power is turned on to the storage devices before or at the same time that the power is turned on to the host computer. Turn on power to the host computer. If the computer is powered on before these devices, the devices might not be recognized.

During boot, a BIOS message appears. The firmware takes several seconds to initialize. The configuration utility prompt times out after several seconds. The second portion of the BIOS message shows the adapter controller number, firmware version, and cache SDRAM size. The numbering of the adapters follows the PCIe slot scanning order used by the host motherboard.

10. **Choose the correct storage profile.** Refer to the *12Gb/s MegaRAID Tri-Mode Software User Guide* and the *LSI® Storage Authority Software User Guide* for details about setting up your adapter.
11. **Install the operating system driver.** The adapters can operate under various operating systems. To operate under these operating systems, you must install the software drivers. The firmware and drivers are routinely updated and made available at [Support Documents and Downloads](#).

The hardware installation of your adapter is complete.

## OCP Adapter Installation

Use the following steps to install any of the following adapters:

- MegaRAID 9562-16i
- HBA 9502-16i

### 1. **Unpack your adapter.**

Unpack and remove the adapter. Inspect the adapter for damage. If it appears damaged, contact Broadcom Technical Support.

#### **ATTENTION**

To avoid the risk of data loss, back up your data before you change your system configuration.

### 2. **Turn off the power to the system.**

Turn off the power to the computer and disconnect the AC power cord. Remove the computer cover. Refer to the system documentation for instructions. Before you install the adapter, make sure that the computer is disconnected from the power and from any networks.




#### **CAUTION**

Disconnect the computer from the power supply and from any networks to which you will install the adapter, or you risk damaging the system or experiencing electrical shock.

3. **Insert the adapter into an available OCP 3.0 SFF slot.** Select an OCP slot and align the adapter with the system rails. Push the adapter into the slot, as shown in the following figure.

**Figure 4: Installing an Adapter in an OCP Slot**

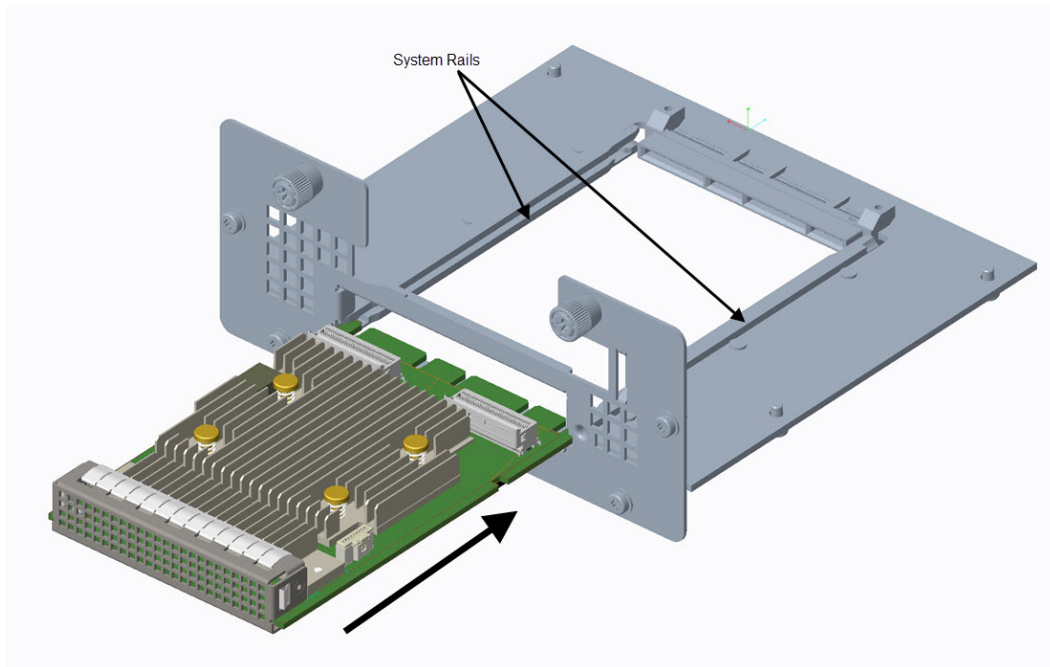

4. **Secure the adapter.** The adapter is secured by an internal locking mechanism. A clicking sound is made when the adapter is secured into the slot. The internal locking mechanism depends on the server vendor. Adhere to the server vendor's instructions to engage the internal lock so the adapter is retained in the slot.
5. **Attach the cables.** Attach the cables to the storage device ports.

## Removing the OCP Adapter

Use the following steps to remove any of following adapters from an OCP slot:

- MegaRAID 9562-16i
- HBA 9502-16i

1. **Turn off the power to the system.**

Turn off the power to the computer and disconnect the AC power cord. Remove the computer cover. Refer to the system documentation for instructions. Before you install the adapter, make sure that the computer is disconnected from the power and from any networks.



### CAUTION

Disconnect the computer from the power supply and from any networks to which you will install the adapter, or you risk damaging the system or experiencing electrical shock.

2. **Unplug the cables.** Remove the SlimSAS cables.
3. **Remove the adapter from the OCP slot.** Adhere to the server vendor's instructions to disengage the internal lock. To remove the adapter from the OCP slot, carefully apply even pressure to the inside edges of the bracket.

### NOTE

Do not use the vertical SlimSAS connectors or heat sink on the adapter for leverage.



## M.2 Adapter Installation Instructions

Use the following steps to install the MegaRAID 9524-8i adapter:

1. **Unpack your adapter.**

Unpack and remove the adapter. Inspect the adapter for damage. If it appears damaged, contact Broadcom Technical Support.

**ATTENTION**

To avoid the risk of data loss, back up your data before you change your system configuration.

2. **Turn off the power to the system.**

Turn off the power to the computer and disconnect the AC power cord. Remove the computer cover. Refer to the system documentation for instructions. Before you install the adapter, make sure that the computer is disconnected from the power and from any networks.



**CAUTION**

Disconnect the computer from the power supply and from any networks to which you will install the adapter, or you risk damaging the system or experiencing electrical shock.

3. **Review the adapter connectors.** See [MegaRAID 9524-8i Adapter – Connector and LED Designations](#) for descriptions of the adapters and their connectors.

4. **Install the adapter into an available M.2 slot.** Use the installation recommendations from the motherboard's vendor.

5. **Provide the required airflow for the installed adapter.** See [Tri-Mode Storage Adapter Technical Specifications](#) to find the adapter's cooling requirements.

6. **Turn on the power to the system.** Reinstall the computer cover and reconnect the AC power cords. Turn on power to the host computer.

During boot, a BIOS message appears. The firmware takes several seconds to initialize. The configuration utility prompt times out after several seconds. The second portion of the BIOS message shows the adapter controller number and firmware version. The numbering of the adapters follows the PCIe slot scanning order used by the host motherboard.

7. **Choose the correct storage profile.** Refer to the *12Gb/s MegaRAID Tri-Mode Software User Guide* and the *LSI® Storage Authority Software User Guide* for details about setting up your adapter.

8. **Install the operating system driver.** The adapters can operate under various operating systems. To operate under these operating systems, you must install the software drivers. The firmware and drivers are routinely updated and made available at [Support Documents and Downloads](#).

# Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics


This chapter presents the physical characteristics of each board, including the board size and the connector locations.

## MegaRAID 9560-16i Adapter – Connector and LED Designations

The adapter is a 155.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

Figure 5: Card Layout for the MegaRAID 9560-16i Tri-Mode Storage Adapter

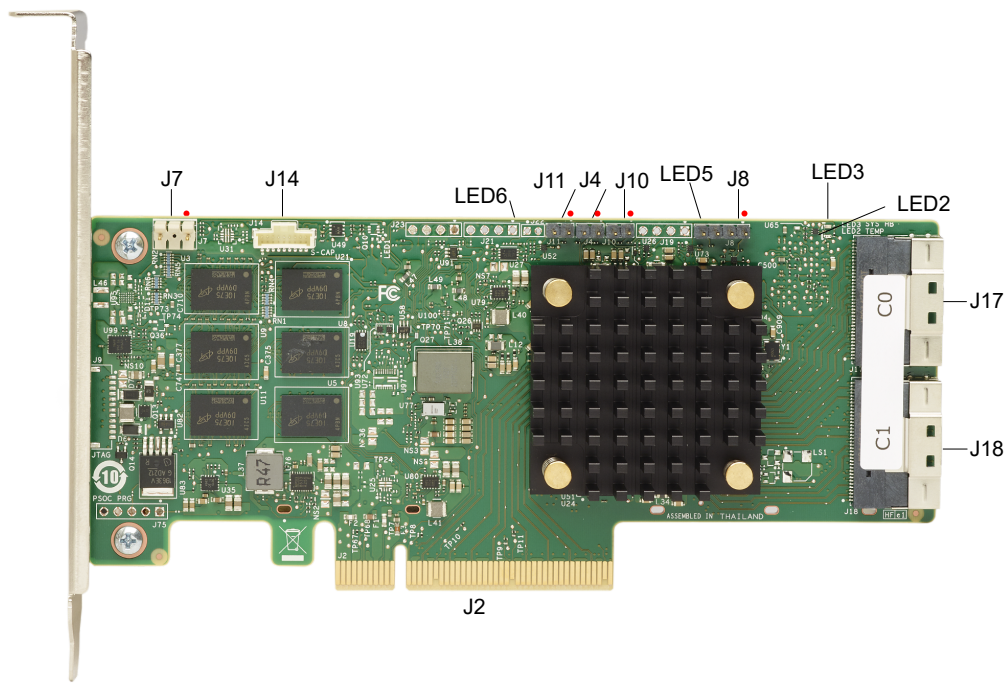

The following table describes the headers and connectors on the adapter.

**Table 14: Headers and Connectors**

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I <sup>2</sup> C interface connected to the I <sup>2</sup> C bus for the Intelligent Platform Management Interface (IPMI).
J4	Default serial boot ROM (SBR) header	2-pin connector. Reserved for Broadcom use.
J7	Advanced software options hardware key header	2-pin connector. Enables support for selected advanced features.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J10	Global HDD activity LED header	2-pin connector. Connects to an LED that indicates activity on the drives connected to the adapter.
J11	Global drive fault LED header	2-pin connector. Connects to an LED that indicates whether a drive is in a fault condition.
J14	CacheVault power module interface	9-pin connector. Connects the adapter to a CacheVault power module.
J17, J18	Storage interface connectors	Two SFF-8654 8-port internal connectors. Connects the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.


**Table 15: LED Designations**

LED	Type	Description
LED 2	Yellow controller over temperature	Stays on solid to indicate that the SAS3916 device temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED 3	Green system heartbeat	Indicates that the SAS3916 RoC ASIC is operating normally. This LED blinks at 1 Hz.
LED 5	Yellow supercap fault	Indicates that the CacheVault power module is in a fault state or is over the temperature threshold. This LED resides on the non-heat-sink side of the board.
LED 6	Green ONFI activity	Indicates when the ONFI is active for cache offload or recovery. This LED resides on the non-heat-sink side of the board.

## MegaRAID 9560-8i Adapter – Connector and LED Designations

The adapter is a 155.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

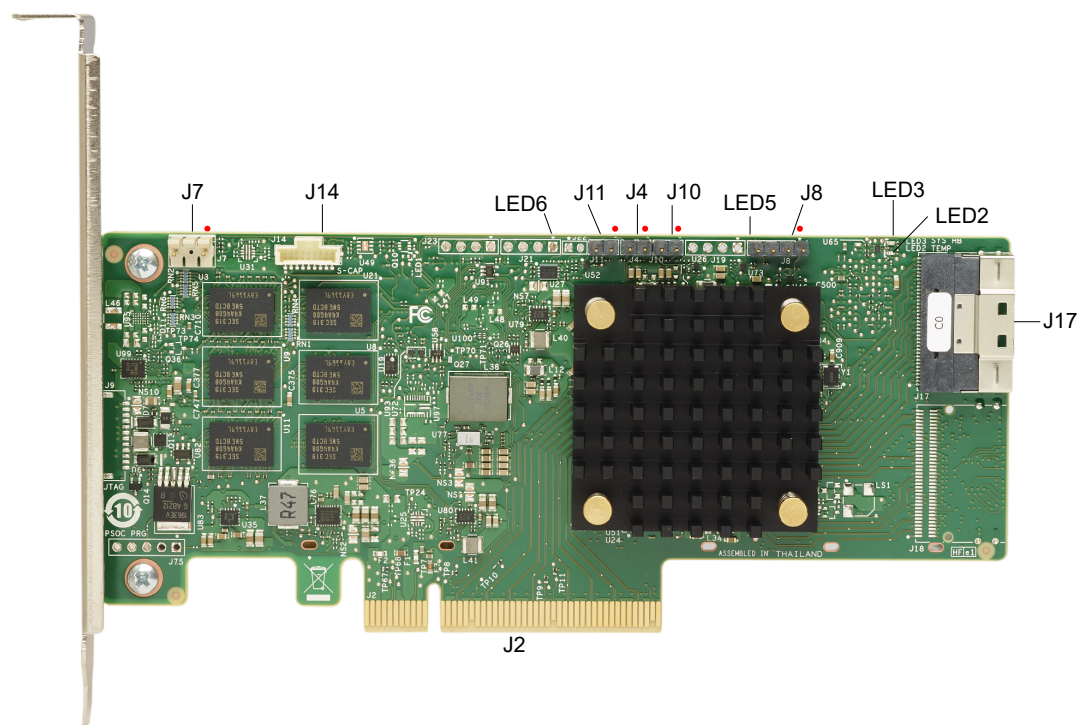**Figure 6: Card Layout for the MegaRAID 9560-8i Tri-Mode Storage Adapter****Table 16: Headers and Connectors**

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I <sup>2</sup> C interface connected to the I <sup>2</sup> C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J7	Advanced software options hardware key header	2-pin connector. Enables support for selected advanced features.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J10	Global HDD activity LED header	2-pin connector. Connects to an LED that indicates activity on the drives connected to the controller.
J11	Global drive fault LED header	2-pin connector. Connects to an LED that indicates whether a drive is in a fault condition.
J14	CacheVault power module interface	9-pin connector. Connects the adapter to a CacheVault power module.
J17	Storage interface connector	One SFF-8654 8-port internal connector. Connects the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.


**Table 17: LED Designations**

LED	Type	Description
LED 2	Yellow controller over temperature	Stays on solid to indicate that the SAS3916 device temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED 3	Green system heartbeat	Indicates that the SAS3916 RoC ASIC is operating normally. This LED blinks at 1 Hz.
LED 5	Yellow supercap fault	Indicates that the CacheVault power module is in a fault state or is over the temperature threshold. This LED resides on the non-heat-sink side of the board.
LED 6	Green ONFI activity	Indicates when the ONFI is active for cache offload or recovery. This LED resides on the non-heat-sink side of the board.

## MegaRAID 9580-8i8e Adapter – Connector and LED Designations

The adapter is a 167.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

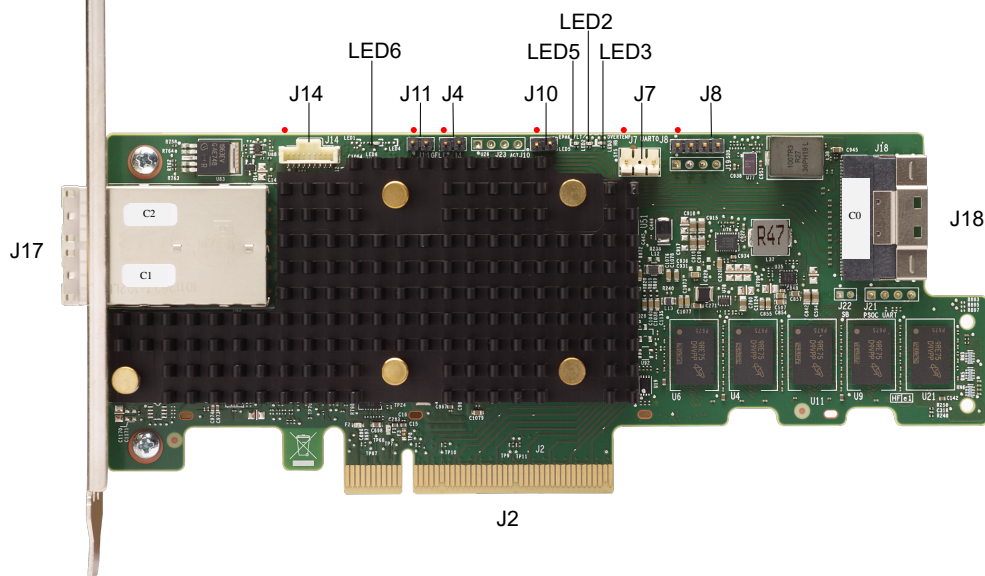**Figure 7: Card Layout for the MegaRAID 9580-8i8e Tri-Mode Storage Adapter**

**Table 18: Headers and Connectors**

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I <sup>2</sup> C interface connected to the I <sup>2</sup> C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J7	Advanced software options hardware key header	2-pin connector. Enables support for selected advanced features.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J10	Global HDD activity LED header	2-pin connector. Connects to an LED that indicates activity on the drives connected to the controller.
J11	Global drive fault LED header	2-pin connector. Connects to an LED that indicates whether a drive is in a fault condition.
J14	CacheVault power module interface	9-pin connector. Connects the adapter to a CacheVault power module.
J17	Storage interface connector	Two SFF-8644 4-port external connector. Connects the adapter by cable to the storage devices.
J18	Storage interface connector	One SFF-8654 8-port internal connector. Connects the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.

**Table 19: LED Designations**


LED	Type	Description
LED 2	Yellow controller over temperature	Stays on solid to indicate that the SAS3916 device temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED 3	Green system heartbeat	Indicates that the SAS3916 RoC ASIC is operating normally. This LED blinks at 1 Hz.
LED 5	Yellow supercap fault	Indicates that the CacheVault power module is in a fault state or is over the temperature threshold.
LED 6	Green ONFI activity	Indicates when the ONFI is active for cache offload or recovery.

## MegaRAID 9540-8i Adapter – Connector and LED Designations

The adapter is a 155.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

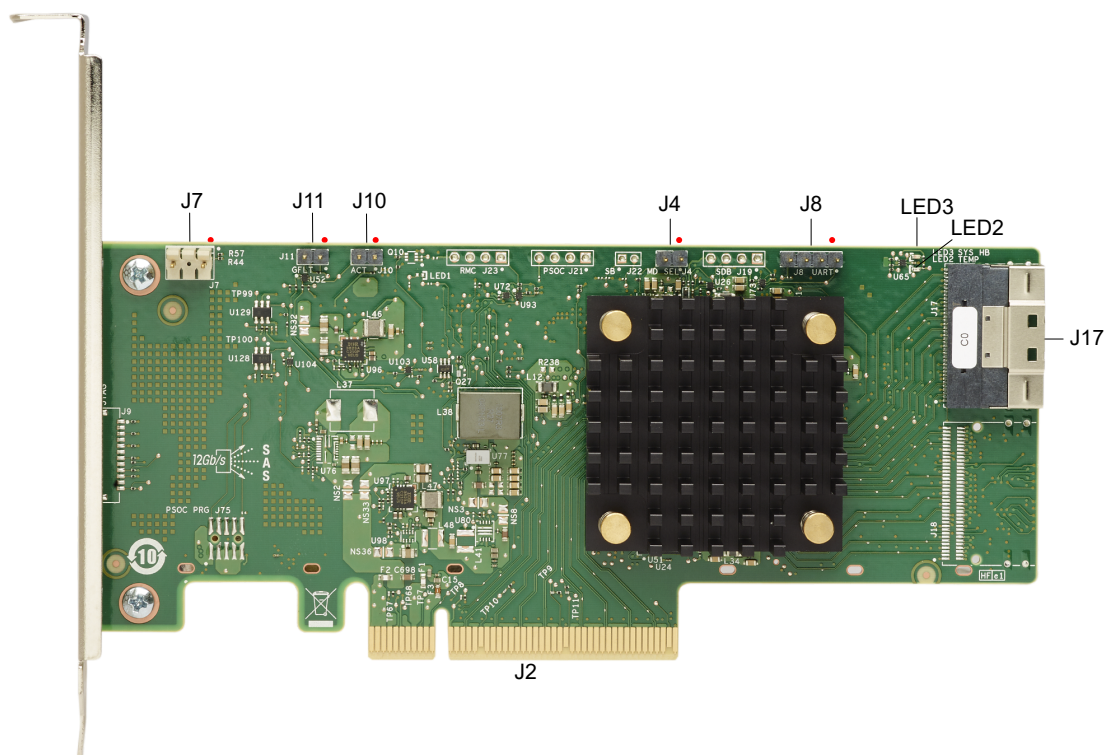

**Figure 8: MegaRAID 9540-8i Tri-Mode Storage Adapter**

The following table describes the headers and connectors on the adapter.

**Table 20: Headers and Connectors**

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I <sup>2</sup> C interface connected to the I <sup>2</sup> C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved.
J7	Advanced software options hardware key header	2-pin connector. Enables support for selected advanced features.
J8	Onboard serial UART connector	4-pin connector. Reserved.
J10	Global HDD activity LED header	2-pin connector. Connects to an LED that indicates activity on the drives connected to the controller.
J11	Global drive fault LED header	2-pin connector. Connects to an LED that indicates whether a drive is in a fault condition.

Connector	Type	Description
J17	Storage interface connector	One SFF-8654 8-port internal connector. Connects the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.

Table 21: LED Designations


LED	Type	Description
LED 2	Yellow IOC over temperature	Stays on solid to indicate that the SAS3808 IOC temperature sensor is over the temperature threshold. When the IOC is in the proper temperature range, this LED is off.
LED 3	Green system heartbeat	Indicates that the SAS3808 IOC is operating normally.

## MegaRAID 9520-8i Adapter – Connector and LED Designations

The adapter is a 155.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

Figure 9: MegaRAID 9520-8i Tri-Mode Storage Adapter

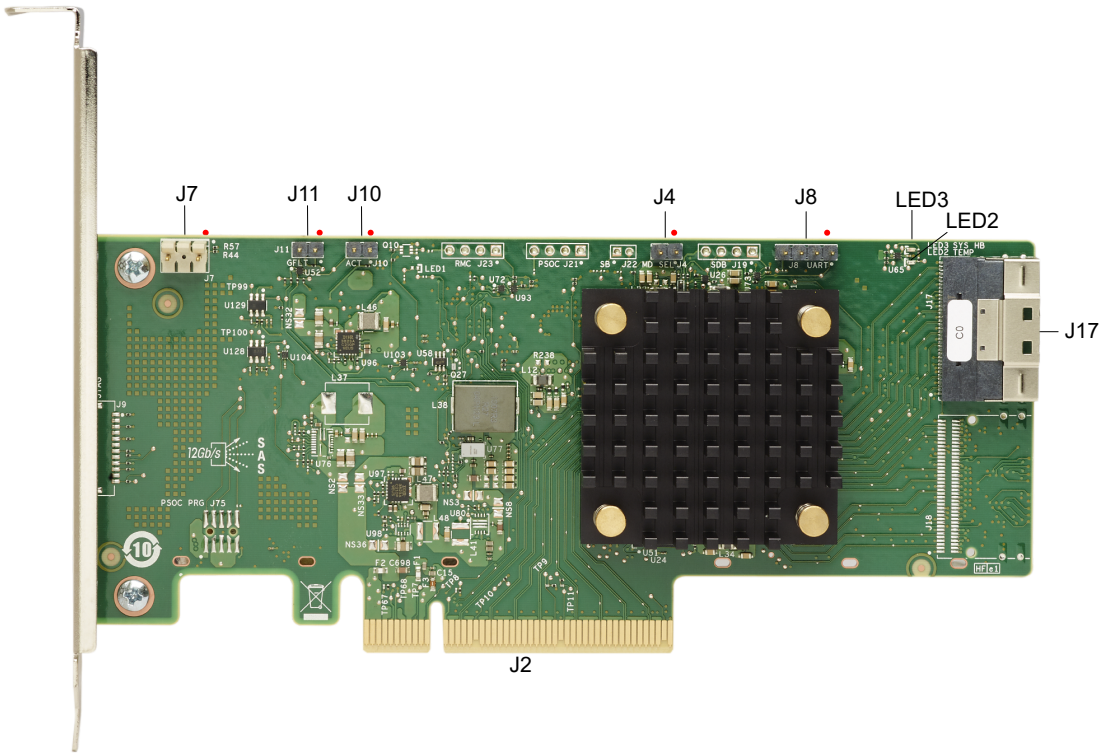



The following table describes the headers and connectors on the adapter.

**Table 22: Headers and Connectors**

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I <sup>2</sup> C interface connected to the I <sup>2</sup> C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved.
J7	Advanced software options hardware key header	2-pin connector. Enables support for selected advanced features.
J8	Onboard serial UART connector	4-pin connector. Reserved.
J10	Global HDD activity LED header	2-pin connector. Connects to an LED that indicates activity on the drives connected to the controller.
J11	Global drive fault LED header	2-pin connector. Connects to an LED that indicates whether a drive is in a fault condition.
J17	Storage interface connector	One SFF-8654 8-port internal connector. Connects the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.

**Table 23: LED Designations**

LED	Type	Description
LED 2	Yellow IOC over temperature	Stays on solid to indicate that the SAS3808 IOC temperature sensor is over the temperature threshold. When the IOC is in the proper temperature range, this LED is off.
LED 3	Green system heartbeat	Indicates that the SAS3808 IOC is operating normally.

## MegaRAID 9524-8i Adapter – Connector and LED Designations

The adapter is a 167.51 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe Card Electromechanical specification.

The following table describes the LEDs on the adapter.

**Table 24: LED Designations**


LED	Type	Description
LED 2	Yellow controller over temperature	Stays on solid to indicate that the SAS3808N device temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED 3	Green system heartbeat	Indicates that the SAS808N IOC ASIC is operating normally. This LED blinks at 1 Hz.

## MegaRAID 9562-16i Adapter – Connector and LED Designations

The adapter is a 115.00 (±0.13) mm × 76.00 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the OCP 3.0 NIC specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

**Figure 10: Card Layout for the MegaRAID 9562-16i Tri-Mode Storage Adapter**

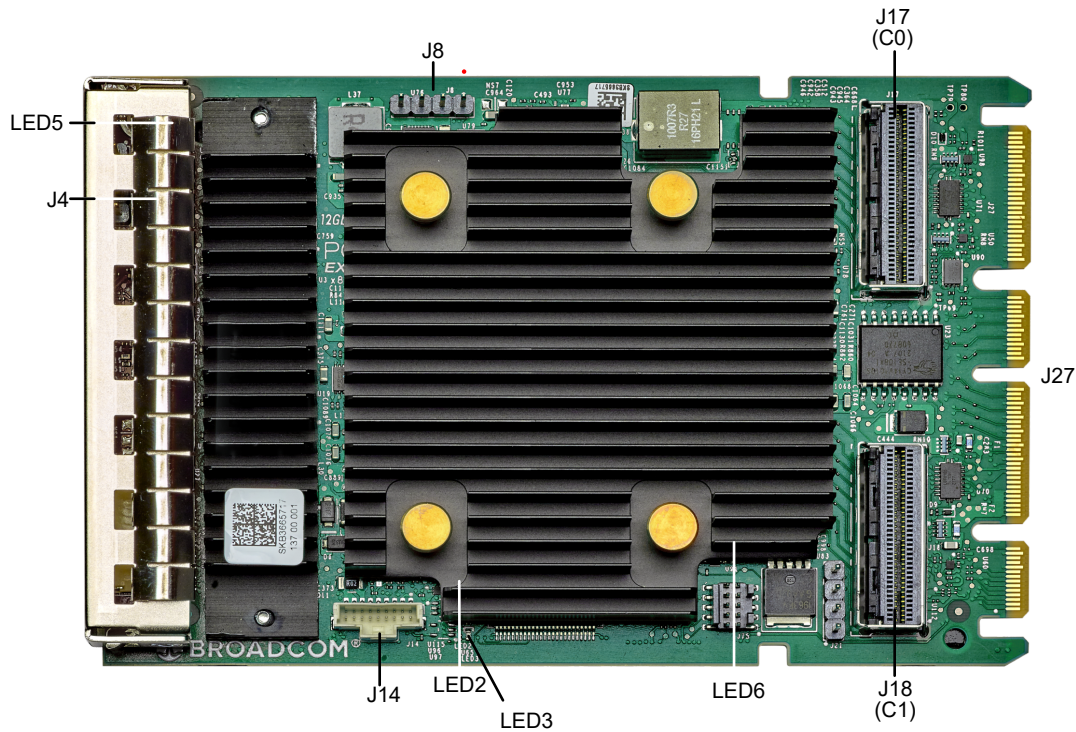

The following table describes the headers and connectors on the adapter.

**Table 25: Headers and Connectors**

Connector	Type	Description
J4	Default serial boot ROM (SBR) header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J14	CacheVault power module interface	9-pin connector. Connects the adapter to a CacheVault power module.
J17, J18	Storage interface connectors	Two SFF-8654 8-port internal connectors. Connects the adapter by cable to the storage devices.
J27	Card PCIe edge connector	The interface between the storage adapter and the host system.

The following table describes the LEDs on the adapter.


**Table 26: LED Designations**

LED	Type	Description
LED 2	Yellow controller over temperature	Stays on solid to indicate that the SAS3916 device temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED 3	Green system heartbeat	Indicates that the SAS3916 RoC ASIC is operating normally. This LED blinks at 1 Hz.
LED 5	Yellow supercap fault	Indicates that the CacheVault power module is in a fault state or is over the temperature threshold. This LED resides on the non-heat-sink side of the board.
LED 6	Green ONFI activity	Indicates when the ONFI is active for cache offload or recovery. This LED resides on the non-heat-sink side of the board.

## HBA 9500-16i Adapter – Connector and LED Designations

The adapter is a 155.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

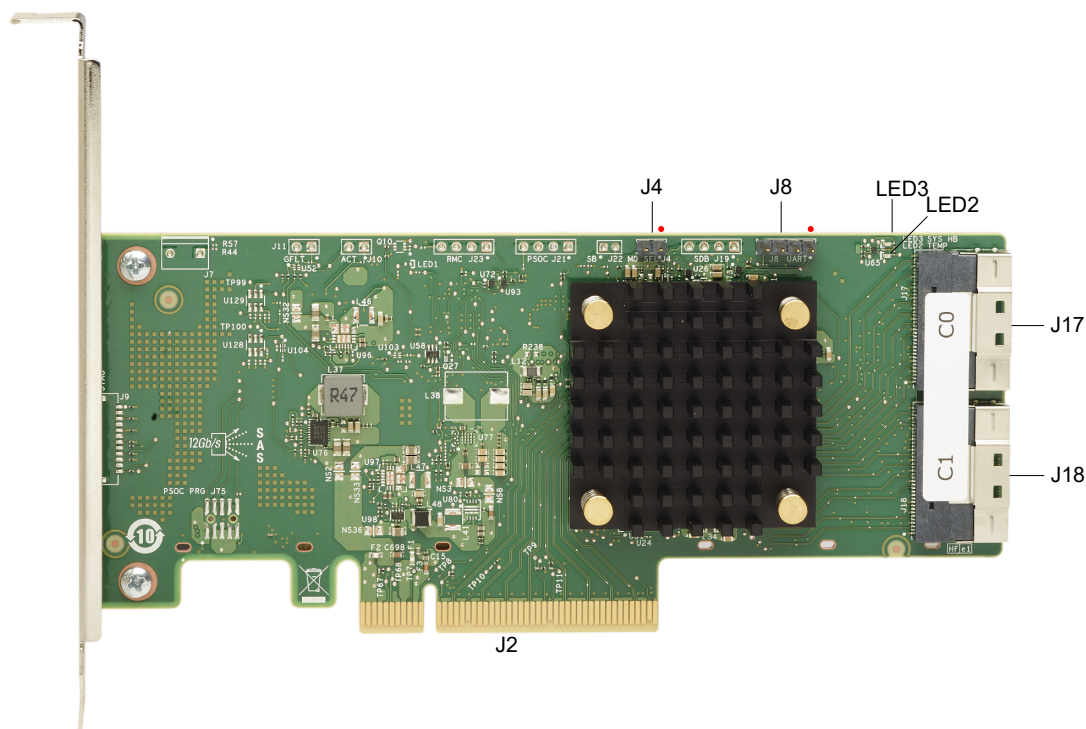**Figure 11: Card Layout of the HBA 9500-16i Tri-Mode Storage Adapter**

The following table describes the connectors on the adapter.

**Table 27: Headers and Connectors**

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I <sup>2</sup> C interface connected to the I <sup>2</sup> C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J17, J18	Storage interface connectors	Two SFF-8654 8-port internal connectors. Connects the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.


**Table 28: LED Designations**

LED	Type	Description
LED2	Yellow IOC over temperature	Stays on solid to indicate that the SAS3816 IOC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED3	Green system heartbeat	Indicates that the SAS3816 IOC is operating normally.

## HBA 9500-8i Adapter – Connector and LED Designations

The adapter is a 155.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

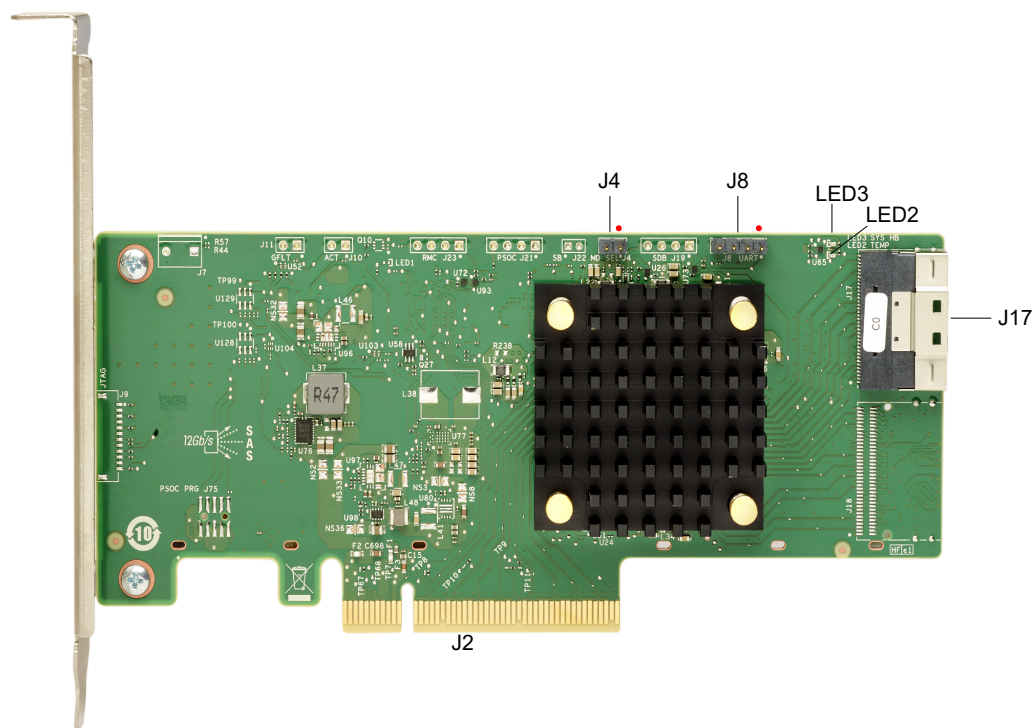**Figure 12: Card Layout of the HBA SAS 9500-8i Tri-Mode Storage Adapter**

The following table describes the headers and connectors on the adapter.

**Table 29: Headers and Connectors**

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I <sup>2</sup> C interface connected to the I <sup>2</sup> C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J17	Storage interface connector	One SFF-8654 8-port internal connector. Connects the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.

**Table 30: LED Designations**


LED	Type	Description
LED2	Yellow IOC over temperature	Stays on solid to indicate that the SAS3808 IOC temperature sensor is over the temperature threshold. When the IOC is in the proper temperature range, this LED is off.
LED3	Green system heartbeat	Indicates that the SAS3808 IOC is operating normally.

## HBA 9500-16e Adapter – Connector and LED Designations

The adapter is a 167.65 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

**Figure 13: Card Layout of the HBA 9500-16e Storage Adapter**

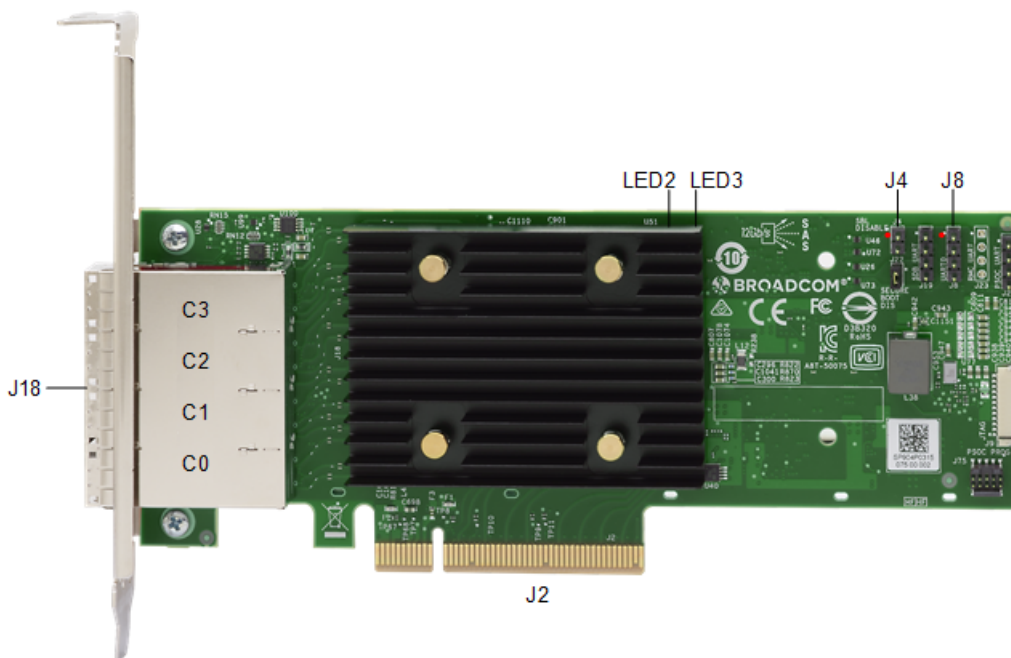

The following table describes the headers and connectors on the adapter.

**Table 31: Connectors**

Connector	Type	Description
J2	Standard board edge connector	PCIe x8 board edge connector. With the PCIe interface, this connector provides power to the board and an I <sup>2</sup> C interface connected to the I <sup>2</sup> C bus for the IPMI.
J18	Storage interface connectors	Four SFF-8644 external connectors. Connects the adapter by cable to the storage devices.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.

The following table describes the LEDs on the adapter.



Table 32: LED Designations


LED	Type	Description
LED2	Yellow IOC over temperature	Stays on solid to indicate that the SAS3816 IOC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off. This LED resides on the non-heat-sink side of the board.
LED3	Green system heartbeat	Indicates that the SAS3816 IOC is operating normally. This LED resides on the non-heat-sink side of the board.

## HBA 9500-8e Adapter – Connector and LED Designations

The adapter is a 167.65 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

Figure 14: Card Layout of the HBA 9500-8e Storage Adapter

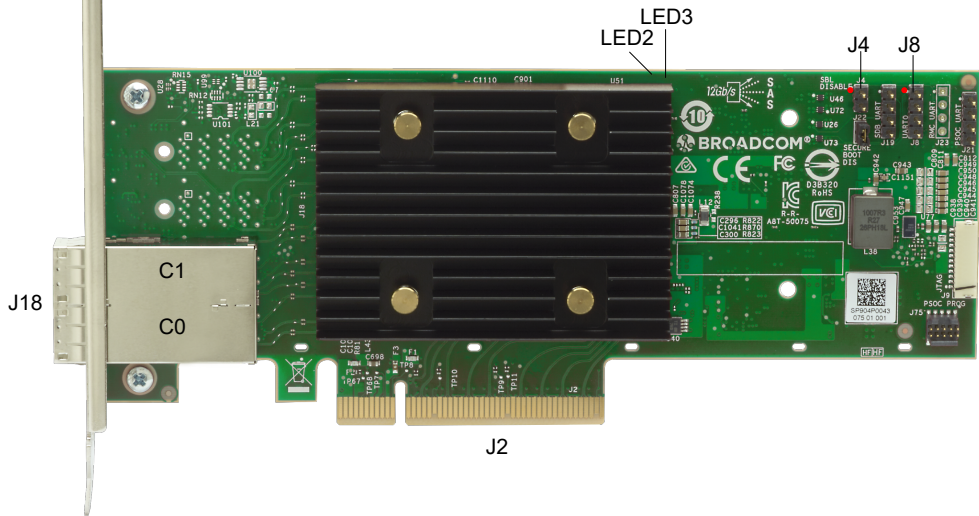

The following table describes the headers and connectors on the adapter.

**Table 33: Headers and Connectors**

Connector	Type	Description
J2	Standard board edge connector	PCIe x8 board edge connector. With the PCIe interface, this connector provides power to the board and an I <sup>2</sup> C interface connected to the I <sup>2</sup> C bus for the IPMI.
J18	Storage interface connectors	Two SFF-8644 external connectors. Connects the adapter by cable to the storage devices.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.

The following table describes the LEDs on the adapter.

**Table 34: LED Designations**


LED	Type	Description
LED2	Yellow IOC over temperature	Stays on solid to indicate that the SAS3816 IOC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off. This LED resides on the non-heat-sink side of the board.
LED3	Green system heartbeat	Indicates that the SAS3816 IOC is operating normally. This LED resides on the non-heat-sink side of the board.

## HBA 9502-16i Adapter – Connector and LED Designations

The adapter is a 115.00 (±0.13) mm × 76.00 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the OCP 3.0 NIC specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

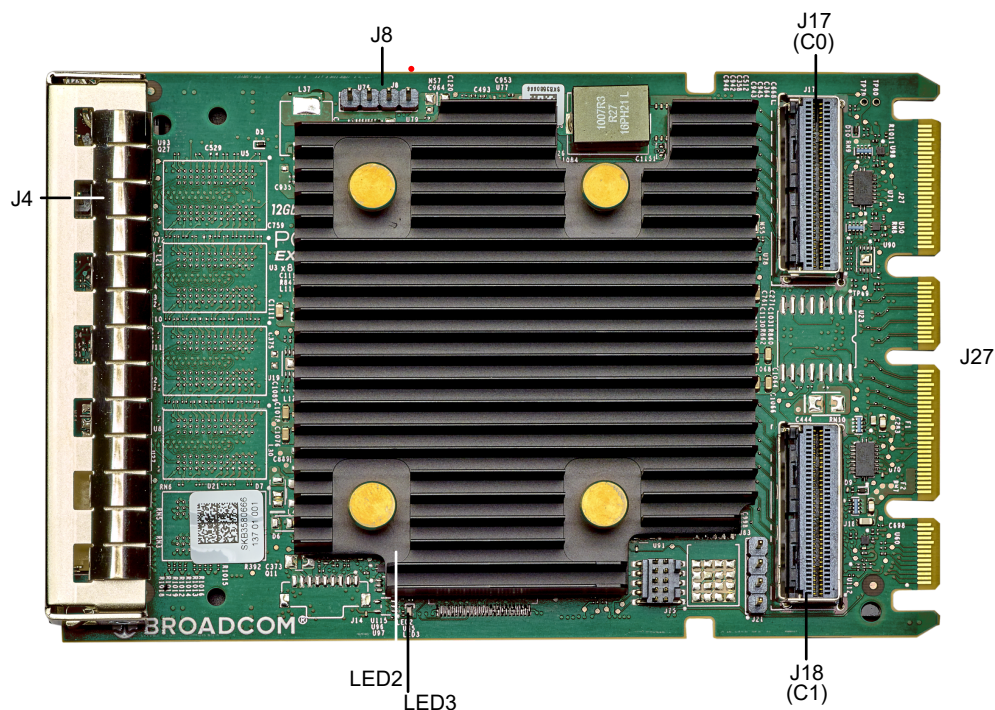

**Figure 15: Card Layout of the HBA 9502-16i Tri-Mode Storage Adapter**

The following table describes the connectors on the adapter.

**Table 35: Headers and Connectors**

Connector	Type	Description
J4	Default serial boot ROM (SBR) header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J17, J18	Storage interface connectors	Two SFF-8654 8-port internal connectors. Connects the adapter by cable to the storage devices.
J27	Card PCIe edge connector	The interface between the storage adapter and the host system.

The following table describes the LEDs on the adapter.

**Table 36: LED Designations**

LED	Type	Description
LED2	Yellow controller over temperature	Stays on solid to indicate that the SAS3816 device temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED3	Green system heartbeat	Indicates that the SAS3816 IOC ASIC is operating normally. This LED blinks at 1 Hz.

## Tri-Mode Storage Adapter Technical Specifications

This chapter presents the technical specifications of each board, including operating conditions and power supply requirements.

### Board Storage Conditions

The following table lists the board storage conditions for the storage adapters.

**Table 37: Board Storage Conditions**

Adapter	Relative Humidity Range (Non-condensing)	Temperature Range <sup>a</sup>
9560-16i	10% to 90%	–40°C to +70°C
9560-8i	10% to 90%	–40°C to +70°C
9580-8i8e	10% to 90%	–40°C to +70°C
9540-8i	10% to 90%	–40°C to +70°C
9520-8i	10% to 90%	–40°C to +70°C
9524-8i	10% to 90%	–40°C to +70°C
9500-16i	10% to 90%	–40°C to +70°C
9500-8i	10% to 90%	–40°C to +70°C
9500-16e	10% to 90%	–40°C to +70°C
9500-8e	10% to 90%	–40°C to +70°C
9562-16i	10% to 90%	–40°C to +70°C
9502-16i	10% to 90%	–40°C to +70°C

### Board Operating Conditions

The following table lists the board operating conditions for the storage adapters. The minimum airflow, measured as linear feet per minute (LFM) at 55°C, must be met to avoid operating the controller's processor and board components above their maximum junction temperatures.

**Table 38: Board Operating Conditions**

Adapter	Minimum LFM	Temperature Range <sup>a</sup>
9560-16i	200	0°C to +55°C
9560-8i	200	0°C to +55°C
9580-8i8e	200	0°C to +55°C
9540-8i	150	0°C to +55°C
9520-8i	150	0°C to +55°C

a. For adapters with a CVPM, this range applies with or without the CVPM attached.

a. For adapters with a CVPM, this range applies with or without the CVPM attached.

Adapter	Minimum LFM	Temperature Range <sup>a</sup>
9524-8i	155	0°C to +55°C
9500-16i	150	0°C to +55°C
9500-8i	150	0°C to +55°C
9500-16e	150	0°C to +55°C
9500-8e	150	0°C to +55°C
9562-16i	200	0°C to +55°C
9502-16i	150	0°C to +55°C

## Power Supply Requirements

All power is supplied to the tri-mode storage adapter through the PCIe 3.3V rails (3.3V  $\pm$ 9%) and the 12V rail (12V  $\pm$ 8%). Onboard switching regulator circuitry operates from the 3.3V rails and the 12V rail provides the necessary voltages.

Typical power is measured with maximum I/O traffic, typical silicon process material, and nominal voltages operating the card at an ambient temperature of 45°C with required airflow.

## MegaRAID Tri-Mode Storage Adapter Power Supply Requirements

The following table describes the typical power consumption of the MegaRAID adapters.

**Table 39: MegaRAID Tri-Mode Storage Adapter Typical Power Consumption**

Power Mode	Typical Power (W)					
	9560-16i	9560-8i	9580-8i8e	9540-8i	9520-8i	9524-8i
3.3V Supply	0.22	0.22	0.66	0.02	0.02	—
+12V Supply	12.99	9.42	13.59	5.94	5.94	—
<b>Total Power</b>	<b>13.21</b>	<b>9.64</b>	<b>14.25</b>	<b>5.96</b>	<b>5.96</b>	<b>—</b>

During the transparent learn cycle, the CacheVault power module consumes up to an additional 8W. The PCIe 3.3V rail supplies the power for the learn cycle.

## HBA Tri-Mode Storage Adapter Power Supply Requirements

The following table describes the typical power consumption of the HBAs.

**Table 40: HBA Tri-Mode Storage Adapter Typical Power Consumption**

Power Mode	Typical Power (W)			
	9500-16i	9500-8i	9500-16e	9500-8e
3.3V Supply	0.04	0.02	0.04	0.02
+12V Supply	8.50	5.94	8.70	6.10
<b>Total Power</b>	<b>8.54</b>	<b>5.96</b>	<b>8.74</b>	<b>6.12</b>

a. For adapters with a CVPM, this range applies with or without the CVPM attached.

## MegaRAID and HBA Tri-Mode OCP Adapter Power Supply Requirements

The following table describes the typical power consumption of the OCP adapters.

**Table 41: OCP Tri-Mode Storage Adapter Typical Power Consumption**

Power Mode	Typical Power (W)	
	9562-16i	9502-16i
3.3V Supply	0.3	0.1
+12V Supply	13.5	8.9
<b>Total Power</b>	<b>13.8</b>	<b>9.0</b>

For the MegaRAID 9562-16i adapter, the CacheVault power module consumes up to an additional 8W during the transparent learn cycle. The PCIe 3.3V rail supplies the power for the learn cycle.

# Marks, Certifications, Compliance, and Safety Characteristics

This chapter lists the adapter marks and certifications, FCC compliance statements, and safety characteristics.

## Marks, Certifications, and Compliance



The design and implementation of the adapters minimize electromagnetic emissions, susceptibility to radio frequency energy, and the effects of electrostatic discharge.








The following adapters show the marks and certifications included in [Table 43, Adapter Marks and Certifications](#).

**Table 42: Adapter Models**

Adapter	Model Number
MegaRAID 9524-8i	50170
MegaRAID 9560-16i MegaRAID 9560-8i	50077
HBA 9500-16i HBA 9500-8i	2022 and forward: 50134 Previous years: 50077
MegaRAID 9540-8i MegaRAID 9520-8i	50134
MegaRAID 9580-8i8e	50076
HBA 9500-16e HBA 9500-8e	50075
MegaRAID 9562-16i HBA 9502-16i	50137

**Table 43: Adapter Marks and Certifications**

Mark	Symbol	Description
Australia and New Zealand RCM		Meets the following standards: <ul style="list-style-type: none"> <li>AS/NZS CISPR 32</li> <li>CISPR 32:2015, Class A</li> <li>AS/NZS CISPR 32:2015 +A1:2020, Class A</li> </ul>
Canada EMC	CANADA ICES-003 CLASS A CANADA NMB-003 CLASSE A CAN ICES-3 (A)/NMB-3 (A)	Meets the following standards: <ul style="list-style-type: none"> <li>ICES-003:2016 Issue 7: 2016, Class A</li> <li>CAN/CSA CISPR 22-10</li> <li>CISPR 22:2008</li> </ul>
Europe (CE)		Meets the following standards: <ul style="list-style-type: none"> <li>EN 55032, EN 55035</li> <li>EN 55032:2015 +A11:2020, Class A</li> <li>EN 55035:2017 +A11:2020, Class A</li> </ul>

Mark	Symbol	Description
Korea (RRL)		xxxxx = model number Meets the KN32/KN35 testing requirements.
Taiwan (BSMI)		Meets the following standards: <ul style="list-style-type: none"> <li>• CNS15663</li> <li>• CNS15936</li> </ul>
USA / Canada Safety (UL Listed)		For use with UL-listed ITE equipment only. Meets the following standards: <ul style="list-style-type: none"> <li>• CAN/CSA C22.2 No. 62368-1-19, Third Edition</li> <li>• UL 62368-1, Third Edition</li> </ul>
CB Scheme Safety	—	Meets the following standards: <ul style="list-style-type: none"> <li>• IEC 62368-1:2014 (Third edition)</li> <li>• EN 62368-1:2014+A11: 2017</li> </ul>
Japan (VCCI)		Meets the following standards: <ul style="list-style-type: none"> <li>• VCCI-CISPR 32:2016</li> </ul>
USA / Canada (FCC)		Meets the following standards: <ul style="list-style-type: none"> <li>• 47 CFR FCC Part 15, Subpart B, Class A</li> <li>• ANSI C63.4:2014</li> <li>• CISPR 32:2008</li> </ul>
Morocco (CMIM)		Meets the following standards: <ul style="list-style-type: none"> <li>• EN 55032, EN 55035</li> <li>• EN 55032:2015 +A11:2020, Class A</li> <li>• EN 55035:2017 +A11:2020</li> </ul>
United Kingdom (UKCA)		Meets the following standards: <ul style="list-style-type: none"> <li>• EN 55032, EN 55035</li> <li>• EN 55032:2015 +A11:2020, Class A</li> <li>• EN 55035:2017 +A11:2020</li> </ul>
Country of Origin	Made in XXXX	XXXX indicates the country of origin.

## FCC Compliance

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user is required to correct the interference at his or her own expense.

## Safety Characteristics

All tri-mode storage adapters meet or exceed the requirements of UL flammability rating 94 V0. Each bare board is also marked with the supplier name or trademark, type, and UL flammability rating. For the boards installed in a PCIe bus slot, all voltages are lower than the SELV 42.4V limit.

### VCCI – Japan

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

**VCCI – A**

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures. VCCI—A.

### Taiwan BSMI Compliance

警告：為避免電磁干擾，本產品不應安裝或使用於住宅環境。

Warning: To avoid electromagnetic interference, this product should not be installed or used in residential environments.

## Cable Drawings and Pinouts

---

Use the cable drawings and pinouts in this appendix if your design requires you to design your own cables.

### Cable 05-60001-00

The following figure shows the drawing and pinout for Broadcom cable 05-60001-00, a x8 SFF-8654 to 2 x4 SFF-8612 connection.





REVISIONS				
REV	ECO	DESCRIPTION	DATE	APPROVED
001		PRELIMINARY RELEASE	26FEB18	
002	175141	UPDATE WIRE GAUGE AND IMPEDANCE TOLERANCE ITEM 3. REVISE MARKING REQUIREMENTS NOTE 3.	21NOV19	



1. DRAWING NOT TO SCALE.
2. ELECTRICAL AND MECHANICAL PERFORMANCE SHALL MEET PCIe GEN 4 AND SAS 4.0 INDUSTRIAL STANDARDS.
3. MARK LABEL (ITEM 8) WITH:  
SLIMSAS Y (PCIe)  
BROADCOM PART NUMBER  
BROADCOM REVISION XXX  
DATE CODE DD/MMM/YY  
  
SECONDARY MARKING WITH MANUFACTURER PART NUMBER AND REVISION ACCEPTABLE.
4. SEE CABLE WIRING TABLE AND RELATED NOTES.

9	LABEL	LABEL, 40X14MM, WHITE, R2, HF	A/R	
8	LABEL	LABEL, 70X26MM, WHITE, R2, HF	A/R	SEE NOTE 4
7	TAPE	ACETATE TAPE: W=1 INCH	A/R	
6	SLEEVE	EXPANDO TUBE: OD=7MM, GREEN, VW-I, HF	A/R	
5	SLEEVE	EXPANDO TUBE: OD=10MM, GREEN, VW-I, HF	A/R	
4	WIRE	UL1061, STRANDED	A/R	SEE NOTE 4
3	CABLE	SAS CABLE: UL20744, 28-32AWG, 92.5C $\pm$ 10% DIFF, SAS4, PCIE GEN 4, VW-I, NATURAL, HF	A/R	
2	CONNECTOR	SFF-8612, 2P, STRAIGHT, ACTIVE LATCH, X4, SAS 4.0, PCIE GEN 4	A/R	SEE NOTE 4
1	CONNECTOR	SFF-8654, 74P, STRAIGHT, X8, SAS 4.0, PCIE GEN 4	I	SEE NOTE 4
ITEM	CALLOUT	DESCRIPTION	QUANTITY	NOTES

APPROVALS DRAWN BY: 06FEB18 APPROVED BY: 26FEB18		UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS. TOLERANCES: X.X ± 0.2 MM X.XX ± 0.15 MM X.XXX ± 0.050 MM ANGLES ± 1°			
Copyright Confidential and Copyright Broadcom Limited All Rights Reserved. Any copy is an unauthorized copy. The purchaser is responsible for verifying that the document is revision is current. The purchaser is responsible for removing obsolete documents from their stock of files.		SCALE 1 : 500			
TITLE CABLE, SFF-8654 X8 TO 2X SFF-8612 X4, PCIE, 1M		SIZE D 5067-6865		REV 002 SHEET	

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
NC	SO HOST	A1	P0 BACKPLANE	B1	NC		
GND		A2		B2	GND	ITEM 3	
Rx0+		A3		B3	Tx0+	ITEM 3	
Rx0-		A4		B4	Tx0-	ITEM 3	
GND		A5		B5	GND	ITEM 3	
Rx1+		A6		B6	Tx1+	ITEM 3	
Rx1-		A7		B7	Tx1-	ITEM 3	
GND		A8		B8	GND	ITEM 3	
SB7A		A9			NC		NOTE 2
SB4A		A10		B10	CWAKE#	ITEM 4	NOTE 1
SB3A		A11		B9	CB_L_ID	ITEM 4	NOTE 1
SB3A		A12		B11	GND	ITEM 3	
SBA+		A13		B12	REFCLK+	ITEM 3	
SBA-		A14		B13	REFCLK-	ITEM 3	
GND		A15		B14	GND	ITEM 3	
Rx2+		A16		B15	Tx2+	ITEM 3	
Rx2-		A17		B16	Tx2-	ITEM 3	
GND		A18		B17	GND	ITEM 3	
Rx3+		A19		B18	Tx3+	ITEM 3	
Rx3-				B19	Tx3-	ITEM 3	
GND				B20	GND	ITEM 3	
NC				B21	NC		
NC				A1	NC		
GND		B1		A2	GND	ITEM 3	
Tx0+		B2		A3	Rx0+	ITEM 3	
Tx0-		B3		A4	Rx0-	ITEM 3	
GND		B4		A5	GND	ITEM 3	
Tx1+		B5		A6	Rx1+	ITEM 3	
Tx1-		B6		A7	Rx1-	ITEM 3	
GND		B7		A8	GND	ITEM 3	
SB0A		B8		A9	SCL	ITEM 4	NOTE 1
SB1A		B9		A10	SDA	ITEM 4	NOTE 1
SB2A		B10		A11	GND	ITEM 3	
SB5A		B11		A12	PERST#	ITEM 3	
SB6A		B12		A13	D_INPL#	ITEM 3	
GND		B13		A14	GND	ITEM 3	
Tx2+		B14		A15	Rx2+	ITEM 3	
Tx2-		B15		A16	Rx2-	ITEM 3	
GND		B16		A17	GND	ITEM 3	
Tx3+		B17		A18	Rx3+	ITEM 3	
Tx3-		B18		A19	Rx3-	ITEM 3	
GND		B19		A20	GND	ITEM 3	
NC				A21	NC		


**NOTES:**



1. END TO END RESISTANCE OF INDICATED CONNECTION SHALL BE 750 MILLIOHM MAX.
2. SHORT PIN/PAD S0-A8 TO S0-B9. NO DIRECT CONNECT S0-A8 TO CONNECTOR P0.
3. SHORT PIN/PAD S0-A26 TO S0-B27. NO DIRECT CONNECT S0-A26 TO CONNECTOR P1.

CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE	NOTES
NC		SO HOST		P1 BACKPLANE	B1	NC			
GND			A19		B2	GND	ITEM 3		
Rx4+			A20		B3	Tx0+	ITEM 3		
Rx4-			A21		B4	Tx0-	ITEM 3		
GND			A22		B5	GND	ITEM 3		
Rx5+			A23		B6	Tx1+	ITEM 3		
Rx5-			A24		B7	Tx1-	ITEM 3		
GND			A25		B8	GND	ITEM 3		
SB7B			A26			NC			NOTE 3
SB4B			A27		B10	WAKE#	ITEM 4		NOTE 1
SB3B			A28		B9	CB_L_ID	ITEM 4		NOTE 1
SB3B			A28		B11	GND	ITEM 3		
SB8+			A29		B12	REFCLK+	ITEM 3		
SB8-			A30		B13	REFCLK-	ITEM 3		
GND			A31		B14	GND	ITEM 3		
Rx6+			A32		B15	Tx2+	ITEM 3		
Rx6-			A33		B16	Tx2-	ITEM 3		
GND			A34		B17	GND	ITEM 3		
Rx7+			A35		B18	Tx3+	ITEM 3		
Rx7-			A36		B19	Tx3-	ITEM 3		
GND			A37		B20	GND	ITEM 3		
NC					B21	NC			
NC					A1	NC			
GND			B19		A2	GND	ITEM 3		
Tx4+			B20		A3	Rx0+	ITEM 3		
Tx4-			B21		A4	Rx0-	ITEM 3		
GND			B22		A5	GND	ITEM 3		
Tx5+			B23		A6	Rx1+	ITEM 3		
Tx5-			B24		A7	Rx1-	ITEM 3		
GND			B25		A8	GND	ITEM 3		
SB0B			B26		A9	SCL	ITEM 4		NOTE 1
SB1B			B27		A10	SDA	ITEM 4		NOTE 1
SB2B			B28		A11	GND	ITEM 3		
SB5B			B29		A12	PERRST#	ITEM 3		
SB6B			B30		A13	D_INPL#	ITEM 3		
GND			B31		A14	GND	ITEM 3		
Tx6+			B32		A15	Rx2+	ITEM 3		
Tx6-			B33		A16	Rx2-	ITEM 3		
GND			B34		A17	GND	ITEM 3		
Tx7+			B35		A18	Rx3+	ITEM 3		
Tx7-			B36		A19	Rx3-	ITEM 3		
GND			B37		A20	GND	ITEM 3		
NC					A21	NC			

The following figure shows the drawing and pinout for Broadcom cable 05-60002-00, a x8 SFF-8654 to 2 x4 SFF-8643 connection. Use this cable for NVMe connections on SuperMicro Purley backplanes.

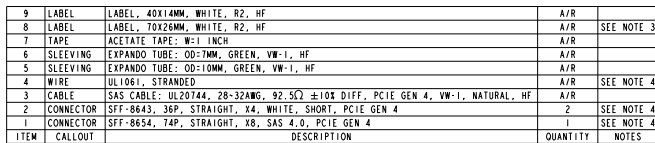REVISONS				
REV	ECO	DESCRIPTION	DATE	APPROVED
001		PRELIMINARY RELEASE	09FEB18	
002	141562	PRELIMINARY RELEASE, UPDATE FIRE GAUGE AND IMPEDANCE TOLERANCE ITEM 3, REVISE MARKING REQUIREMENTS NOTE 4, ADD HOST CONNECTOR LABEL, ADD HOST AND TARGET WIRING TABLE, WIRING CHANGES TO TARGET WIRING TABLE, WIRING TABLE, SO: BB-B10, B26-B28, PO: B1, C1-C2, D1-D2, F1-F2, G1-G2, H1-H2, I1-I2, J1-J2, K1-K2, L1-L2, M1-M2, N1-N2, O1-O2, P1-P2, Q1-Q2, R1-R2, S1-S2, T1-T2, U1-U2, V1-V2, W1-W2, X1-X2, Y1-Y2, Z1-Z2, AA1-AA2, AB1-AB2, AC1-AC2, AD1-AD2, AE1-AE2, AF1-AF2, AG1-AG2, AH1-AH2, AI1-AI2, AJ1-AJ2, AK1-AK2, AL1-AL2, AM1-AM2, AN1-AN2, AO1-AO2, AP1-AP2, AQ1-AQ2, AR1-AR2, AS1-AS2, AT1-AT2, AU1-AU2, AV1-AV2, AW1-AW2, AX1-AX2, AY1-AY2, AZ1-AZ2, BA1-BA2, BB1-BB2, BC1-BC2, BD1-BD2, BE1-BE2, BF1-BF2, BG1-BG2, BH1-BH2, BI1-BI2, BJ1-BJ2, BK1-BK2, BL1-BL2, BM1-BM2, BN1-BN2, BO1-BO2, BP1-BP2, BQ1-BQ2, BR1-BR2, BS1-BS2, BT1-BT2, BU1-BU2, BV1-BV2, BW1-BW2, BX1-BX2, BY1-BY2, BZ1-BZ2, CA1-CA2, CB1-CB2, CC1-CC2, CD1-CD2, CE1-CE2, CF1-CF2, CG1-CG2, CH1-CH2, CI1-CI2, CJ1-CJ2, CK1-CK2, CL1-CL2, CM1-CM2, CN1-CN2, CO1-CO2, CP1-CP2, CQ1-CQ2, CR1-CR2, CS1-CS2, CT1-CT2, CU1-CU2, CV1-CV2, CW1-CW2, CX1-CX2, CY1-CY2, CZ1-CZ2, DA1-DA2, DB1-DB2, DC1-DC2, DD1-DD2, DE1-DE2, DF1-DF2, DG1-DG2, DH1-DH2, DI1-DI2, DJ1-DJ2, DK1-DK2, DL1-DL2, DM1-DM2, DN1-DN2, DO1-DO2, DP1-DP2, DQ1-DQ2, DR1-DR2, DS1-DS2, DT1-DT2, DU1-DU2, DV1-DV2, DW1-DW2, DX1-DX2, DY1-DY2, DZ1-DZ2, EA1-EA2, EB1-EB2, EC1-EC2, ED1-ED2, EE1-EE2, EF1-EF2, EG1-EG2, EH1-EH2, EI1-EI2, EJ1-EJ2, EK1-EK2, EL1-EL2, EM1-EM2, EN1-EN2, EO1-EO2, EP1-EP2, EQ1-EQ2, ER1-ER2, ES1-ES2, ET1-ET2, EU1-EU2, EV1-EV2, EW1-EW2, EX1-EX2, EY1-EY2, EZ1-EZ2, FA1-FA2, FB1-FB2, FC1-FC2, FD1-FD2, FE1-FE2, FF1-FF2, FG1-FG2, FH1-FH2, FI1-FI2, FJ1-FJ2, FK1-FK2, FL1-FL2, FM1-FM2, FN1-FN2, FO1-FO2, FP1-FP2, FQ1-FQ2, FR1-FR2, FS1-FS2, FT1-FT2, FU1-FU2, FV1-FV2, FW1-FW2, FX1-FX2, FY1-FY2, FZ1-FZ2, GA1-GA2, GB1-GB2, GC1-GC2, GD1-GD2, GE1-GE2, GF1-GF2, GG1-GG2, GH1-GH2, GI1-GI2, GJ1-GJ2, GK1-GK2, GL1-GL2, GM1-GM2, GN1-GN2, GO1-GO2, GP1-GP2, GQ1-GQ2, GR1-GR2, GS1-GS2, GT1-GT2, GU1-GU2, GV1-GV2, GW1-GW2, GX1-GX2, GY1-GY2, GZ1-GZ2, HA1-HA2, HB1-HB2, HC1-HC2, HD1-HD2, HE1-HE2, HF1-HF2, HG1-HG2, HH1-HH2, HI1-HI2, HJ1-HJ2, HK1-HK2, HL1-HL2, HM1-HM2, HN1-HN2, HO1-HO2, HP1-HP2, HQ1-HQ2, HR1-HR2, HS1-HS2, HT1-HT2, HU1-HU2, HV1-HV2, HW1-HW2, HX1-HX2, HY1-HY2, HZ1-HZ2, IA1-IA2, IB1-IB2, IC1-IC2, ID1-ID2, IE1-IE2, IF1-IF2, IG1-IG2, IH1-IH2, II1-II2, IJ1-IJ2, IK1-IK2, IL1-IL2, IM1-IM2, IN1-IN2, IO1-IO2, IP1-IP2, IQ1-IQ2, IR1-IR2, IS1-IS2, IT1-IT2, IU1-IU2, IV1-IV2, IW1-IW2, IX1-IX2, IY1-IY2, IZ1-IZ2, JA1-JA2, JB1-JB2, JC1-JC2, JD1-JD2, JE1-JE2, JF1-JF2, JG1-JG2, JH1-JH2, JI1-JI2, JJ1-JJ2, JK1-JK2, JL1-JL2, JM1-JM2, JN1-JN2, JO1-JO2, JP1-JP2, JQ1-JQ2, JR1-JR2, JS1-JS2, JT1-JT2, JU1-JU2, JV1-JV2, JW1-JW2, JX1-JX2, JY1-JY2, JZ1-JZ2, KA1-KA2, KB1-KB2, KC1-KC2, KD1-KD2, KE1-KE2, KF1-KF2, KG1-KG2, KH1-KH2, KI1-KI2, KJ1-KJ2, KK1-KK2, KL1-KL2, KM1-KM2, KN1-KN2, KO1-KO2, KP1-KP2, KQ1-KQ2, KR1-KR2, KS1-KS2, KT1-KT2, KU1-KU2, KV1-KV2, KW1-KW2, KX1-KX2, KY1-KY2, KZ1-KZ2, LA1-LA2, LB1-LB2, LC1-LC2, LD1-LD2, LE1-LE2, LF1-LF2, LG1-LG2, LH1-LH2, LI1-LI2, LJ1-LJ2, LK1-LK2, LL1-LL2, LM1-LM2, LN1-LN2, LO1-LO2, LP1-LP2, LQ1-LQ2, LR1-LR2, LS1-LS2, LT1-LT2, LU1-LU2, LV1-LV2, LW1-LW2, LX1-LX2, LY1-LY2, LZ1-LZ2, MA1-MA2, MB1-MB2, MC1-MC2, MD1-MD2, ME1-ME2, MF1-MF2, MG1-MG2, MH1-MH2, MI1-MI2, MJ1-MJ2, MK1-MK2, ML1-ML2, MM1-MM2, MN1-MN2, MO1-MO2, MP1-MP2, MQ1-MQ2, MR1-MR2, MS1-MS2, MT1-MT2, MU1-MU2, MV1-MV2, MW1-MW2, MX1-MX2, MY1-MY2, MZ1-MZ2, NA1-NA2, NB1-NB2, NC1-NC2, ND1-ND2, NE1-NE2, NF1-NF2, NG1-NG2, NH1-NH2, NI1-NI2, NJ1-NJ2, NK1-NK2, NL1-NL2, NM1-NM2, NO1-NO2, NP1-NP2, NQ1-NQ2, NR1-NR2, NS1-NS2, NT1-NT2, NU1-NU2, NV1-NV2, NW1-NW2, NX1-NX2, NY1-NY2, NZ1-NZ2, OA1-OA2, OB1-OB2, OC1-OC2, OD1-OD2, OE1-OE2, OF1-OF2, OG1-OG2, OH1-OH2, OI1-OI2, OJ1-OJ2, OK1-OK2, OL1-OL2, OM1-OM2, ON1-ON2, OO1-OO2, OP1-OP2, OQ1-OQ2, OR1-OR2, OS1-OS2, OT1-OT2, OU1-OU2, OV1-OV2, OW1-OW2, OX1-OX2, OY1-OY2, OZ1-OZ2, PA1-PA2, PB1-PB2, PC1-PC2, PD1-PD2, PE1-PE2, PF1-PF2, PG1-PG2, PH1-PH2, PI1-PI2, PJ1-PJ2, PK1-PK2, PL1-PL2, PM1-PM2, PN1-PN2, PO1-PO2, PP1-PP2, PQ1-PQ2, PR1-PR2, PS1-PS2, PT1-PT2, PU1-PU2, PV1-PV2, PW1-PW2, PX1-PX2, PY1-PY2, PZ1-PZ2, QA1-QA2, QB1-QB2, QC1-QC2, QD1-QD2, QE1-QE2, QF1-QF2, QG1-QG2, QH1-QH2, QI1-QI2, QJ1-QJ2, QK1-QK2, QL1-QL2, QM1-QM2, QN1-QN2, QO1-QO2, QP1-QP2, QQ1-QQ2, QR1-QR2, QS1-QS2, QT1-QT2, QU1-QU2, QV1-QV2, QW1-QW2, QX1-QX2, QY1-QY2, QZ1-QZ2, RA1-RA2, RB1-RB2, RC1-RC2, RD1-RD2, RE1-RE2, RF1-RF2, RG1-RG2, RH1-RH2, RI1-RI2, RJ1-RJ2, RK1-RK2, RL1-RL2, RM1-RM2, RN1-RN2, RO1-RO2, RP1-RP2, RQ1-RQ2, RR1-RR2, RS1-RS2, RT1-RT2, RU1-RU2, RV1-RV2, RW1-RW2, RX1-RX2, RY1-RY2, RZ1-RZ2, SA1-SA2, SB1-SB2, SC1-SC2, SD1-SD2, SE1-SE2, SF1-SF2, SG1-SG2, SH1-SH2, SI1-SI2, SJ1-SJ2, SK1-SK2, SL1-SL2, SM1-SM2, SN1-SN2, SO1-SO2, SP1-SP2, SQ1-SQ2, SR1-SR2, SS1-SS2, ST1-ST2, SU1-SU2, SV1-SV2, SW1-SW2, SX1-SX2, SY1-SY2, SZ1-SZ2, TA1-TA2, TB1-TB2, TC1-TC2, TD1-TD2, TE1-TE2, TF1-TF2, TG1-TG2, TH1-TH2, TI1-TI2, TJ1-TJ2, TK1-TK2, TL1-TL2, TM1-TM2, TN1-TN2, TO1-TO2, TP1-TP2, TQ1-TQ2, TR1-TR2, TS1-TS2, TT1-TT2, TU1-TU2, TV1-TV2, TW1-TW2, TX1-TX2, TY1-TY2, TZ1-TZ2, UA1-UA2, UB1-UB2, UC1-UC2, UD1-UD2, UE1-UE2, UF1-UF2, UG1-UG2, UH1-UH2, UI1-UI2, UJ1-UJ2, UK1-UK2, UL1-UL2, UM1-UM2, UN1-UN2, UO1-UO2, UP1-UP2, UQ1-UQ2, UR1-UR2, US1-US2, UT1-UT2, UU1-UU2, UV1-UV2, UW1-UW2, UX1-UX2, UY1-UY2, UZ1-UZ2, VA1-VA2, VB1-VB2, VC1-VC2, VD1-VD2, VE1-VE2, VF1-VF2, VG1-VG2, VH1-VH2, VI1-VI2, VJ1-VJ2, VK1-VK2, VL1-VL2, VM1-VM2, VN1-VN2, VO1-VO2, VP1-VP2, VQ1-VQ2, VR1-VR2, VS1-VS2, VT1-VT2, VU1-VU2, VV1-VV2, VW1-VW2, VX1-VX2, VY1-VY2, VZ1-VZ2, WA1-WA2, WB1-WB2, WC1-WC2, WD1-WD2, WE1-WE2, WF1-WF2, WG1-WG2, WH1-WH2, WI1-WI2, WJ1-WJ2, WK1-WK2, WL1-WL2, WM1-WM2, WN1-WN2, WO1-WO2, WP1-WP2, WQ1-WQ2, WR1-WR2, WS1-WS2, WT1-WT2, WU1-WU2, WV1-WV2, WW1-WW2, WX1-WX2, WY1-WY2, WZ1-WZ2, XA1-XA2, XB1-XB2, XC1-XC2, XD1-XD2, XE1-XE2, XF1-XF2, XG1-XG2, XH1-XH2, XI1-XI2, XJ1-XJ2, XK1-XK2, XL1-XL2, XM1-XM2, XN1-XN2, XO1-XO2		



APPROVALS		DATE		UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS.		 <b>BROADCOM</b>	
ISSUED BY	05FB18			TOLERANCES:		TITLE	
APPROVED BY	09FB18			X 0.125 MM Y 0.125 MM Z 0.250 MM ANGLES 0.500 MM		CABLE, SFF-8654 X8 to 2X SFF-8643 X4 (W), 1M	
Company Confidential & Copyright Broadcom Limited. All rights reserved. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Broadcom Limited. The publisher is responsible for recovering the total cost of the reproduction of this document from the person or organization requesting the reproduction. The publisher is responsible for ensuring adequate distribution of this document to all relevant parties.				SCALE 1:500		SIZE Dwg No. 0067-6862	
						REV 003 SHEET	


CONNECTOR SIGNAL	CONNECTOR (HOST)	PIN/PAD		CONNECTOR (TARGET)	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	CONNECTOR SIGNAL	CONNECTOR (HOST)	PIN/PAD		CONNECTOR (TARGET)	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE
GND	S0	A1		P0	D3	GND	ITEM 3	GND	S0	A19		P1	D8	GND	ITEM 3
Rx0+		A2		D4	Tx0+	ITEM 3	Rx4+	A20	D3	Tx0+		ITEM 3			
Rv0-		A3		D5	Tx0-	ITEM 3	Rx4-	A21	D5	Tx0-		ITEM 3			
GND		A4		C3/D6	GND	ITEM 3, NOTE 2	GND	A22	C3/D6	GND		ITEM 3, NOTE			
Rx1+		A5		C4	Tx1+	ITEM 3	Rx5+	A23	C4	Tx1+		ITEM 3			
Rx1-		A6		C5	Tx1-	ITEM 3	Rx5-	A24	C5	Tx1-		ITEM 3			
GND		A7	C6	GND	ITEM 3	GND	A25	C6	GND	ITEM 3					
SB1A		A8		NC	NOTE 3	SB1B	A26		NC	NOTE 5					
SB4A		A9		NC		SB4B	A27		NC						
SB3A		A10		A3	GND	ITEM 3	SB3B	A28		A3	GND	ITEM 3			
SB+A		A11		A2	REFCLK+	ITEM 3	SB+B	A29		A2	REFCLK+	ITEM 3			
SB-A		A12		A1	REFCLK-	ITEM 3	SB-B	A30		A1	REFCLK-	ITEM 3			
GND		A13		D6	GND	ITEM 3	GND	A31		D6	GND	ITEM 3			
Rz2+		A14		D7	Tx2+	ITEM 3	Rx6+	A32		D7	Tx2+	ITEM 3			
Rz2-		A15		D8	Tx2-	ITEM 3	A33		D8	Tx2-	ITEM 3				
GND		A16		D9/C7	GND	ITEM 3, NOTE 2	GND	A34		D9/C7	GND	ITEM 3, NOTE			
Rx3+		A17		C7	Tx3+	ITEM 3	Rx7+	A35		C7	Tx3+	ITEM 3			
Rx3-		A18		C8	Tx3-	ITEM 3	Rx7-	A36		C8	Tx3-	ITEM 3			
GND		A19		C9	GND	ITEM 3	GND	A37		C9	GND	ITEM 3			
GND		B1		B3	GND	ITEM 3	GND	B19		B3	GND	ITEM 3			
Tx0+		B2		B4	Rx0+	ITEM 3	Tx4+	B20		B4	Rx0+	ITEM 3			
Tx0-		B3		B5	Rx0-	ITEM 3	Tx4-	B21		B5	Rx0-	ITEM 3			
GND		B4		B6/A3	GND	ITEM 3, NOTE 2	GND	B22		B6/A3	GND	ITEM 3, NOTE			
Tx1+		B5		A4	Rx1+	ITEM 3	Tx5+	B23		A4	Rx1+	ITEM 3			
Tx1-		B6		A5	Rx1-	ITEM 3	Tx5-	B24		A5	Rx1-	ITEM 3			
GND		B7		A6	GND	ITEM 3	GND	B25		A6	GND	ITEM 3			
SB0A		B8		D1	2W_CLK	ITEM 4, NOTE 1	SB0B	B26		D1	2W_CLK	ITEM 4, NOTE			
SB1A		B9		D2	2W_SDA	ITEM 4, NOTE 1	SB1B	B27		D2	2W_SDA	ITEM 4, NOTE			
SB2A		B10			NC	SHORT TO GND	SB2B	B28			NC	SHORT TO GND			
SB5A		B11		B2	PERST#	ITEM 4, NOTE 1	SB5B	B29		B2	PERST#	ITEM 4, NOTE			
SB6A		B12			NC	SHORT TO GND	SB6B	B30			NC	SHORT TO GND			
GND		B13		B6	GND	ITEM 3	GND	B31		B6	GND	ITEM 3			
Tx2+		B14		B7	Rx2+	ITEM 3	Tx6+	B32		B7	Rx2+	ITEM 3			
Tx2-		B15		B8	Rx2-	ITEM 3	Tx6-	B33		B8	Rx2-	ITEM 3			
GND		B16		B9/A6	GND	ITEM 3, NOTE 2	GND	B34		B9/A6	GND	ITEM 3, NOTE			
Tx3+		B17		A7	Rx3+	ITEM 3	Tx7+	B35		A7	Rx3+	ITEM 3			
Tx3-		B18		A8	Rx3-	ITEM 3	Tx7-	B36		A8	Rx3-	ITEM 3			
GND		B19		A9	GND	ITEM 3	GND	B37		A9	GND	ITEM 3			
				C1	NC					C1	NC				
				C2	NC					C2	NC				
				B1	NC					B1	NC				

- NOTES:**
1. END TO END RESISTANCE OF INDICATED CONNECTION SHALL BE 750 MILLIOHM MAX.
  2. CONNECT SHIELD OF DIFFERENTIAL PAIR TO INDICATED PIN/PAD AND SHORT TO SECOND INDICATED PIN/PAD.
  3. SHORT PIN/PAD S0-A8 TO S0-B9. NO DIRECT CONNECT S0-A8 TO CONNECTOR PD.
  4. DELETED
  5. SHORT PIN/PAD S0-A26 TO S0-B27. NO DIRECT CONNECT S0-A26 TO CONNECTOR P1.
  6. DELETED

Cable 05-60003-00


The following figure shows the drawing and pinout for Broadcom cable 05-60003-00, a x8 SFF-8654 to 2 x4 SFF-8643 connection.

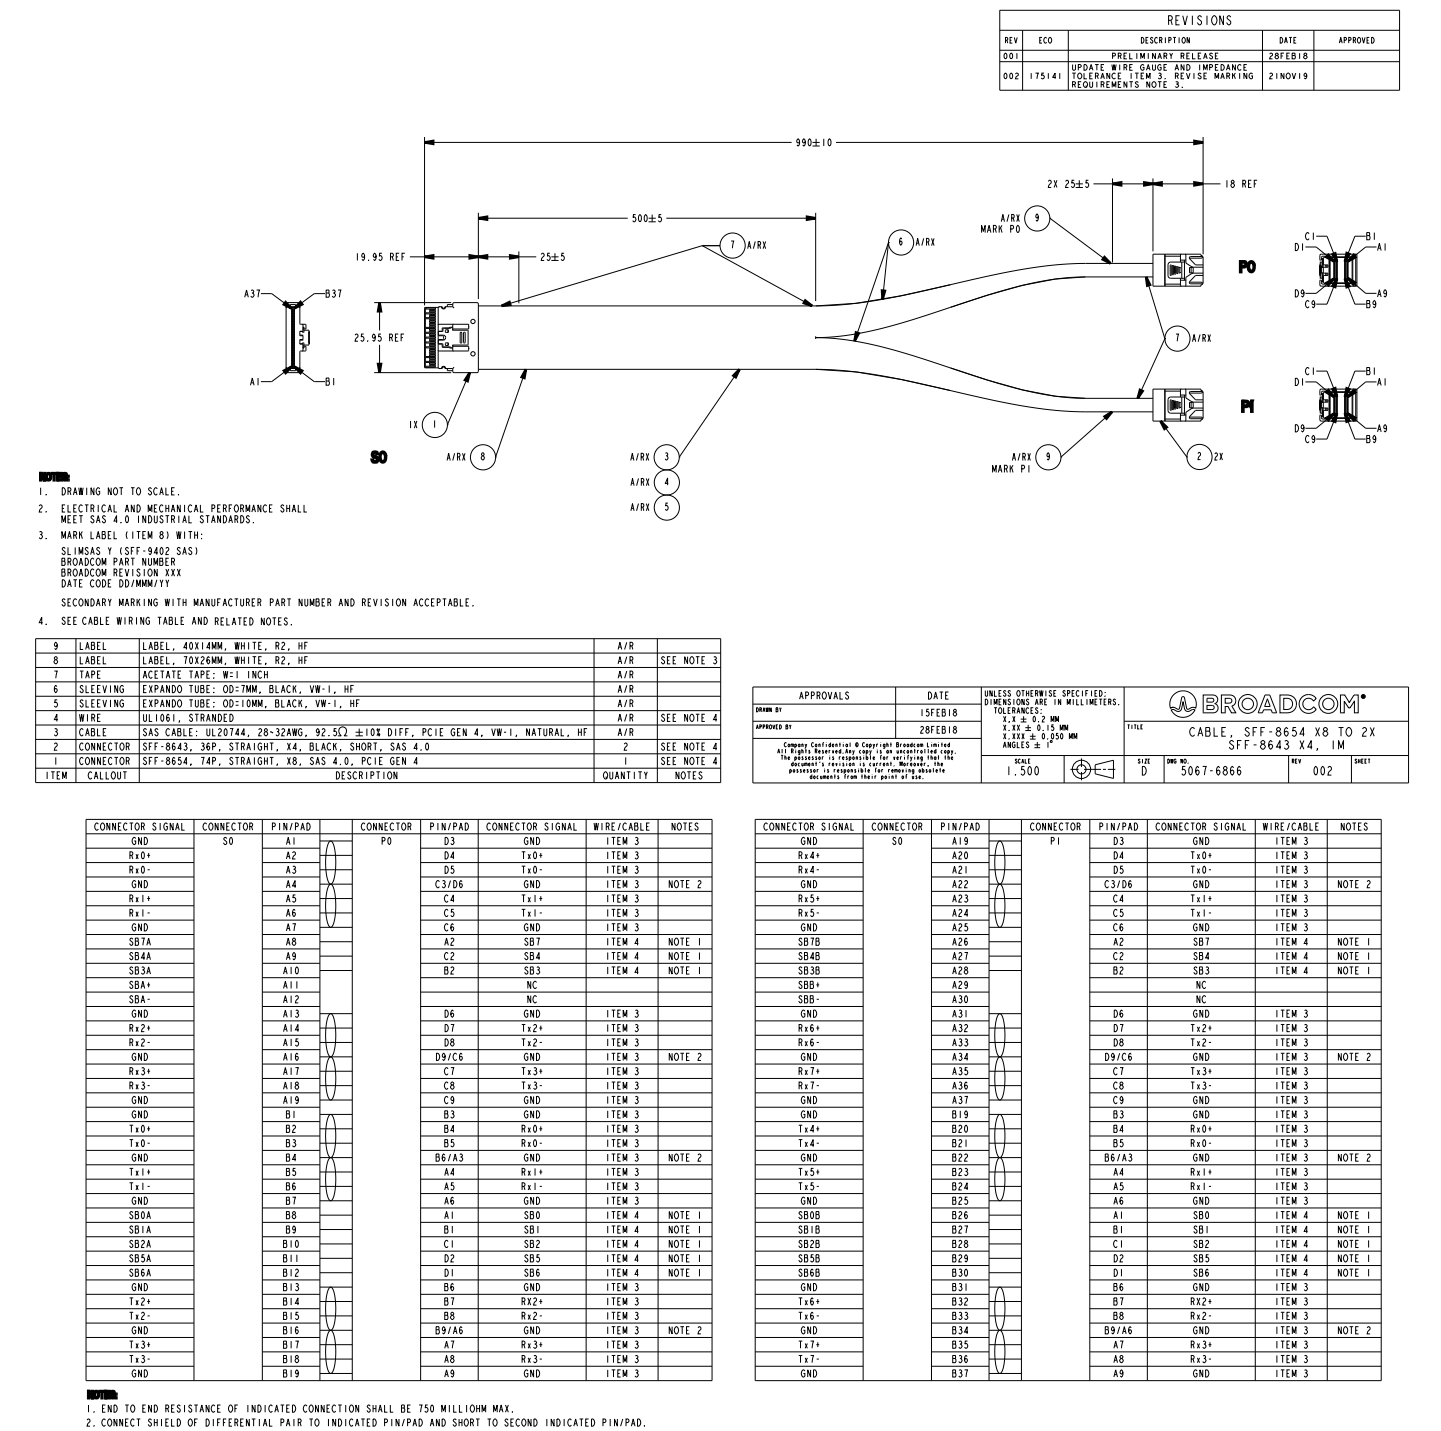

Figure 18: Cable 05-60003-00 Drawing and Pinout



The following figure shows the drawing and pinout for Broadcom cable 05-60004-00, a x8 SFF-8654 to 2 x4 SFF-8654 connection.

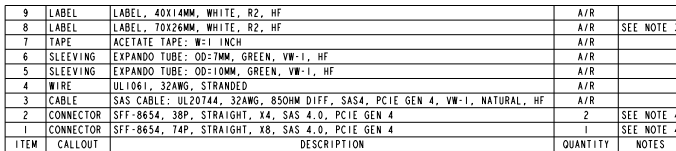REVISIONS				
REV	ECO	DESCRIPTION	DATE	APPROVED
001		INITIAL RELEASE	02JAN18	




APPROVALS		DATE	UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS.		 <b>BROADCOM</b> ®	
DRAWN BY		27DEC17	TOLERANCES:		TITLE	
APPROVED BY		02JAN18	X .1 ± 0.2 Y .1 ± 0.2 Z .1 ± 0.15 MM X .1 ± 0.25 MM Y .1 ± 0.25 MM Z .1 ± 0.25 MM		CABLE, SFF-8654 X8 TO 2X SFF-8654 X4, 1M	
Company Confidential © Copyright Broadcom Ltd All Rights Reserved. No copy is to be made or copy. The purchaser is responsible for verifying that the document is accurate in content. Moreover, the purchaser is responsible for removing obsolete documents from their plant or office.			SCALE 1 : 500		SIZE D 5067-6103	REV 001 SHEET



CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE
GND	SO	A1	PO	B1	GND	ITEM 3
R2+0		A2		B2	Tx+0	ITEM 3
R2-0		A3		B3	Tx-0	ITEM 3
GND		A4		B4	GND	ITEM 3
Rx1+		A5		B5	Tx1+	ITEM 3
Rx1-		A6		B6	Tx1-	ITEM 3
GND		A7		B7	GND	ITEM 3
SB1A		A8		B8	SB7	ITEM 4
SB4A		A9		B9	SB4	ITEM 4
GND(SB3A)		A10		B10	GND(SB3)	ITEM 3
SB4+		A11		B11	SB4+	ITEM 3
SB4-		A12		B12	SB4-	ITEM 3
GND		A13		B13	GND	ITEM 3
Rx2+		A14		B14	Tx2+	ITEM 3
Rx2-		A15		B15	Tx2-	ITEM 3
GND		A16		B16	GND	ITEM 3
Rx3+		A17		B17	Tx3+	ITEM 3
Rx3-		A18		B18	Tx3-	ITEM 3
GND		A19		B19	GND	ITEM 3, NOTE 1
GND		B1		A1	GND	ITEM 3
Tx2+		B2		A2	Rx2+	ITEM 3
Tx2-		B3		A3	Rx2-	ITEM 3
GND		B4		A4	GND	ITEM 3
Tx1+		B5		A5	Rx1+	ITEM 3
Tx1-		B6		A6	Rx1-	ITEM 3
GND		B7		A7	GND	ITEM 3
SB0A		B8		A8	SB0	ITEM 4
SB1A		B9		A9	SB1	ITEM 4
GND(SB2A)		B10		A10	GND(SB2)	ITEM 3
SB5A		B11		A11	SB5	ITEM 3
SB6A		B12		A12	SB6	ITEM 3
GND		B13		A13	GND	ITEM 3
Tx2+		B14		A14	Rx2+	ITEM 3
Tx2-		B15		A15	Rx2-	ITEM 3
GND		B16		A16	GND	ITEM 3
Tx3+		B17		A17	Rx3+	ITEM 3
Tx3-		B18		A18	Rx3-	ITEM 3
GND		B19		A19	GND	ITEM 3, NOTE

CONNECTOR SIGNAL	CONNECTOR	Pin/PAD	CONNECTOR	Pin/PAD	CONNECTOR SIGNAL	WIRE/CABLE
GND	<b>SO</b>	A19	<b>PI</b>	B1	GND	ITEM 3, NOTE 1
Rx4+		A20		B2	Tx0+	ITEM 3
Rx4-		A21		B3	Tx0-	ITEM 3
GND		A22		B4	GND	ITEM 3
Rx5+		A23		B5	Tx1+	ITEM 3
Rx5-		A24		B6	Tx1-	ITEM 3
GND		A25		B7	GND	ITEM 3
SB7B		A26		B8	SB7	ITEM 4
SB4B		A27		B9	SB4	ITEM 3
GND(SB3B)		A28		B10	GND(SB3)	ITEM 3
SB8+		A29		B11	SB8+	ITEM 3
SB8-		A30		B12	SB8-	ITEM 3
GND		A31		B13	GND	ITEM 3
Rx6+		A32		B14	Tx2+	ITEM 3
Rx6-		A33		B15	Tx2-	ITEM 3
GND		A34		B16	GND	ITEM 3
Rx7+		A35		B17	Tx3+	ITEM 3
Rx7-		A36		B18	Tx3-	ITEM 3
GND		A37		B19	GND	ITEM 3
GND		B19		A1	GND	ITEM 3, NOTE 1
Tx4+		B20		A2	Rx0+	ITEM 3
Tx4-		B21		A3	Rx0-	ITEM 3
GND		B22		A4	GND	ITEM 3
Tx5+		B23		A5	Rx1+	ITEM 3
Tx5-		B24		A6	Rx1-	ITEM 3
GND		B25		A7	GND	ITEM 3
SB0B		B26		A8	SB0	ITEM 4
SB1B		B27		A9	SB1	ITEM 4
GND(SB2B)		B28		A10	GND(SB2)	ITEM 3
SB5B		B29		A11	SB5	ITEM 3
SB6B		B30		A12	SB6	ITEM 3
GND		B31		A13	GND	ITEM 3
Tx6+		B32		A14	Rx2+	ITEM 3
Tx6-		B33		A15	Rx2-	ITEM 3
GND		B34		A16	GND	ITEM 3
Tx7+		B35		A17	Rx3+	ITEM 3
Tx7-		B36		A18	Rx3-	ITEM 3
GND		B37		A19	GND	ITEM 3

The following figure shows the drawing and pinout for Broadcom cable 05-60005-00, a x8 SFF-8654 to 2 U.2 SFF-8639 connection.

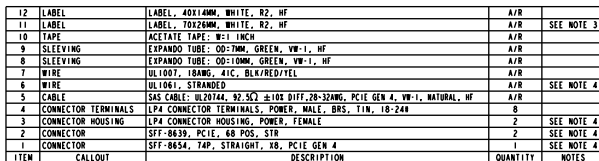REVISIONS				
REV	ECO	DESCRIPTION	DATE	APPROVED
001		PRELIMINARY RELEASE	30JAN18	
002	150550	ADDED AMG RANGE AND IMPEDANCE TOLERANCE TO ITEM 5 DESCRIPTION, REVISED NOTE 3 FOR LABEL MARKING	30APR19	



<b>APPROVALS</b> <b>DATE</b> <b>23 JAN 18</b>		<b>UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN MILLIMETERS, TOLERANCES:</b> <b>1. X ± 0.2 MM</b> <b>2. X ± 0.15 MM</b> <b>3. X ± 0.50 MM</b> <b>ANGLES ± 1°</b>		 <b>BROADCOM®</b>	
<b>DESIGNED BY</b> <b>APPROVED BY</b>	<b>23 JAN 18</b> <b>30 JAN 18</b>	<b>FILE</b> <b>CABLE, X8 SFF-8654 TO 2X SFF-8639 (U.2), WITH POWER, IM</b>		<b>SIZE D</b> <b>0067-6682</b>	
<small>Common Confidential &amp; Copyright Broadcom Limited All Rights Reserved. Any copy or use in violation of the license is prohibited. The purchaser is responsible for verifying that the document is accurate in content. Moreover, the purchaser is responsible for removing obsolete documents from their point of sale.</small>		<b>SCALE</b> <b>1:1</b>		<b>SHEET</b> <b>002</b>	<b>SHEET</b> <b>002</b>

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE
GND	S0	A1	P0	E15	GND	ITEM 5
R+0		A2		E14	PERp0	ITEM 5
R+0		A3		E13	PERn0	ITEM 5
R+0		A4		E12/S22	GND	ITEM 5, NOTE 1
R+1		A5		S21	PERp1	ITEM 5
R+1		A6		S20	PERn1	ITEM 5
GND		A7		S19	GND	ITEM 5
SB7A		A8		NC	NC	NOTE 2
SB4A		A9		NC	NC	
GND/SB3A		A10		E9	GND	ITEM 5
SB8A		A11		E7	REFCLK+	ITEM 5
SB8A		A12		E8	REFCLK-	ITEM 5
SBA		A13		S28	GND	ITEM 5
R+2+		A14		S27	PERp2	ITEM 5
R+2		A15		S26	PERn2	ITEM 5
R+2		A16		E22/S25	GND	ITEM 5, NOTE 1
R+3		A17		E21	PERp3	ITEM 5
R+3		A18		E20	PERn3	ITEM 5
GND		A19		E19	GND	ITEM 5
GND		B1		E9	GND	ITEM 5
T+0		B2		E10	PE1n0	ITEM 5
T+0		B3		E11	PE1n0	ITEM 5
B4		B4		E12/S16	GND	ITEM 5, NOTE 1
T+1		B5		S17	PE1p1	ITEM 5
T+1		B6		S18	PE1n1	ITEM 5
GND		B7		S19	GND	ITEM 5
SB0A		B8		E23	SMCLK	ITEM 6, NOTE 1
SB1A		B9		E24	SDAST	ITEM 6, NOTE 1
GND/SB2A		B10		E22	GND	ITEM 6, NOTE 1
SB5A		B11		E5	PERn1	ITEM 6, NOTE 1
SB6A		B12		P4	IFDETn	ITEM 6, NOTE 1
GND		B13		S22	GND	ITEM 5
T+2		B14		S23	PE1p2	ITEM 5
T+2		B15		S24	PE1n2	ITEM 5
GND		B16		S25/S28	GND	ITEM 5, NOTE 1
T+3		B17		E17	PE1p3	ITEM 5
T+3		B18		E18	PE1n3	ITEM 5
GND		B19		E19	GND	ITEM 5

CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE
GND		S0	A19	P1	E15	GND	ITEM 5	ITEM 5
Rx4+			A20		E14	PERp0	ITEM 5	
Rx4-			A21		E13	PERp0	ITEM 5	
GND			A22		E12/S22	GND	ITEM 5, NOTE 1	
Rx5+			A23		S21	PERp1	ITEM 5	
Rx5-			A24		S20	PERn1	ITEM 5	
GND			A25		S19	GND	ITEM 5	
SBTB			A26		NC	NC	NOTE: 3	
SB4B			A27		NC	NC		
GND/SB3B			A28		E9	GND	ITEM 5	
SB0+			A29		E7	REFCLK+	ITEM 5	
SB0-			A30		E8	REFCLK+	ITEM 5	
GND			A31		S20	GND	ITEM 5	
Rx6+			A32		S27	PERp2	ITEM 5	
Rx6-			A33		S26	PERn2	ITEM 5	
GND			A34		S25/S22	GND	ITEM 5, NOTE 1	
Rx7+			A35		S21	PERp3	ITEM 5	
Rx7-			A36		E20	PERn3	ITEM 5	
GND			A37		E19	GND	ITEM 5	
GND			B19		E9	GND	ITEM 5	
Tx4+			B20		E10	PLTn0	ITEM 5	
Tx4-			B21		E11	PLTn0	ITEM 5	
GND			B22		E12/S18	GND	ITEM 5, NOTE 1	
Tx5+			B23		S17	PLTn1	ITEM 5	
Tx5-			B24		S18	PLTn1	ITEM 5	
GND			B25		S19	GND	ITEM 5	
SB0B			B26		E23	SMCLK	ITEM 6, NOTE 4	
SB0A			B27		E24	SMCLK	ITEM 6, NOTE 4	
GND/SB2B			B28		E22	GND	ITEM 6, NOTE 4	
SB5B			B29		E5	PERSt1	ITEM 6, NOTE 4	
SB6B			B30		S4	IFIDE1	ITEM 6, NOTE 4	
GND			B31		P22	GND	ITEM 5	
Tx6+			B32		S23	PLTn2	ITEM 5	
Tx6-			B33		S24	PLTn2	ITEM 5	
GND			B34		S25/S28	GND	ITEM 5, NOTE 1	
Tx7+			B35		E17	PLTn3	ITEM 5	
Tx7-			B36		E18	PLTn3	ITEM 5	
GND			B37		E19	GND	ITEM 5	

1. CONNECT SHIELD OF DIFFERENTIAL PAIR TO INDICATED PIN/PAD AND SHORT TO SECOND INDICATED PIN/PAD.
2. SHORT PIN/PAD S0-A8 TO S0-B9. NO DIRECT CONNECT S0-A8 TO CONNECTOR PD.
3. SHORT PIN/PAD S0-A26 TO S0-B27. NO DIRECT CONNECT S0-A26 TO CONNECTOR P1.
4. END TO END RESISTANCE OF INDICATED CONNECTION SHALL BE 750 MILLIOMH MAX.

CONNECTION	PIN/PAD	CONNECTOR SIGNAL	NOTES
P0/P1	S2	S0+	NO CONNECT
	S3	S0-	
	S5	S0R	PIN/PAD SIGNAL NOT RECONNECTED VIA CONNECTOR
	S6	S0R	INTERNAL NOR VIA WIRE
	S9	S1+	
	S10	S1+	
	S12	S1R	
	S13	S1R	
	S15	RSVD	
	E1	Ref(1V)	
	E2	Ref(1V)	
	E3	3.3Vaux	
	E4	uPESST#	
	E6	RSVD	
	E16	RSVD	
	E25	DualPort1#	
	P1	RSVD	
	P2	UPTC1#	
	P3	RSVD	
	P10	PSNR	

CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	NOTES
P0/P1	S1	GND	GROUND ALL PIN/PAD SHALL BE CONNECTED TO COMMON INDIVIDUAL CONNECTOR GROUND
	S4	GND	
	S7	GND	
	S8	GND	
	S11	GND	
	S14	GND	
	P5	GND	
	P6	GND	
	P12	GND	

POWER WIRING TABLE					
POWER CONNECTOR	PIN	SYMBOL	CONNECTOR	PIN	WIRE COLOR
P2	1	12V	P0	P13, P14, P15	YELLOW
	2	GND		P12	BLACK
	3	GND		P6	BLACK
	4	5V		P7, P8, P9	RED
P3	1	12V	P1	P13, P14, P15	YELLOW
	2	GND		P12	BLACK
	3	GND		P4	BLACK
	3	5V		P7, P8, P9	RED

The following figure shows the drawing and pinout for Broadcom cable 05-60006-00, a x8 SFF-8654 to x8 U.3 SFF-8639 connection.

**REVISIONS**

REV	ECO	DESCRIPTION	DATE	APPROVED
001		PRELIMINARY RELEASE	12APR18	
002	147097	PRELIMINARY RELEASE, REVISE CONN HOUSING PIN 1 LOCATION, REVISE ITEM 7 DESCRIPTION, REVISE NOTE 3, REVISE MAIN AND DETAIL A VIEWS, CHANGE NOTE 3 MARKING FROM U.3X1 TO SAS/SATA.	12OCT18	
003	175141		21NOV19	

**NOTE:**

- DRAWING NOT TO SCALE.
- ELECTRICAL AND MECHANICAL PERFORMANCE SHALL MEET SAS4.0 INDUSTRIAL STANDARD.
- MARK LABEL (ITEM 14) WITH:  
SFF-8654 SAS/SATA  
BROADCOM PART NUMBER  
BROADCOM REVISION XXX  
DATE CODE DD/MMM/YY  
SECONDARY MARKING WITH MANUFACTURER PART NUMBER AND REVISION ACCEPTABLE.
- SEE CABLE WIRING TABLES AND RELATED NOTES.
- CONNECTOR LABEL PLACEMENT, 10 PLACES. MARK LABEL (ITEM 15) WITH WIRED CONNECTOR REFERENCE DESIGNATOR.

**TABLE 1: MATERIALS**

ITEM	CALLOUT	DESCRIPTION	QUANTITY	NOTES
15	LABEL	LABEL, 40X14MM, WHITE, R2, HF	A/R	SEE NOTE 5
14	LABEL	LABEL, 70X26MM, WHITE, R2, HF	A/R	SEE NOTE 3
13	TAPE	ACETATE TAPE: W:1 INCH	A/R	
12	SLEEVING	EXPANDO TUBE: OD:5MM, BLACK, VW-1, HF	A/R	
11	SLEEVING	EXPANDO TUBE: OD:7MM, BLACK, VW-1, HF	A/R	
10	SLEEVING	EXPANDO TUBE: OD:10MM, BLACK, VW-1, HF	A/R	
9	WIRE	UL1007, 18AWG, 41C, BLK/RED/YEL	A/R	SEE NOTE 4
8	WIRE	UL1061, STRANDED	A/R	SEE NOTE 4
7	CABLE	SAS CABLE: UL28744, 82.5Ω DIFF ±10%, 28-32AWG, SAS 4.0, VW-1, NATURAL, HF	A/R	
6	CONNECTOR TERMINALS	CRIMP TERMINALS, PB, G/F, 24-30R, HIGH	16	
5	CONNECTOR HOUSING	HOUSING, 2.54PH, 2 ROW, 4 COL, PBT, VO, BLK, R2	2	SEE NOTE 4
4	CONNECTOR TERMINALS	LP4 CONNECTOR TERMINALS, POWER, MALE, BRS, TIN, 18-24H	32	
3	CONNECTOR HOUSING	LP4 CONNECTOR HOUSING, POWER, FEMALE	8	SEE NOTE 4
2	CONNECTOR	SFF-8639, PCIE, 68 POS, STR	8	SEE NOTE 4
1	CONNECTOR	SFF-8654, TAP, STRAIGHT, X8, PCIE GEN 4	1	SEE NOTE 4

**TABLE 2: DIMENSIONS**

SCALE	SIZE D	PKG NO	REV	SHEET
1.000		5067-7542	003	

CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE	NOTES
GND		S0 HOST	A1	P0 TARGET	S7	GND	ITEM 7		
Rx0+			A2		S6	DO.TX0+	ITEM 7		
Rx0-			A3		S5	DO.TX0-	ITEM 7		
GND			A4		S4	GND	ITEM 7	NOTE 2, NOTE 3	
GND			B1		S1	GND	ITEM 7		
Tx0+			B2		S2	DO.RX0+	ITEM 7		
Tx0-			B3		S3	DO.RX0-	ITEM 7		
GND			B4		S4	GND	ITEM 7	NOTE 2, NOTE 3	
12V		P10	1	P0 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW	
GND			2		P12	GND	ITEM 9	BLACK	
GND			3		P5, P6	GND	ITEM 9	BLACK	
5V			4		P7, P8, P9	5V	ITEM 9	RED	
NC				P0 TARGET	P1	RSVD		NOTE 4	
NC					P2	sPCIeRsI		NOTE 4	

CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE	NOTES
GND		S0 HOST	A4	P1 TARGET	S7	GND	ITEM 7	NOTE 2	
Rx1+			A5		S6	DI.TX0+	ITEM 7		
Rx1-			A6		S5	DI.TX0-	ITEM 7		
GND			A7		S4	GND	ITEM 7	NOTE 3	
GND			B4		S1	GND	ITEM 7	NOTE 2	
Tx1+			B5		S2	DI.RX0+	ITEM 7		
Tx1-			B6		S3	DI.RX0-	ITEM 7		
GND			B7		S4	GND	ITEM 7	NOTE 3	
12V		P11	1	P1 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW	
GND			2		P12	GND	ITEM 9	BLACK	
GND			3		P5, P6	GND	ITEM 9	BLACK	
5V			4		P7, P8, P9	5V	ITEM 9	RED	
NC				P1 TARGET	P1	RSVD		NOTE 4	
NC					P2	sPCIeRsI		NOTE 4	

CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE	NOTES
GND		S0 HOST	A13	P2 TARGET	S7	GND	ITEM 7		
Rx2+			A14		S6	D2.TX0+	ITEM 7		
Rx2-			A15		S5	D2.TX0-	ITEM 7		
GND			A16		S4	GND	ITEM 7	NOTE 2, NOTE 3	
GND			B13		S1	GND	ITEM 7		
Tx2+			B14		S2	D2.RX0+	ITEM 7		
Tx2-			B15		S3	D2.RX0-	ITEM 7		
GND			B16		S4	GND	ITEM 7	NOTE 2, NOTE 3	
12V		P12	1	P2 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW	
GND			2		P12	GND	ITEM 9	BLACK	
GND			3		P5, P6	GND	ITEM 9	BLACK	
5V			4		P7, P8, P9	5V	ITEM 9	RED	
NC				P2 TARGET	P1	RSVD		NOTE 4	
NC					P2	sPCIeRsI		NOTE 4	

CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE	NOTES
GND		S0 HOST	A31	P6 TARGET	S7	GND	ITEM 7		
Rx6+			A32		S6	D6.TX0+	ITEM 7		
Rx6-			A33		S5	D6.TX0-	ITEM 7		
GND			A34		S4	GND	ITEM 7	NOTE 2, NOTE 3	
GND			B31		S1	GND	ITEM 7		
Tx6+			B32		S2	D6.RX0+	ITEM 7		
Tx6-			B33		S3	D6.RX0-	ITEM 7		
GND			B34		S4	GND	ITEM 7	NOTE 2, NOTE 3	
12V		P16	1	P6 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW	
GND			2		P12	GND	ITEM 9	BLACK	
GND			3		P5, P6	GND	ITEM 9	BLACK	
5V			4		P7, P8, P9	5V	ITEM 9	RED	
NC				P6 TARGET	P1	RSVD		NOTE 4	
NC					P2	sPCIeRsI		NOTE 4	

CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE	NOTES
GND		S0 HOST	A34	P7 TARGET	S7	GND	ITEM 7	NOTE 2	
Rx7+			A35		S6	D7.TX0+	ITEM 7		
Rx7-			A36		S5	D7.TX0-	ITEM 7		
GND			A37		S4	GND	ITEM 7	NOTE 3	
GND			B34		S1	GND	ITEM 7	NOTE 2	
Tx7+			B35		S2	D7.RX0+	ITEM 7		
Tx7-			B36		S3	D7.RX0-	ITEM 7		
GND			B37		S4	GND	ITEM 7	NOTE 3	
12V		P17	1	P7 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW	
GND			2		P12	GND	ITEM 9	BLACK	
GND			3		P5, P6	GND	ITEM 9	BLACK	
5V			4		P7, P8, P9	5V	ITEM 9	RED	
NC				P7 TARGET	P1	RSVD		NOTE 4	
NC					P2	sPCIeRsI		NOTE 4	

CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE	NOTES
SB7A		S0 HOST	A8	P8	8	BP.TYPEA	ITEM 8	NOTE 1, BLUE	
SB4A			A9	P8	4	SDOA	ITEM 8	NOTE 1, YELLOW	
GND/SB3A			A10	P8	6	GND	ITEM 8	NOTE 1, BROWN	
SB4+			A11			NC			
SB4-			A12			NC			
SB0A			B8	P8	7	SCLKA	ITEM 8	NOTE 1, ORANGE	
SB1A			B9	P8	5	SLDA	ITEM 8	NOTE 1, PINK	
GND/SB2A			B10	P8	3	GND	ITEM 8	NOTE 1, BLACK	
SB5A			B11	P8	2	SDIA	ITEM 8	NOTE 1, GREEN	
SB6A			B12	P8	1	CTLR.TYPEA	ITEM 8	NOTE 1, WHITE	
SB7B		S0 HOST	A26	P9	8	BP.TYPEB	ITEM 8	NOTE 1, BLUE	
SB4B			A27	P9	4	SDOB	ITEM 8	NOTE 1, YELLOW	
GND/SB3B			A28	P9	6	GND	ITEM 8	NOTE 1, BROWN	
SB8+			A29			NC			
SB8-			A30			NC			
SB0B			B26	P9	7	SCLKB	ITEM 8	NOTE 1, ORANGE	
SB1B			B27	P9	5	SLDB	ITEM 8	NOTE 1, PINK	
GND/SB2B			B28	P9	3	GND	ITEM 8	NOTE 1, BLACK	
SB5B			B29	P9	2	SDIB	ITEM 8	NOTE 1, GREEN	
SB6B			B30	P9	1	CTLR.TYPEB	ITEM 8	NOTE 1, WHITE	

## NOTES:

1. END TO END RESISTANCE OF INDICATED CONNECTION SHALL BE 750 MILLIOHM MAX.
2. SHARED PIN/PAD ON HOST (S0) CONNECTOR.
3. SHARED PIN/PAD ON INDICATED TARGET (P0-P7) CONNECTOR.
4. SHORT PIN/PAD P1 TO P2 OF INDICATED TARGET (P0-P7) CONNECTOR. NO CONNECT TO OTHER CONNECTORS.

CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE	NOTES
GND		S0 HOST	A16	P3 TARGET	S7	GND	ITEM 7	NOTE 2	
Rx3+			A17		S6	D3.TX0+	ITEM 7		
Rx3-			A18		S5	D3.TX0-	ITEM 7		
GND			A19		S4	GND	ITEM 7	NOTE 2, NOTE 3	
GND			B16		S1	GND	ITEM 7	NOTE 2	
Tx3+			B17		S2	D3.RX0+	ITEM 7		
Tx3-			B18		S3	D3.RX0-	ITEM 7		
GND			B19		S4	GND	ITEM 7	NOTE 2, NOTE 3	
12V		P13	1	P3 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW	
GND			2		P12	GND	ITEM 9	BLACK	
GND			3		P5, P6	GND	ITEM 9	BLACK	
5V			4		P7, P8, P9	5V	ITEM 9	RED	
NC				P3 TARGET	P1	RSVD		NOTE 4	
NC					P2	sPCIeRsI		NOTE 4	


CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE	NOTES
GND		S0 HOST	A19	P4 TARGET	S7	GND	ITEM 7	NOTE 2	
Rx4+			A20		S6	D4.TX0+	ITEM 7		
Rx4-			A21		S5	D4.TX0-	ITEM 7		
GND			A22		S4	GND	ITEM 7	NOTE 2, NOTE 3	
GND			B19		S1	GND	ITEM 7	NOTE 2	
Tx4+			B20		S2	D4.RX0+	ITEM 7		
Tx4-			B21		S3	D4.RX0-	ITEM 7		
GND			B22		S4	GND	ITEM 7	NOTE 2, NOTE 3	
12V		P14	1	P4 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW	
GND			2		P12	GND	ITEM 9	BLACK	
GND			3		P5, P6	GND	ITEM 9	BLACK	
5V			4		P7, P8, P9	5V	ITEM 9	RED	
NC				P4 TARGET	P1	RSVD		NOTE 4	
NC					P2	sPCIeRsI		NOTE 4	

CONNECTOR	SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	WIRE/CABLE	NOTES
GND		S0 HOST	A22	P5 TARGET	S7	GND	ITEM 7	NOTE 2	
Rx5+			A23		S6	D5.TX0+	ITEM 7		
Rx5-			A24		S5	D5.TX0-	ITEM 7		
GND			A25		S4	GND	ITEM 7	NOTE 3	
GND			B22		S1	GND	ITEM 7	NOTE 2	
Tx5+			B23		S2	D5.RX0+	ITEM 7		
Tx5-			B24		S3	D5.RX0-	ITEM 7		
GND			B25		S4	GND	ITEM 7	NOTE 3	
12V		P15	1	P5 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW	
GND			2		P12	GND	ITEM 9	BLACK	
GND			3		P5, P6	GND	ITEM 9	BLACK	
5V			4		P7, P8, P9	5V	ITEM 9	RED	
NC				P5 TARGET	P1	RSVD		NOTE 4	
NC					P2	sPCIeRsI		NOTE 4	



CONNECTOR	PIN/PAD	CONNECTOR	SIGNAL	NOTES
P0-P7 TARGET	S9		S1T+	NO CONNECT PIN/PAD SHALL NOT BE CONNECTED VIA CONNECTOR INTERNAL NOR VIA WIRE
	S10		S1T-	
	S12		S1R-	
	S13		S1R+	
	S17		S2T+	
	S18		S2T-	
	S20		S2R-	
	S21		S2R+	
	S23		S3T+	
	S24		S3T-	
	S26		S3R-	
	S27		S3R+	
	P3		PWRDIS	
	P4		IFDET#	
	P10		PRSENT#	
	P11		Activity/DisableStaggeredSpinup	
	E1		RefC1k+	
	E2		RefC1k1-	
	E3		3.3Vaux	
	E4		ePERSTI#	
	E5		ePERSTO#	
	E6		IFDET2#	
	E7		RefC1k0+	
	E8		RefC1k0-	
	E9		GND	
	E10		PETp0	
	E11		PETn0	
	E12		GND	
	E13		PERn0	
	E14		PERp0	
	E15		GND	
	E16		HPT1	
	E17		PETp3	
	E18		PETn3	
	E19		GND	
	E20		PERn3	
	E21		PERp3	
	E22		GND	
	E23		SMC1k	
	E24		SMDa1	
	E25		DualPort1En#	
P0-P7 TARGET	S8		GND	GROUND ALL PIN/PAD SHALL BE CONNECTED TO COMMON INDIVIDUAL CONNECTOR GROUND
	S11		GND	
	S14		GND	
	S15		GND (HPT0)	
	S16		GND	
	S19		GND	
	S22		GND	
	S25		GND	
	S28		GND	

The following figure shows the drawing and pinout for Broadcom cable 05-60007-00, a x8 SFF-8654 to x8 SFF-8654 connection.

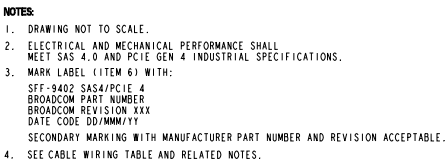REVISIONS				
REV	ECO	DESCRIPTION	DATE	APPROVED
001		PRELIMINARY RELEASE	01MAY18	
002	175141	ADD WIRE GAUGE AND IMPEDANCE TOLERANCE ITEM 2. REVISE MARKING REQUIREMENTS NOTE 3.	21NOV19	



6	LABEL	LABEL, 70X26MM, WHITE, R2, HF	A/R	SEE NOTE 3
5	TAPE	ACETATE TAPE: W=1 INCH	A/R	
4	SLEEVEING	EXPANDO TUBE: OD=10MM, GREEN, VW-1, HF	A/R	
3	WIRE	UL1061, STRANDED	A/R	SEE NOTE 4
2	CABLE	SAS CABLE: UL20744, 28-32AWG, 92.5C $\pm$ 10% DIFF, SAS4, PCIE GEN 4, VW-1, NATURAL, HF	A/R	
1	CONNECTOR	SFF-8654, 74P, STRAIGHT, X8, STANDARD, SAS 4.0, PCIE GEN 4	2	SEE NOTE 4
ITEM	CALLOUT	DESCRIPTION	QUANTITY	NOTES

<b>APPROVALS</b>		<b>DATE</b>		UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS.			
<b>DRAWN BY</b>		<b>15FEB18</b>		<b>TOLERANCES:</b> X, Y, Z: ± 0.2 MM X, Y, Z: ± 0.15 MM X, Y, Z: ± 0.050 MM ANGLES ± 1°		<b>TITLE</b>	
<b>APPROVED BY</b>		<b>01MAY18</b>				<b>CABLE, SFF-8654 TO SFF-8654,          X8, STRAIGHT, 1M</b>	
Company Confidential & Copyright Broadcom Limited All Rights Reserved and copy is an unauthorised copy. The purchaser is responsible for verifying that the document is authentic and correct. Moreover, the purchaser is responsible for removing obsolete documents from their plant and all other locations.				<b>SCALE</b> 2.000			
				<b>SIZE D</b>		<b>QWS NO:</b>	
				5067-6869		<b>REV</b>	
						002	
						<b>SHEET</b>	

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD		CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND	S0	A1		P0	B1	GND	ITEM 3	
R2+0		A2			B2	Tx+0	ITEM 3	
R2+0		A3			B3	Tx+0	ITEM 3	
GND		A4			B4	GND	ITEM 3	
R2+1		A5			B5	Tx+1	ITEM 3	
R2+1		A6			B6	Tx+1	ITEM 3	
GND		A7			B7	GND	ITEM 3	
SB7A		A8			B8	SB7A	ITEM 4	NOTE 1
SB4A		A9			B9	SB4A	ITEM 4	NOTE 1
GND/SB3A		A10			B10	GND/SB3A	ITEM 3	
SBA+		A11			B11	SBA+	ITEM 3	
SBA-		A12			B12	SBA-	ITEM 3	
GND		A13			B13	GND	ITEM 3	
R2+2		A14			B14	Tx2+	ITEM 3	
R2+2		A15			B15	Tx2+	ITEM 3	
GND		A16			B16	GND	ITEM 3	
R2+3		A17			B17	Tx+3	ITEM 3	
R2+3		A18			B18	Tx+3	ITEM 3	
GND		A19			B19	GND	ITEM 3	
R2+4		A20			B20	Tx+4	ITEM 3	
R2+4	S1	A21		P1	B21	Tx+4	ITEM 3	
GND		A22			B22	GND	ITEM 3	
R2+5		A23			B23	Tx+5	ITEM 3	
R2+5		A24			B24	Tx+5	ITEM 3	
GND		A25			B25	GND	ITEM 3	
SB7B		A26			B26	SB7B	ITEM 4	NOTE 1
SB4B		A27			B27	SB4B	ITEM 4	NOTE 1
GND/SB3B		A28			B28	GND/SB3B	ITEM 3	
SBB+		A29			B29	SBB+	ITEM 3	
SBB-		A30			B30	SBB-	ITEM 3	
GND	S2	A31		P2	B31	GND	ITEM 3	
R2+6		A32			B32	Tx+6	ITEM 3	
R2+6		A33			B33	Tx+6	ITEM 3	
GND		A34			B34	GND	ITEM 3	
R2+7		A35			B35	Tx+7	ITEM 3	
R2+7		A36			B36	Tx+7	ITEM 3	
GND		A37			B37	GND	ITEM 3	

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND	S0	B1	P0	A1	GND	ITEM 3	
Tx0+		B2		A2	Rx0+	ITEM 3	
Tx0-		B3		A3	Rx0-	ITEM 3	
GND		B4		A4	GND	ITEM 3	
Tx1+		B5		A5	Rx1+	ITEM 3	
Tx1-		B6		A6	Rx1-	ITEM 3	
GND		B7		A7	GND	ITEM 3	
SB0A		B8		A8	SB0A	ITEM 4	NOTE 1
SB1A		B9		A9	SB1A	ITEM 4	NOTE 1
GND/SB2A		B10		A10	GND/SB2A	ITEM 3	
SB5A		B11		A11	SB5A	ITEM 3	
SB6A		B12		A12	SB6A	ITEM 3	
GND		B13		A13	GND	ITEM 3	
Tx2+		B14		A14	Rx2+	ITEM 3	
Tx2-		B15		A15	Rx2-	ITEM 3	
GND		B16		A16	GND	ITEM 3	
Tx3+		B17		A17	Rx3+	ITEM 3	
Tx3-		B18		A18	Rx3-	ITEM 3	
GND		B19		A19	GND	ITEM 3	
Tx4+		B20		A20	Rx4+	ITEM 3	
Tx4-		B21		A21	Rx4-	ITEM 3	
GND		B22		A22	GND	ITEM 3	
Tx5+		B23		A23	Rx5+	ITEM 3	
Tx5-		B24		A24	Rx5-	ITEM 3	
GND		B25		A25	GND	ITEM 3	
SB0B		B26		A26	SB0B	ITEM 4	NOTE 1
SB1B		B27		A27	SB1B	ITEM 4	NOTE 1
GND/SB2B		B28		A28	GND/SB2B	ITEM 3	
SB5B		B29		A29	SB5B	ITEM 3	
SB6B		B30		A30	SB6B	ITEM 3	
GND		B31		A31	GND	ITEM 3	
Tx6+		B32		A32	Rx6+	ITEM 3	
Tx6-		B33		A33	Rx6-	ITEM 3	
GND		B34		A34	GND	ITEM 3	
Tx7+		B35		A35	Rx7+	ITEM 3	
Tx7-		B36		A36	Rx7-	ITEM 3	
GND		B37		A37	GND	ITEM 3	

NOTES:  
1. END TO END RESISTANCE OF INDICATED CONNECTION SHALL BE 750 MILLIOHM MAX.



The following figure shows the drawing and pinout for Broadcom cable 05-60009-00, a x4 SFF-8644 to x4 SFF-8644 connection.

REVIEWS				REVISIONS			
REV	ECO	DESCRIPTION	DATE	DATE	APPROVED	DATE	APPROVED
001		RECEIVED	03/01/13	03/01/13	B. LUNA		B. LUNA
002	13372	INITIAL RELEASE	03/01/13	03/01/13	B. LUNA		B. LUNA

1.	DRIVING NOT TO SCALE
2.	ELECTRICAL AND MECHANICAL PERFORMANCE SHALL MEET SAS 4.0 AND PCL GEN 4 INDUSTRIAL SPECIFICATIONS.
3.	MAIN LABEL VIEW 41 WITH: 240PDS SAS 4 LOGO AS SHOWN IN VIEW 4-1 mini SAS HD 14 PCL GEN 4 BROADCOM PART NUMBER BROADCOM REVISION 01A DATE CODE 03/09/11 SECONDARY MARKING WITH MANUFACTURER PART NUMBER AND REVISION ACCEPTABLE.
4.	SEE ADDITIONAL SHEETS FOR CABLE WIRING TABLE, EPROM DATA, AND RELATED NOTES.

ITEM	CALLOUT	DESCRIPTION	QUANTITY	NOTES
1	1	240PDS SAS 4 LOGO	1	SEE NOTE 1
2	2	mini SAS HD 14 PCL GEN 4	1	SEE NOTE 2
3	3	BROADCOM PART NUMBER	1	SEE NOTE 3
4	4	BROADCOM REVISION 01A	1	SEE NOTE 4
5	5	DATE CODE 03/09/11	1	SEE NOTE 5

APPROVALS	DATE	UNLESS OTHERWISE SPECIFIED, THIS DRAWING IS IN ACCORDANCE WITH THE FOLLOWING STANDARDS:
DESIGNED BY: S. MONTGOMERY	2/24/13	ASME Y14.5-2009
CHECKED BY: S. LUNA	03/01/13	ASME Y14.5-2009

ITEM	CALLOUT	DESCRIPTION <td>QUANTITY<td>NOTES</td></td>	QUANTITY <td>NOTES</td>	NOTES
1	1	240PDS SAS 4 LOGO	1	SEE NOTE 1
2	2	mini SAS HD 14 PCL GEN 4	1	SEE NOTE 2
3	3	BROADCOM PART NUMBER	1	SEE NOTE 3
4	4	BROADCOM REVISION 01A	1	SEE NOTE 4
5	5	DATE CODE 03/09/11	1	SEE NOTE 5

ITEM	CALLOUT	DESCRIPTION	QUANTITY	NOTES
1	1	240PDS SAS 4 LOGO	1	SEE NOTE 1
2	2	mini SAS HD 14 PCL GEN 4	1	SEE NOTE 2
3	3	BROADCOM PART NUMBER	1	SEE NOTE 3
4	4	BROADCOM REVISION 01A	1	SEE NOTE 4
5	5	DATE CODE 03/09/11	1	SEE NOTE 5

ITEM	CALLOUT	DESCRIPTION	QUANTITY	NOTES
1	1	240PDS SAS 4 LOGO	1	SEE NOTE 1
2	2	mini SAS HD 14 PCL GEN 4	1	SEE NOTE 2
3	3	BROADCOM PART NUMBER	1	SEE NOTE 3
4	4	BROADCOM REVISION 01A	1	SEE NOTE 4
5	5	DATE CODE 03/09/11	1	SEE NOTE 5

ITEM
------

CONNECTOR SIGNAL	SO	FIXPAD SHELL	FIXPAD SMALL	CONNECTOR P0	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND					SHIELD	WIRE	
TAP2		28	88		R42	WIRE	
TAP4		27	87		R42	WIRE	
GND		26	86		R42	WIRE	
TAP1		25	85		R41	WIRE	
FIX1		24	84		R41	WIRE	
GND		23	83		R41	WIRE	
WIRE	DEFCON	22	82		CALPSTRM (GND)	WIRE	GND P0 END
WIRE	DEFCON	21	81		NC	WIRE	NC R0TR ENDS
SCL	DEFCON	20	80	DEFCON	WIRE		
SDA	DEFCON	C7	A7		C1WR (NC)	WIRE	
GND		C6	A6		GND	WIRE	
TAP3		C4	A4		R23	WIRE	NC P0 END
TAP2		C3	A3		R23	WIRE	
GND		C2	A2		R23	WIRE	
TAP1		C1	A1		R23	WIRE	
FIX1		C0	A0		R23	WIRE	
GND		C9	A9		R24	WIRE	
GND		C8	A8		R24	WIRE	
GND		C7	A7		R24	WIRE	
R42		B8	28		T42	WIRE	
R41		B7	27		T42	WIRE	
R41		B6	26		T42	WIRE	
R41		B5	25		T41	WIRE	
FIX1		B4	24		T41	WIRE	
GND		B3	23		T41	WIRE	
CALPSTRM (GND)	DEFCON	B2	22	DEFCON	WIRE		GND S0 END
NC	DEFCON	B1	21	DEFCON	NC	WIRE	NC R0TR ENDS
CALPSTRM (GND)	DEFCON	A1	C1	DEFCON	WIRE		
C1WR (NC)	DEFCON	C2	C7	DEFCON	WIRE		
A2		A3	C3	DEFCON	GND	WIRE	NC S0 END
R43		A4	C4		T43	WIRE	
GND		A5	C5		T43	WIRE	
GND		A6	C6		T43	WIRE	
R43		A7	C7		T43	WIRE	
FIX1		A8	C8		T43	WIRE	
GND		A9	C9		T43	WIRE	
SMALL		SMALL	SMALL		SMALL	WIRE	

NOTES:

1. CABLE ASSEMBLY SHALL MEET SHIELDING EFFECTIVENESS REQUIREMENT OF

PIN/PAD	CONNECTOR SIGNAL
A1	CAD0R
C1	SCL
C2	SDA
D2	MCTRWD

EEPROM CONNECTION TABLE  
2 PLACES, 50 AND 90  
NO CROSS CONNECTIONS

# Revision History

---

## **Version 2.13, March 6, 2025**

- Updated the MegaRAID Tri-Mode Storage Adapter (without DDR) Features table in [Overview](#).
- Added the MegaRAID 9520-8i adapter.

## **Version 2.6, October 21, 2024**

- Restructured [Board Storage Conditions](#).
- Added [Board Operating Conditions](#).

## **Version 2.12, September 26, 2024**

- Added [Taiwan BSMI Compliance](#).

## **Version 2.11, August 27, 2024**

- Updated the marks and certifications in [Marks, Certifications, and Compliance](#).
- Added the 9524-8i adapter.

## **Version 2.10, December 20, 2023**

- Updated the following layout figures in [Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics](#): 9500-8i, 9560-16i, 9560-8i, 9540-8i, 9500-16i.
- Added [FCC Compliance](#).

## **Version 2.9, April 6, 2023**

Updated the adapter dimensions in [Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics](#).

## **Version 2.8, February 7, 2023**

- Added NVMe support to the MegaRAID 9540-8i adapter.

## **Version 2.7, November 22, 2022**

- Added [VCCI – Japan](#).

## **Version 2.6, August 29, 2022**

- Revised RAID levels in [RAID Features](#).
- Updated the 05-60006-00 description in [Storage Interface Cabling](#).

## **Version 2.5, January 13, 2022**

- Updated the values regarding the CacheVault power module in [MegaRAID Tri-Mode Storage Adapter Power Supply Requirements](#).
- Added [Adapter Security](#).
- Updated HBA model information in [Marks, Certifications, and Compliance](#).
- Added the MegaRAID 9562-16i and HBA 9502-16i OCP adapters.
- Added the MegaRAID 9540-8i adapter.

**Version 2.4, August 25, 2020**

- Updated the Sideband Signal Pinout table in [Sideband Signals](#).
- Updated [CacheVault Data Protection](#).

**Version 2.3, May 1, 2020**

- Updated [PCIe \(NVMe\) Support](#).

**Version 2.2, March 17, 2020**

- Added connector identifiers to the drawings in [Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics](#).
- Template update.

**Version 2.1, February 12, 2020**

- Changed the relative humidity range and temperature range for operating conditions in [Board Storage Conditions](#).
- Updated the cable drawing in [Cable 05-60002-00](#).
- Added [Cable 05-60006-00](#) and [Cable 05-60007-00](#).

**Version 2.0, December 17, 2019**

- Updated [Operating System Support](#).
- Removed Backplanes with Mini-SAS HD Connectors.
- Updated [Figure 5](#).
- Added [External Adapter Connector Pinout](#), [Virtual Pin Port Management](#), [Sideband Signals](#), and [Cable Drawings and Pinouts](#).
- Updated board dimensions in [HBA 9500-16e Adapter – Connector and LED Designations](#), and [HBA 9500-8e Adapter – Connector and LED Designations](#).
- Updated connector and LED locations in [MegaRAID 9580-8i8e Adapter – Connector and LED Designations](#).

**Preliminary, Version 1.0, September 27, 2018**

Initial document release.

