



Broadcom[®] 96xx PCIe 4.0, 24G SAS MegaRAID[™] and eHBA Tri-Mode Storage Adapters

**User Guide
Version 2.9**

Documentation Legal Notice

Copyright © 2020–2025 Broadcom. All Rights Reserved. The term “Broadcom” refers to Broadcom Inc. and/or its subsidiaries. For more information, go to www.broadcom.com. All trademarks, trade names, service marks, and logos referenced herein belong to their respective companies.

Broadcom reserves the right to make changes without further notice to any products or data herein to improve reliability, function, or design. Information furnished by Broadcom is believed to be accurate and reliable. However, Broadcom does not assume any liability arising out of the application or use of this information, nor the application or use of any product or circuit described herein, neither does it convey any license under its patent rights nor the rights of others.

Table of Contents

Overview.....	5
Features.....	7
RAID and eHBA Features.....	7
MegaRAID 9670W-16i, 9670-24i, and 9660-16i Adapter RAID Features.....	7
MegaRAID 9620-16i eHBA Features.....	7
eHBA 9600 Adapter Features.....	8
Operating System Support.....	8
PCIe Host Interface.....	9
LED Management.....	9
Tri-Mode Storage Interface Features.....	9
Tri-Mode Storage Interface.....	11
SAS/SATA Support.....	11
PCIe (NVMe) Support.....	12
Common REFCLK and PERST# Support.....	16
Backplane Management.....	17
Universal Backplane Management.....	17
Virtual Pin Port Management.....	17
Sideband Signals.....	17
Cables and Cabling Configurations.....	20
Internal Adapter Connector Pinout.....	20
Storage Interface Cabling.....	21
Backplane Connectors.....	22
External Adapter Connector Pinout.....	22
CacheVault Data Protection.....	24
Adapter Security.....	25
Hardware Secure Boot.....	25
Device Authentication.....	25
Device Certificate.....	26
Attestation Procedure.....	26
SPDM Capabilities.....	26
Adapter Installation Instructions.....	28
Adapter Installation.....	28
OCP Adapter Installation.....	30
Removing the OCP Adapter.....	31
Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics.....	32

MegaRAID 9670W-16i Adapter – Connector and LED Designations.....	32
MegaRAID 9670-24i Adapter – Connector and LED Designations.....	33
Auxiliary Power Connector.....	35
MegaRAID 9660-16i Adapter – Connector and LED Designations.....	36
eHBA 9620-16i Adapter – Connector and LED Designations.....	38
eHBA 9600-24i Adapter – Connector and LED Designations.....	40
eHBA 9600-16i Adapter – Connector and LED Designations.....	42
eHBA 9600-8i8e Adapter – Connector and LED Designations.....	43
eHBA 9600W-16e Adapter – Connector and LED Designations.....	45
eHBA 9600-16e Adapter – Connector and LED Designations.....	46
eHBA 9602W-16e Adapter – Connector and LED Designations.....	48
Tri-Mode Storage Adapter Technical Specifications.....	49
Board Storage Conditions.....	49
Board Weights.....	49
Board Operating Conditions.....	50
Power Supply Requirements.....	50
MegaRAID Tri-Mode Storage Adapter Power Supply Requirements.....	51
eHBA Tri-Mode Storage Adapter Power Supply Requirements.....	51
Overtemperature Behavior.....	51
Marks, Certifications, Compliance, and Safety Characteristics.....	52
Marks, Certifications, and Compliance.....	52
FCC Compliance.....	54
Safety Characteristics.....	54
VCCI – Japan.....	54
Taiwan BSMI Compliance.....	54
Appendix A: Cable Drawings and Pinouts.....	55
Cable 05-60001-00.....	55
Cable 05-60002-00.....	57
Cable 05-60003-00.....	58
Cable 05-60004-00.....	59
Cable 05-60005-00.....	60
Cable 05-60006-00.....	61
Cable 05-60007-00.....	63
Cable 05-60009-00.....	64
Appendix B: Revision History.....	65

Overview

The Broadcom® 96xx adapters, based on a 24G SAS tri-mode controller, are high-performance PCIe-to-SATA/SAS/PCIe (tri-mode) storage adapters. Broadcom tri-mode SerDes technology enables operation of SAS, SATA, or PCIe (NVMe) storage devices in a single drive bay. A single controller can operate in all three modes concurrently: SAS, SATA, and PCIe/NVMe. The adapters negotiate between the speeds and the protocols to recognize and concurrently interface with these three storage devices types.

The adapters provide the following storage interface data transfer rates:

- SAS data transfer rates of 22.5Gb/s, 12Gb/s, and 6Gb/s per phy
- SATA transfer rates at 6Gb/s per phy
- PCIe (NVMe) data transfer rates of 16 GT/s, 8 GT/s, 5 GT/s, and 2.5 GT/s per lane

The following tables summarize key adapter features.

Table 1: MegaRAID Tri-Mode Storage Adapter and eHBA 9620-16i Features

Adapter	9670W-16i	9670-24i	9660-16i	9620-16i
Ports	16 internal	24 internal	16 internal	16 internal
I/O Processor	SAS4116W	SAS4124	SAS4116	SAS4016
Host Interface	x16 PCIe 4.0	x8 PCIe 4.0	x8 PCIe 4.0	x8 PCIe 4.0
Storage Interface	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)
Form Factor	FH-MD2	FH-MD2	LP-MD2	LP-MD2
RAID Levels	0, 1, 5, and 6	0, 1, 5, and 6	0, 1, 5, and 6	0 and 1
Cache Memory	8 GB, dual channel, 3200 MT/s, DDR4 SDRAM	8 GB, dual channel, 3200 MT/s, DDR4 SDRAM	4 GB, single channel, 3200 MT/s, DDR4 SDRAM	—
Storage Interface Connectors	Two SFF-8654 x8	Three SFF-8654 x8	Two SFF-8654 x8	Two SFF-8654 x8
Cache Protection	Yes	Yes	Yes	—
Energy Backup	CVPM05 module	CVPM05 module	CVPM05 module	—

Table 2: eHBA Internal Tri-Mode Storage Adapter Features

Adapter	9600-24i	9600-16i	9600-8i8e
Ports	24 internal	16 internal	8 internal 8 external
I/O Processor	SAS4024	SAS4016	SAS4016
Host Interface	x8 PCIe 4.0	x8 PCIe 4.0	x8 PCIe 4.0
Form Factor	LP-MD2	LP-MD2	LP-MD2
Storage Interface	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)	SAS, SATA, and PCIe (NVMe)
Storage Interface Connectors	Three SFF-8654 x8	Two SFF-8654 x8	One SFF-8654 x8 Two SFF-8674 x4

Table 3: eHBA External Tri-Mode Storage Adapter Features

Adapter	9600W-16e	9600-16e	9602W-16e
Ports	16 external	16 external	16 external
I/O Processor	SAS4016W	SAS4016	SAS4016W
Host Interface	x16 PCIe 4.0	x8 PCIe 4.0	x16 PCIe 4.0
Form Factor	LP-MD2	LP-MD2	TSFF
Storage Interface	SAS, SATA, and PCIe	SAS, SATA, and PCIe	SAS, SATA, and PCIe
Storage Interface Connectors	Four SFF-8674 x4	Four SFF-8674 x4	Four SFF-8674 x4

Features

This chapter describes the features that the adapters support.

RAID and eHBA Features

The following sections list primary RAID and eHBA features that the adapters support. For a full description of the RAID features, refer to the *MegaRAID Tri-Mode Software User Guide*, which can be found in the [Support Documents and Downloads](#) section of the Broadcom website.

MegaRAID 9670W-16i, 9670-24i, and 9660-16i Adapter RAID Features

The MegaRAID adapters support the following RAID features.

- RAID levels 0, 1, 5, and 6
- RAID spans 10, 50, and 60
- SAS/SATA drives: 240
- NVMe SSDs: 32
- JBOD physical drive (PD) state for SDS environments
- Online capacity expansion (OCE)
- Auto resume after loss of system power during array rebuild or OCE
- Single controller multipathing
- Load balancing
- Fast initialization for quick array setup
- Consistency check for background data integrity
- SSD support with SSD Guard™ technology
- Patrol read for media scanning and repairing
- Support for 64 virtual drives
- Disk data format (DDF)-compliant Configuration on Disk (COD)
- Self-Monitoring, Analysis, and Reporting Technology (SMART) support
- Global and dedicated hot spare with revertible hot spare support:
 - Automatic rebuild
 - Enclosure affinity
 - Emergency SATA hot spare for SAS arrays
- Enclosure management support:
 - Universal Backplane Management (UBM)
 - SES (inband)
 - Serial general-purpose input/output (SGPIO) (sideband)
 - Virtual Pin Port (VPP)
- DataBolt bandwidth optimizer technology support for compatible expander-based enclosures
- Shield state drive diagnostic technology
- MegaRAID SafeStore™ software for SED key management

MegaRAID 9620-16i eHBA Features

The MegaRAID 9620-16i adapter supports the following features:

- RAID levels 0 and 1
- RAID span 10
- SAS/SATA drives: 32
- NVMe SSDs: 32
- JBOD PD state for SDS environments
- Single controller multipathing
- Load balancing
- Fast initialization for quick array setup
- Check consistency for background data integrity
- SSD support with SSD Guard technology
- Patrol read for media scanning and repairing
- Four virtual drive support
- DDF-compliant COD
- SMART support
- Global and dedicated hot spare with revertible hot spare support:
 - Automatic rebuild
 - Emergency SATA hot spare for SAS arrays
- Enclosure management support:
 - UBM
 - SES (inband)
 - SGPIO (sideband)
 - VPP
- DataBolt bandwidth optimizer technology support for compatible expander-based enclosures
- Shield state drive diagnostic technology
- MegaRAID SafeStore software for SED key management

eHBA 9600 Adapter Features

The eHBA 9600 adapters support the following eHBA features:

- SAS/SATA devices: 240
- NVMe SSDs: 32
- Shingled magnetic recording (SMR) drive support
- Multi-actuator drive support

Operating System Support

The tri-mode storage adapters support the operating systems in the following list.

For specific version information, refer to the *MegaRAID Tri-Mode Device Driver Installation User Guide*, which you can download from [Support Documents and Downloads](#).

- Microsoft Windows
- VMware® vSphere®/ESXi
- Red Hat Enterprise Linux
- SuSE Linux
- Ubuntu Linux
- Citrix XenServer
- CentOS Linux
- Debian Linux
- Oracle Enterprise Linux
- Fedora
- FreeBSD

Firmware and drivers are routinely updated. Visit the Broadcom [Support Documents and Downloads](#) page to download the latest firmware and driver for the adapter.

PCIe Host Interface

The adapter's PCIe 4.0 host interface provides maximum transmission and reception rates of up to 16 GT/s per lane. The tri-mode controller uses a packet-based communication protocol to communicate over the serial interconnect. The following list shows other PCIe host interface features:

- Eight-lane or sixteen-lane PCIe host interface
- PCIe hot plug
- Power management:
 - Supports the *PCI Bus Power Management Interface Specification Revision 1.2*
 - Supports Active State Power Management, including the L0 states, by placing links in a power-saving mode during times of no link activity
- Error handling
- High bandwidth per pin, with low overhead and low latency
- Lane reversal and polarity inversion
- Single-phy (one-lane) link transfer rate of 16 GT/s, 8 GT/s, 5 GT/s, and 2.5 GT/s in each direction
- Support for x16, x8, x4, x2, and x1 link widths

LED Management

Support for managing Broadcom adapter LEDs differs between internal and external connecting adapters.

The internal adapters offer LED management support for SAS/SATA backplanes and (PCIe) NVMe backplanes. External connect adapters offer enclosure LED management support for enclosure implementations through SES. See [Backplane Management](#) for more information.

Tri-Mode Storage Interface Features

The adapter's storage interface supports concurrent operation with SAS, SATA, and PCIe (NVMe) devices to provide a fully functional solution for any storage environment:

- PCIe (NVMe) interface features:

- Up to sixteen x1, eight x2, or four x4 NVMe direct-attach drive support
- Data transfer at 16 GT/s, 8 GT/s, 5 GT/s, and 2.5 GT/s
- Independent resets and configuration
- Common reference clock and separate reference clock independent SSC (SRIS) support
- Lane reversal and polarity inversion
- SAS features:
 - SAS data transfers at 22.5Gb/s, 12Gb/s, and 6Gb/s
 - DataBolt technology on all SAS phys to improve performance
 - Serial, point-to-point, enterprise-level storage interface
 - Wide ports that contain multiple phys
 - Narrow ports that contain a single phy
 - SAS phy power management
 - Data transfer by using SCSI information units
 - T10 data protection management
 - Support for persistent connection capability
 - Support for SPL-3 initiate close capability
 - Configurable Rx and Tx polarity inversion
 - Configurable phy-to-disk mapping
 - Configurable SSC
- SATA interface features:
 - SATA and STP data transfers at 6Gb/s
 - Addressing of multiple SATA targets through an expander

Tri-Mode Storage Interface

The adapter uses one or two CSW blocks for the storage interface.

The tri-mode interface groups phys into the CSW blocks that contain 16 phys each. Limitations exist on how the phys can be grouped to create wide ports for SAS/SATA, or multilane ports for PCIe.

The following table indicates how the connectors map to the phys within each CSW. Card layout figures in [Broadcom MegaRAID and eHBA Tri-Mode Storage Adapter Characteristics](#) show the connector designations for each adapter.

Table 4: Adapter Connector-to-CSW Port Associations

Adapter	Connector 0	Connector 1	Connector 2	Connector 3
9670W-16i	CSW1[0:7]	CSW1[8:15]	—	—
9670-24i	CSW1[0:7]	CSW1[8:15]	CSW0[8:15]	—
9660-16i	CSW0[0:7]	CSW1[0:7]	—	—
9620-16i	CSW1[8:15]	CSW0[8:15]	—	—
9600-24i	CSW1[8:15]	CSW0[8:15]	CSW1[0:7]	—
9600-16i	CSW1[8:15]	CSW0[8:15]	—	—
9600-8i8e	CSW1[0:7]	CSW0[12:15]	CSW0[8:11]	—
9600W-16e	CSW0[12:15]	CSW0[8:11]	CSW0[4:7]	CSW0[0:3]
9600-16e	CSW0[12:15]	CSW0[8:11]	CSW0[4:7]	CSW0[0:3]
9602W-16e	CSW1[12:15]	CSW1[8:11]	CSW1[4:7]	CSW1[0:3]

The internal adapters can direct attach to SAS, SATA, or NVMe drives. The internal and external adapters support drive attach through PCIe switches or expanders.

NOTE

Carefully assess any decision to mix SAS and SATA drives within the same virtual drive (VD). Although you can mix drives, the practice is discouraged.

MegaRAID does not permit mixing SAS and NVMe drives or SATA and NVMe drives within the same VD. To mix NVMe and SAS/SATA drives on a MegaRAID adapter, you must configure the drives in separate VDs.

The following sections describe the connector options for a single direct-attach type solution. Adhere to the same guidelines if you combine device types.

SAS/SATA Support

The storage interface is comprised of either 24 phys or 16 phys, depending on the adapter. Dedicated SAS phy management hardware manages the phys in groups of eight within each CSW: CSW0[0:7], CSW0[8:15], CSW1[0:7], and CSW1[8:15]. Depending on the adapter, one or more of these CSW groups are used for the SAS/SATA interfaces, and these SAS phy management hardware instances cannot communicate with each other.

When you configure a wide port, the connections must attach exclusively to phys that are all managed by the same CSW group. If the ports are not managed by the same CSW group, unexpected controller and host behavior occurs. You can create combinations of a x1 to x8 wide link within CSW0[0:7], CSW0[8:15], CSW1[0:7], or CSW1[8:15]. You cannot create

a wide link by spanning RX/TX pairs between CSW0 and CSW1 or between phys 8:15 and 0:7 within the same CSW group.

PCIe (NVMe) Support

The following table shows how many NVMe drives or Broadcom PEX88000-series switches can directly attach to each adapter.

The 9600W-16e adapter, 9600-16e adapter, 9602W-16e adapter, and 9600-8i8e adapter (external ports) do not support direct attach to NVMe drives. The expected topology for these adapters is a typical just a bunch of flash (JBOF) scenario that uses a switch to connect the NVMe drives.

NOTE

Connected NVMe drives must support end-to-end CRC (ECRC).

Table 5: NVMe Device or PCIe Switch Direct-Attach Options Supported for Each Adapter

Adapter	x4 NVMe Drives	x2 NVMe Drives	x1 NVMe Drives	x16 Switch	x8 Switches	x4 Switches
9670W-16i	4	8	16	1	2	4
9670-24i	6	12	24	1	3	6
9660-16i	4	8	16	0	2	4
9620-16i	4	8	16	0	2	2
9600-24i	6	12	24	0	3	6
9600-16i	4	8	16	0	2	4
9600-8i8e ^a	2	4	8	0	2	4
9600W-16e	0	0	0	1	2	4
9600-16e	0	0	0	1	2	4
9602W-16e	0	0	0	1	2	4

The adapter phys are grouped into two CSWs: CSW1[0:15] and CSW0[0:15]. Depending on the adapter, 8 or 16 of these phys are used consecutively for the PCIe host interface and the remaining tri-mode phys are available for connection to any supported SAS, SATA, or PCIe (NVMe) storage devices. The following tables indicate supported topologies. Typical backplane designs naturally align with these topology rules, but you must take care not to design anything atypical that might interfere with the adapter's operation.

Table 6: 9670W-16i Adapter PCIe Topology Configuration Combinations

Connector 0								Connector 1							
CSW1[0:7]								CSW1[8:15]							
0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
x16															
x8								x8							
x8								x4				x4			
x4				x4				x4				x4			

a. Only internal ports support direct-attach NVMe drives.

Connector 0								Connector 1							
CSW1[0:7]								CSW1[8:15]							
0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
x8								x2		x2		x2		x2	
x4				x4				x2		x2		x2		x2	
x2		x2		x2		x2		x2		x2		x2		x2	
x8								x1	x1	x1	x1	x1	x1	x1	x1
x4				x4				x1	x1	x1	x1	x1	x1	x1	x1
x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1
x4				x4				x8							
x2		x2		x2		x2		x8							
x1	x1	x1	x1	x1	x1	x1	x1	x8							
x2		x2		x2		x2		x4				x4			
x1	x1	x1	x1	x1	x1	x1	x1	x4				x4			

Table 7: 9660-16i Adapter PCIe Topology Configuration Combinations

Connector 0								Connector 1							
CSW0[0:7]								CSW1[0:7]							
0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7
x8								x8							
x8								x4				x4			
x4				x4				x4				x4			
x8								x2		x2		x2		x2	
x4				x4				x2		x2		x2		x2	
x2		x2		x2		x2		x2		x2		x2		x2	
x8								x1	x1	x1	x1	x1	x1	x1	x1
x4				x4				x1	x1	x1	x1	x1	x1	x1	x1
x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1
x4				x4				x8							
x2		x2		x2		x2		x8							
x1	x1	x1	x1	x1	x1	x1	x1	x8							
x2		x2		x2		x2		x4				x4			
x1	x1	x1	x1	x1	x1	x1	x1	x4				x4			

Table 8: 9670-24i Adapter PCIe Topology Configuration Combinations

Connector 0								Connector 1								Connector 2							
CSW1[0:7]								CSW1[8:15]								CSW0[8:15]							
0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	8	9	10	11	12	13	14	15
x16								x8															
x16								x4				x4											
x16								x2		x2		x2		x2									
x16								x1	x1	x1	x1	x1	x1	x1	x1								
Use any row from the previous 9660-16i Adapter PCIe Topology Configuration Combinations table.								x8															
Use any row from the previous 9660-16i Adapter PCIe Topology Configuration Combinations table.								x4				x4											
Use any row from the previous 9660-16i Adapter PCIe Topology Configuration Combinations table.								x2		x2		x2		x2									
Use any row from the previous 9660-16i Adapter PCIe Topology Configuration Combinations table.								x1	x1	x1	x1	x1	x1	x1	x1								

Table 9: 9600-16i Adapter and 9620-16i Adapter PCIe Topology Configuration Combinations

Connector 0								Connector 1							
CSW1[8:15]								CSW0[8:15]							
8	9	10	11	12	13	14	15	8	9	10	11	12	13	14	15
x8								x8							
x8								x4				x4			
x4				x4				x4				x4			
x8								x2		x2		x2		x2	
x4				x4				x2		x2		x2		x2	
x2		x2		x2		x2		x2		x2		x2		x2	
x8								x1	x1	x1	x1	x1	x1	x1	x1
x4				x4				x1	x1	x1	x1	x1	x1	x1	x1
x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1	x1
x4				x4				x8							
x2		x2		x2		x2		x8							
x1	x1	x1	x1	x1	x1	x1	x1	x8							
x2		x2		x2		x2		x4				x4			
x1	x1	x1	x1	x1	x1	x1	x1	x4				x4			

Table 10: 9600-24i Adapter PCIe Topology Configuration Combinations

Connector 0								Connector 1								Connector 2							
CSW1[8:15]								CSW0[8:15]								CSW1[0:7]							
8	9	10	11	12	13	14	15	8	9	10	11	12	13	14	15	0	1	2	3	4	5	6	7
x8								x8								x8							
x8								x4				x4				x4				x4			
x4				x4				x2		x2		x2		x2		x2		x2		x2		x2	
x8								x2		x2		x2		x2		x1	x1	x1	x1	x1	x1	x1	x1
x4				x4				x2		x2		x2		x2		Combine with any of the first four configurations in this column.							
x2		x2		x2		x2		x1	x1	x1	x1	x1	x1	x1	x1	Combine with any of the first four configurations in this column.							
x8								x1	x1	x1	x1	x1	x1	x1	x1	Combine with any of the first four configurations in this column.							
x4				x4				x1	x1	x1	x1	x1	x1	x1	x1	Combine with any of the first four configurations in this column.							
x1	x1	x1	x1	x1	x1	x1	x1	x8								Combine with any of the first four configurations in this column.							
x4				x4				x8								Combine with any of the first four configurations in this column.							
x2		x2		x2		x2		x8								Combine with any of the first four configurations in this column.							
x1	x1	x1	x1	x1	x1	x1	x1	x4				x4				Combine with any of the first four configurations in this column.							
x2		x2		x2		x2		x4				x4				Combine with any of the first four configurations in this column.							
x1	x1	x1	x1	x1	x1	x1	x1	x4				x4				Combine with any of the first four configurations in this column.							
x2		x2		x2		x2		x4				x4				Combine with any of the first four configurations in this column.							
x1	x1	x1	x1	x1	x1	x1	x1	x4				x4				Combine with any of the first four configurations in this column.							

Table 11: 9600W-16e Adapter and 9600-16e Adapter PCIe Topology Configuration Combinations

Connector 0				Connector 1				Connector 2				Connector 3			
CSW0[12:15]				CSW0[8:11]				CSW0[4:7]				CSW0[0:3]			
12	13	14	15	8	9	10	11	4	5	6	7	0	1	2	3
x16															
x8								x8							
x4				x4				x4				x4			

Table 12: 9602W-16e Adapter PCIe Topology Configuration Combinations

Connector 0				Connector 1				Connector 2				Connector 3			
CSW1[12:15]				CSW1[8:11]				CSW1[4:7]				CSW1[0:3]			
12	13	14	15	8	9	10	11	4	5	6	7	0	1	2	3
x16															
x8								x8							
x4				x4				x4				x4			

Table 13: 9600-8i8e Adapter PCIe Topology Configuration Combinations

Connector 0								Connector 1				Connector 2			
CSW1[0:7]								CSW0[12:15]				CSW0[8:11]			
0	1	2	3	4	5	6	7	12	13	14	15	8	9	10	11
x8								x8							
x4				x4				x4				x4			
x2		x2		x2		x2		—							
x1	x1	x1	x1	x1	x1	x1	x1	—							

Common REFCLK and PERST# Support

Each x8 connector is divided into two quadrants. Each quadrant includes one REFCLK and one PERST# signal.

When using x4 NVMe drives that require a common REFCLK, the REFCLK sourced by each quadrant directly clocks each attached x4 drive. When using x2 or x1 NVMe drives that require a common REFCLK, where more than one drive is sourced from a single quadrant, you must properly fan out the shared REFCLK on the backplane. To avoid fanning out the REFCLK on the backplane, use SRIS enabled x2 or x1 drives.

Similar to REFCLK, one PERST# is sourced per quad. To directly attach x2 or x1 NVMe drives, you must properly fan out PERST# on the backplane.

Backplane Management

Use the information in this chapter to set up the adapter's backplane management options.

The SFF-8448 standard defines how to detect whether the backplane supports an SGPIO or two-wire interface (I²C) for SAS/SATA usage. SFF-9402 is a superset of SFF-8448, adding the PCIe-defined sideband signal, which means that SAS/SATA users see no change in backplane management detection when using the adapters.

Universal Backplane Management

The adapters provide LED operation and other backplane management of NVMe only, SAS/SATA only, or mixed-protocol backplanes based on the SFF-TA-1005 specification.

SFF-TA-1005 is an industry-standard backplane management specification commonly known as UBM. As long as the backplane management controller is designed in accordance with the UBM specification, the adapter automatically detects the backplane type and functions appropriately.

The adapter supports the industry-standard *SFF-TA-1005 Specification for Universal Backplane Management (UBM)*. UBM provides the following key features:

- Reports the backplane capabilities, including the following:
 - NVMe drive widths
 - Common REFCLK or separate REFCLK support
 - Maximum speeds
 - Designed slot power
- Supports cable order independence, that is, the drive LED control and slot ID are not dependent on cable order.
- Enables drive hot-plug insertion through control of PERST# timing.

For existing SAS/SATA backplanes, if BP_TYPE = 0, the adapter uses SGPIO for legacy backplane management. Refer to the SFF-8485 specification for functionality details. Design new backplanes with the industry-standard SFF-TA-1005 (UBM) specification for backplane management.

Virtual Pin Port Management

Broadcom requires new designs to enable UBM for backplane management.

The adapter maintains support for Virtual Pin Port (VPP) backplane management for legacy implementations. The adapters provide LED operation for NVMe devices based on the VPP over I²C definition. Standard VPP implementation calls for one PCA9555 target per two devices. For each drive pair, the adapter expects to see one PCA9555 target responding to address 0x4C on each pair of NVMe drives.

Sideband Signals

The internal adapters have one or two x8 SFF-8654 connectors. Each x8 connector provides two sets of sidebands. This section describes the sideband signal usage. The following table defines the sideband signal's pins on the SFF-8654 connector. The last column in the table indicates the strength of the pull-up resistor or pull-down resistor values on the adapter. See [Table 15, Sideband Management Pin Settings](#), for the signal descriptions, and see [Table 16, Internal x8 SFF-8654 Connector Pinout](#), for a complete connector pinout.

Table 14: Sideband Signal Pinout

Connector A Side	Connector B Side	Sideband or Vendor Specific Pin Number	UBM Assignments	Direction	Resistor Value
A8	A26	7	BP_TYPE	Input	100-kΩ pull-down
A9	A27	4	2W_RESET#	Output	2.0-kΩ pull-up
A10	A28	3	GND	—	—
A11	A29	+	REFCLK+	Output	—
A12	A30	—	REFCLK-	Output	—
B8	B26	0	2W_CLK	Input/Output	2.0-kΩ pull-up
B9	B27	1	2W_DATA	Input/Output	2.0-kΩ pull-up
B10	B28	2	GND	—	—
B11	B29	5	PERST#	Input/Output	2.0-kΩ pull-up
B12	B30	6	C_TYPE, D_INPL#, CHANGE_DET#	Input/Output	10-kΩ pull-up

The following table describes the sideband signal pin settings.

Table 15: Sideband Management Pin Settings

Pin Name	Settings	Description
BP_TYPE	<ul style="list-style-type: none"> 0: SGPIO 1: Two-wire interface 	Indicates if the backplane uses SGPIO or two-wire interface for management. To maintain backwards compatibility with SPGIO-based backplanes, the adapter has a weak pull-down to default to SGPIO if the backplane does not explicitly drive the signal.
2W_RESET#	<ul style="list-style-type: none"> 0: Reset is asserted 1: Reset is not asserted 	Optional reset driven by the host if the UBM target reports that the target can be reset.
REFCLK+/-	—	PCIe REFCLK HCSL 100-MHz clock driven by the device side ports to PCIe devices that require REFCLK. If D_INPL# is 0 and BP_TYPE is 1, the adapter enables the REFCLK outputs for that quad of high-speed lanes. When BP_TYPE is 0 or the UBM Clock Routing bit on the backplane is 0, this output is turned off.
2W_CLK	—	The two-wire interface clock signal.
2W_DATA	—	The two-wire interface data signal.
PERST#	<ul style="list-style-type: none"> 0: Reset is asserted 1: Reset is not asserted 	The adapter drives the PCIe RESET# signal. This signal uses a clamp to ground so that the signal on the adapter powers up LOW until backplane detection warrants the release of this signal for open-drain use. This method ensures that PERST# does not deassert until the directly connected NVMe drive is successfully detected.

Pin Name	Settings	Description
C_TYPE, D_INPL#, CHANGE_DET#	—	<p>Open collector/drain input or output signal:</p> <ul style="list-style-type: none">• C_TYPE. If BP_TYPE is 0, the adapter drives this signal LOW. If BP_TYPE is 1, this signal adheres to the SFF-8448 requirement to drive this signal to 1 in response to floating the signal. Because this signal is an open drain signal, <i>driving</i> to 1 is when a pull-up resistor pulls this signal HIGH.• D_INPL#. When C_TYPE is HIGH, the backplane pulls this signal to ground to indicate an NVMe device is connected and a two-wire interface backplane management target might be on the sideband's two-wire interface.• CHANGE_DET#. If D_INPL# is 0 and a UBM FRU device is discovered on the two-wire interface, the UBM FRU data can inform the adapter that the device is CHANGE_DET# feature capable. The adapter can rely on this signal as the CHANGE_DET# signal as described in the UBM specification. In this mode, the UBM controller drives this signal LOW to assert CHANGE_DET#.

Cables and Cabling Configurations


Use the following sections to select or design internal or external connectors and cables.

Internal Adapter Connector Pinout

The internal adapter follows the SFF-9402 standard for connector signal assignments.

Each x8 connector includes eight PCIe transmit and receive lanes and two sets of sidebands, designated as A and B, in accordance with the SFF-9402 specification. The following figure shows the x8 SFF-8654 pin designations.

Figure 1: x8 SFF-8654 Pin Designations

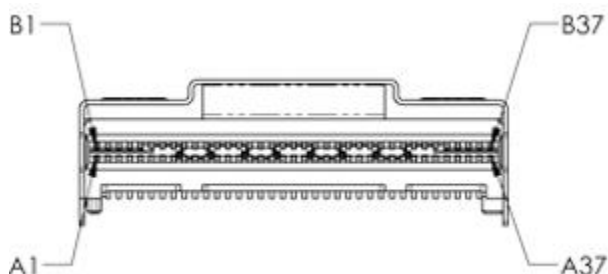

The following table defines the adapter's internal SFF-8654 connector pinouts.

Table 16: Internal x8 SFF-8654 Connector Pinout

Pin	Name	Pin	Name
A1	GND	B1	GND
A2	PERp0, RX0+	B2	PETp0, TX0+
A3	PERn0, RX0-	B3	PETn0, TX0-
A4	GND	B4	GND
A5	PERp1, RX1+	B5	PETp1, TX1+
A6	PERn1, RX1-	B6	PETn1, TX1-
A7	GND	B7	GND
A8	BP_TYPEA	B8	2W-CLKA, SClockA
A9	2W_RESETA, SDataOutA	B9	2W-DATAA, SloadA
A10	GND	B10	GND
A11	REFCLKA+	B11	PERSTA#, SDataInA
A12	REFCLKA-	B12	CPRSNTA#, CNTRLR_TYPEA
A13	GND	B13	GND
A14	PERp2, RX2+	B14	PETp2, TX2+
A15	PERn2, RX2-	B15	PETn2, TX2-
A16	GND	B16	GND
A17	PERp3, RX3+	B17	PETp3, TX3+

Pin	Name	Pin	Name
A18	PERn3, RX3-	B18	PETn3, TX3-
A19	GND	B19	GND
A20	PERp0, RX4+	B20	PETp0, TX4+
A21	PERn0, RX4-	B21	PETn0, TX4-
A22	GND	B22	GND
A23	PERp1, RX5+	B23	PETp1, TX5+
A24	PERn1, RX5-	B24	PETn1, TX5-
A25	GND	B25	GND
A26	BP_TYPEB	B26	2W-CLKB, SClockB
A27	2W_RESETB, SDataOutB	B27	2W-DATAB, SLoadB
A28	GND	B28	GND
A29	REFCLKB+	B29	PERSTB#, SDataInB
A30	REFCLKB-	B30	CPRSNTB#, CNTRLR_TYPEB
A31	GND	B31	GND
A32	PERp2, RX6+	B32	PETp2, TX6+
A33	PERn2, RX6-	B33	PETn2, TX6-
A34	GND	B34	GND
A35	PERp3, RX7+	B35	PETp3, TX7+
A36	PERn3, RX7-	B36	PETn3, TX7-
A37	GND	B37	GND

Storage Interface Cabling

Choose the proper cable for the given backplane type and connectors.

The correct choice is especially important for backplanes that use SFF-8643 for the NVMe connectors. Many of these backplanes use an older, legacy-recommended pinout for the NVMe connector instead of a connector pinout based on the SFF-9402 specification. Most backplanes that use either SFF-8612 or SFF-8654 connectors follow the SFF-9402 specification. The pinout recommended in the *PCI Express OCUlink Specification* is equivalent to that recommended for SFF-9402. Verify the connector pinout for the intended backplane to make sure the proper cable is used when connecting to NVMe drives.

Broadcom provides the following cables to use for the adapter. Use the listed manufacturer part number (MPN) to order a cable from Broadcom. If you source your own cables, use the Broadcom part number from the following table and the drawings and pinouts in [Cable Drawings and Pinouts](#).

Table 17: Internal Adapter Cables

MPN	Broadcom Cable Part No.	Cable Description	Backplane Connector
05-60001-00	5067-6865	x8 8654 to 2x4 8612, AltWiring 1M	Two x4 SFF-8612 (OCuLink)
05-60002-00	5067-6862	x8 8654 to 2x4 8643 (W), SMC 1M	Two x4 SFF-8643 (mini-SAS HD)
05-60003-00	5067-6866	x8 8654 to 2x4 8643, 9402 SAS 1M	Two x4 SFF-8643 (mini-SAS HD)

MPN	Broadcom Cable Part No.	Cable Description	Backplane Connector
05-60004-00	5067-6103	x8 8654 to 2x4 8654, 9402 1M	Two x4 SFF-8654 (SlimSAS)
05-60005-00	5067-6682	x8 8654 to 2xU.2 Direct, 1M	Two U.2 SFF-8639
05-60006-00	5067-7542	x8 8654 to 8xU.3 Direct, 1M	Eight U.3 SFF-8639
05-60007-00	5067-6869	x8 8654 to 1x8 8654, 9402 1M	One x8 SFF-8654 (SlimSAS)

Table 18: Adapter Broadcom Cable Use Cases

MPN	Type	Description
05-60001-00	SAS/SATA and NVMe	Use for backplanes with x4 SFF-8612 connectors with pinouts that follow the SFF-9402 specification.
05-60002-00	NVMe	Specialty cable that provides NVMe connections for SuperMicro Purley backplanes. This cable has white SFF-8643 connectors to indicate that it must connect to the white SFF-8643 connectors on the SuperMicro Purley backplanes.
05-60003-00	SAS/SATA	Use for traditional SAS/SATA connections. Usually backplanes designed to support SAS/SATA only or are double plumbed for U.2 and SAS/SATA drives use SFF-8643 connectors.
05-60004-00	SAS/SATA and NVMe	Use for backplanes with x4 SFF-8654 connectors with pinouts that follow the SFF-9402 specification.
05-60005-00	NVMe	Enables direct connect from the adapter to a U.2 NVMe drive. Use for proof-of-concept type applications.
05-60006-00	SAS/SATA and NVMe	Enables direct connect from the adapter to a U.3 NVMe or SAS/SATA drive. This cable does not send a PCIe REFCLK or PERST# to each drive connector; that is, the U.3 drive must support SRIS and not require PERST#. Use for proof-of-concept type applications.
05-60007-00	SAS/SATA and NVMe	Use for backplanes with x8 SFF-8654 connectors with pinouts that follow the SFF-9402 specification.

Backplane Connectors

The SFF-8612 or SFF-8654 connectors are the preferred connectors to use for the NVMe backplane or multiprotocol backplanes, based on the SFF-TA-1001 universal bay definition.

Backplanes that use OCUlink connectors should follow the *PCI Express OCUlink Specification*. This pinout is also equivalent to the SFF-9402 specification recommendations. Verify the backplane connector pinout to make sure you use proper cabling to the NVMe drive. Refer to the *PCI Express OCUlink Specification* and the SFF-9402 specification for backplane NVMe connector pinout information.

External Adapter Connector Pinout

External adapters support SAS and PCIe connections.

The PCIe cable specification swaps lanes 0 and 1 compared to the SAS specification. For PCIe connections, this swap means the external pinout must place lanes 0 and 1 on the same pins as the JBOF. This swap does not impact SAS connections because lane ordering does not impact SAS designs.

For external PCIe JBOF connections, as defined by the *PCI Express External Cabling Specification*, the adapter does not connect REFCLK and PERST#. The adapter only supports an SRIS-capable endpoint, that is, no REFCLK. The JBOF handles the drive (connected to the JBOF switch) start-of-day reset, hot insertion, and clocking requirements.

The adapter expects a local (single master) two-wire bus connection to the cable or active module's EEPROM. A cable requires a local EEPROM on each end to identify cable properties, such as length, loss budget, ganging, and so on. The adapter supports no direct communication to the enclosure over two-wire. SES performs enclosure management.

When using active cables with the 9600-16e adapter, eHBA 9600-8e adapter, eHBA 9600-8i8e adapter or eHBA 9602-16e adapter, you must implement an additional step if your active cable requires that the Vman port (management interface power) be toggled. The Broadcom adapter toggles the active cable's Vact port (active cable power), but not the Vman port after an online firmware update or for other conditions that result in a soft reset. If your active cable requires that the Vman port be toggled, the cable must be removed and reinserted, or power to the card slot must be cycled. If neither action is done, the PCIe/SAS link will not be restored. If the active cable requires that only the Vact port toggle, no power cycle or cable re-insertion is needed.

The following table shows the cable pinout for the cable that Broadcom provides for the external adapter. See [Cable 05-60009-00](#) for the cable drawing and pinout. Use the drawing if you source your own cable.

Table 19: External Adapter Cable Pinout

Pin	Signal	Pin	Signal
A1	No Connect	C1	CMICLK
A2	CINT#	C2	CMIDAT
A3	GND	C3	GND
A4	PERp0, RX0+	C4	PETp0, TX0+
A5	PERn0, RX0-	C5	PETn0, TX0-
A6	GND	C6	GND
A7	PERp3, RX3+	C7	PETp3, TX3+
A8	PERn3, RX3-	C8	PETn3, TX3-
A9	GND	C9	GND
B1	PWR	D1	PWR
B2	CBLPRSNT#	D2	MGTPWR
B3	GND	D3	GND
B4	PERp1, RX1+	D4	PETp1, TX1+
B5	PERn1, RX1-	D5	PETn1, TX1-
B6	GND	D6	GND
B7	PERp2, RX2+	D7	PETp2, TX2+
B8	PERn2, RX2-	D8	PETn2, TX2-
B9	GND	D9	GND

Broadcom provides the following cable to use for external adapters. Use the MPN listed to order the cable from Broadcom. If you source your own cables, use the Broadcom part number from the following table, and the drawing and pinout in [Cable 05-60009-00](#).

Table 20: External Adapter Cable

MPN	Broadcom Cable Part No.	Cable Description	Backplane Connector
05-60009-00	5067-9643	G4/S4 x4 8644 to x4 8644, 3M	Two x4 SFF-8674

CacheVault Data Protection

The MegaRAID Tri-Mode storage adapters support data retention by using NAND flash memory on the adapter, backed up by a CacheVault™ Power Module 05 (CVPM05).

The CVPM05 module is a super-capacitor pack that provides power for the backup of your data in case of host power loss or server failure. The CVPM05 module connects to the controller remotely by cable. The data is backed up to the NAND flash memory available on the MegaRAID storage adapter.

NOTE

If you do not use the remote mount board or clip included with the CacheVault kit, do not damage the CVPM05 module when mounting in the system. For more information about mounting the CVPM05 module, refer to *CVPM02, CVPM05 Power Modules | CVFM04 Cache Module MegaRAID CacheVault Protection Products User Guide*.

In the event of host power loss or server failure, any data available in the cache is offloaded to the onboard NAND memory. During this process, the CVPM05 power module powers the necessary components needed for offload.

NOTE

You cannot hot plug CVPM05 modules. Removing or inserting a CVPM05 module with the adapter powered on might damage the board and the super-capacitor functionality. To attach or remove a CVPM05 module from an adapter, you must fully power down the adapter before you attach the module to or remove the module from its mating connector.

For more information about installation of the CVPM05 module, visit [Support Documents and Downloads](#) to download the *CacheVault Power Module 05 Getting Started Guide*.

Adapter Security

The adapters provide two security features to protect your system from malicious activity:


- Hardware secure boot: Permits only authenticated firmware to execute on the adapter.
- Device authentication: Enables another entity in the server to authenticate the adapter.

The following sections provide details about each security feature.

Hardware Secure Boot

Hardware secure boot permits only authenticated firmware to execute on the adapter. The adapter boots from an internal boot ROM, which establishes the initial root of trust (RoT). Hardware secure boot authenticates and builds a chain of trust (CoT) with succeeding firmware images by using the RoT, meaning only authorized firmware executes on the adapter.

Figure 2: Authenticated Firmware Example

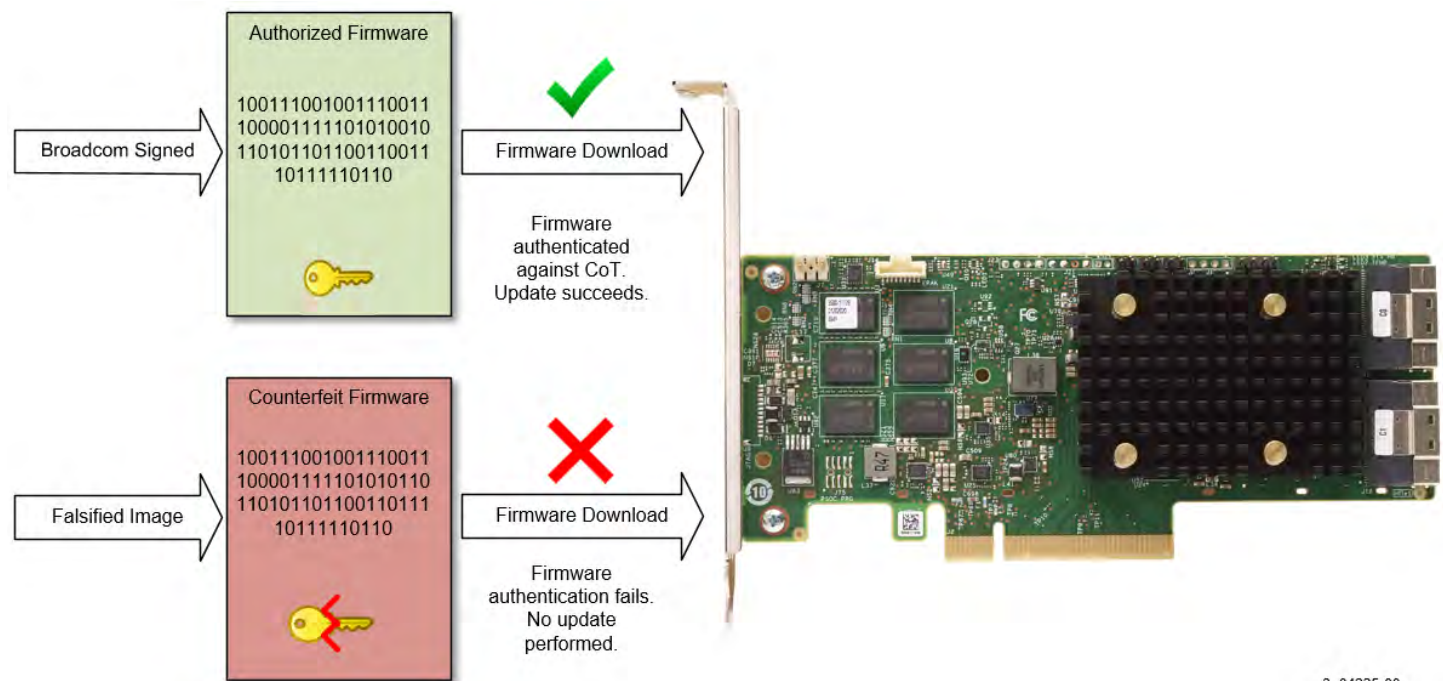

3_04225-00

Hardware secure boot requires that each image be signed with a valid digital signature; otherwise, the image is considered invalid and does not execute. The adapter ships with a valid, signed firmware image. All Broadcom-supplied firmware includes a valid digital signature; therefore, the hardware secure boot process is transparent unless the adapter encounters a counterfeit image. If the adapter downloads a counterfeit image, the image authentication fails and the download utility, such as StorCLI, displays the appropriate failure messages. Contact Broadcom Technical Support for assistance.

Device Authentication

Device authentication allows the adapter to prove its unique device identity to another entity in the server as part of a platform attestation implementation. The adapter proves its unique device identity with a device ID certificate and a challenge protocol.

The device authentication process includes a platform RoT device (a baseboard management controller [BMC] or a discreet component) and the adapter (the attested device). The platform RoT device requests the device certificate from the controller on the adapter for authentication. If the device authentication process fails, the platform RoT device operates in accordance with its platform security policy.

Device Certificate

The controller on the adapter uses a device certificate and associated certificate chain to present evidence of its device identity. The certificate chain is based on the X.509 v3 standards and the *Security Protocol and Data Model (SPDM) Specification*.

The device certificate contains identifying information about the controller, including the device serial number. The private key of a parent and intermediate signing certificate sign the device certificate. The device certificate cannot be modified after manufacture.


Broadcom manufacturing provisions each board with its device certificate. Every 96xx adapter manufactured is provisioned with a certificate chain. When the SPDM `GET_CERTIFICATE` command queries the controller, the controller returns the device certificate chain, which includes a hash of the root certificate.

Attestation Procedure

Attestation is the process in which the server's BMC, or other discrete logic, challenges the adapter for proof of authenticity.

Using attestation in the server is optional. The adapter functions without performing attestation. If attestation fails, the adapter continues to function normally. You must determine the next steps for your system if the adapter fails attestation.

Figure 3: Attestation Procedure Example

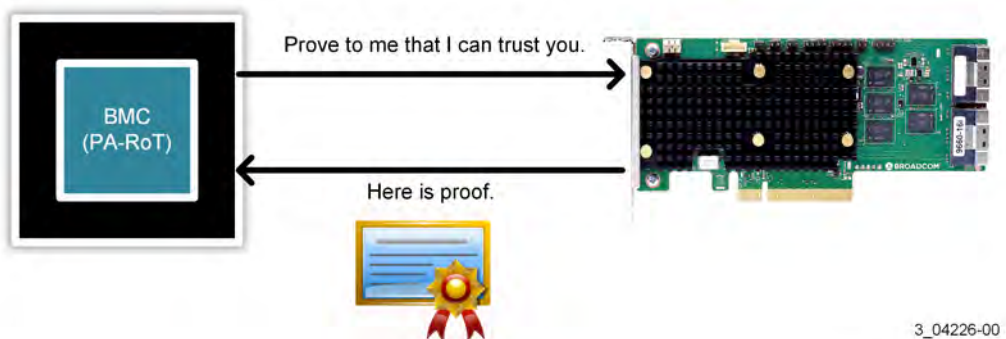

To support attestation, you must obtain the external root certificate authority to configure the platform RoT, such as BMC. You can download the external root certificate from [Support Documents and Downloads](#).

SPDM Capabilities

Security Protocol and Data Model (SPDM) Specification allows the Requester (BMC/discrete logic) and the Responder (adapter) to exchange keys to enable encryption support for the management interface information exchange. By default, if the Requester asks, the adapter enables authenticated encryption of the management interface. This process occurs dynamically between the Requester and Responder as part of the attestation procedure and requires no change to the adapter's settings.

The following table lists the SPDM endpoint CAPABILITIES response message flags. Flags listed as supported respond to the `GET_CAPABILITIES` request message.

Table 21: SPDM CAPABILITIES Response Message Support

Responder Flag Field	Value
CACHE_CAP	0
CERT_CAP	1
CHAL_CAP	1
MEAS_CAP	10
MEAS_FRESH_CAP	0
ENCRYPT_CAP	1
MAC_CAP	1
MUT_AUTH_CAP	1
KEY_EX_CAP	1
PSK_CAP	00
ENCAP_CAP	1
HBEAT_CAP	1
KEY_UPD_CAP	1
HANDSHAKE_IN_THE_CLEAR_CAP	0/1
PUB_KEY_ID_CAP	0
CHUNK_CAP	1
ALIAS_CERT_CAP	
SET_CERT_CAP	1
CSR_CAP	1
CERT_INSTALL_RESET_CAP	

The adapter supports SPDM mutual authentication. The HANDSHAKE_IN_THE_CLEAR_CAP capability bit is shown as 0/1 because the value is subject to negotiation. The firmware sets the HANDSHAKE_IN_THE_CLEAR_CAP bit to 0, but the firmware can set the bit to 1 if the Requester sets the bit to 1. While the adapter supports all capabilities listed in the previous table, the Requester might not support the same capabilities. The adapter correctly negotiates its capabilities with that of the Requester. Refer to the *StorCLI2 Utility User Guide* for additional security command information.

Adapter Installation Instructions

This chapter provides detailed instructions on how to install your adapter.

Make sure to use the proper installation steps for your adapter:

- **Adapter Installation:** MegaRAID 9670W-16i, MegaRAID 9670-24i, MegaRAID 9660-16i, eHBA 9620-16i, eHBA 9600-24i, eHBA 9600-16i, eHBA 9600-8i8e, eHBA 9600W-16e, or eHBA 9600-16e
- **OCP Adapter Installation:** eHBA 9602W-16e

Adapter Installation

Use the steps in this section to install the Broadcom adapter.

1. Unpack your adapter.

Unpack and remove the adapter. Inspect the adapter for damage. If it appears damaged, contact Broadcom Technical Support.

ATTENTION

To avoid the risk of data loss, back up your data before you change your system configuration.

2. Turn off the power to the system.

Turn off the power to the computer and disconnect the AC power cord. Remove the computer cover. Refer to the system documentation for instructions. Before you install the adapter, make sure that the computer is disconnected from the power and from any networks.



CAUTION

Disconnect the computer from the power supply and from any networks to which you will install the adapter, or you risk damaging the system or experiencing electrical shock.

3. Review the adapter connectors.

See [Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics](#) for descriptions of the adapters that show their connectors.

4. Check the mounting bracket on the adapter.

If required for your system, replace the full-profile mounting bracket that ships on the adapter with the low-profile bracket supplied. Complete the following steps to attach the low-profile bracket:

- a) Using a No. 1 Phillips screwdriver that is ESD safe, remove the two Phillips screws that connect the full-profile bracket to the board. Unscrew the two screws located at the top and bottom edges of the board. Avoid touching any board components with the screwdriver or the bracket.
- b) Remove the full-profile bracket. Do not damage the adapter.
- c) Place the adapter on top of the low-profile bracket. Position the bracket so that the screw holes in the tabs align with the openings in the board.
- d) Using a No. 1 Phillips torque screwdriver that is ESD safe, set to a maximum torque of 4.8 ± 0.5 inch-pounds and replace the two Phillips screws removed in Step a.

ATTENTION

Exceeding this torque specification can damage the board, connectors, or screws, and can void the warranty on the board.

ATTENTION

Damage caused to the board as a result of changing the bracket can void the warranty on the board. Adapters returned without a bracket mounted on the board will be sent back without return merchandise authorization (RMA) processing.


5. Insert the adapter into an available PCIe slot.

Select a PCIe slot, and align the adapter's PCIe bus connector to the slot, as shown in the following figure. Press down gently, but firmly, to make sure that the adapter is seated correctly in the slot. Secure the bracket to the computer chassis with the bracket screw.

NOTE

Adapters with a x8 host interface can operate in x8 or x16 slots. However, some x16 PCIe slots support only PCIe graphics cards; an adapter installed in one of these slots will not function. Refer to your motherboard guide for information about the PCIe slots.

Figure 4: Installing an Adapter in a PCIe Slot

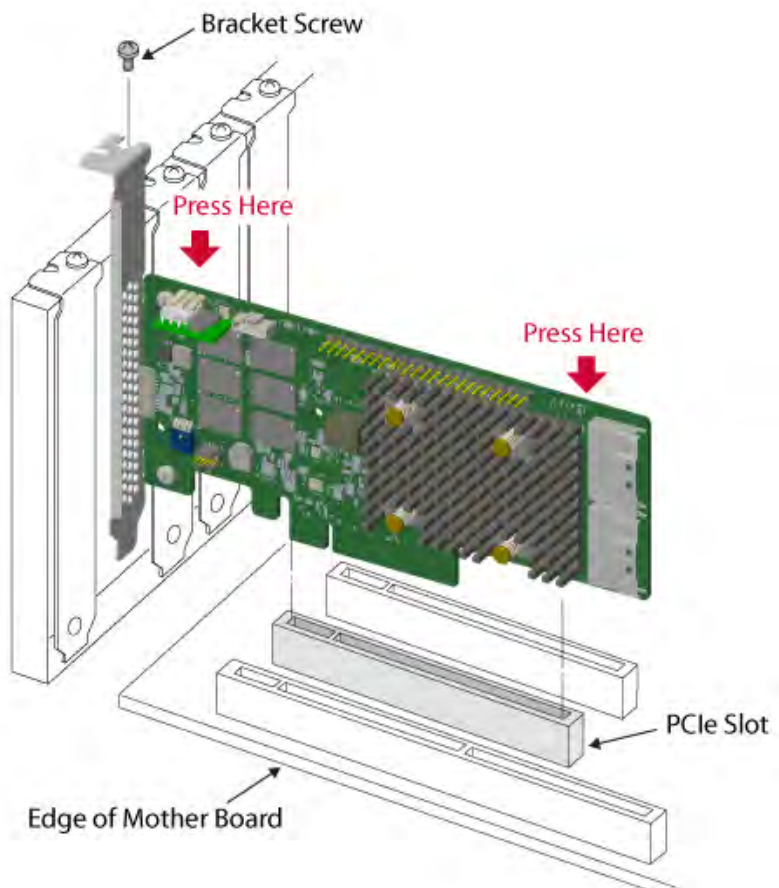**6. Configure and install the SAS, SATA, or PCIe (NVMe) devices in the host computer case.**

Refer to your device documentation for any preinstallation configuration requirements.

7. Connect the adapter to the devices.

Connect the appropriate cable that has the adapter connections on one end. Connect the appropriate connector on the other end to attach to the backplane connector.

The maximum cable length is 1 meter (39.37 in.). A single wide-port SAS or multilane PCIe (NVMe) device cannot connect to phys controlled by different CSWs. See [Tri-Mode Storage Interface](#) for more information.

8. Provide the required airflow for the installed adapter. See [Board Operating Conditions](#) to find the adapter's cooling requirements.

9. Turn on the power to the system.

Reinstall the computer cover, and reconnect the AC power cords. Make sure that the power is turned on to the storage devices before, or at the same time, that the power is turned on to the host computer. Turn on power to the host computer. If the computer is powered on before these devices, the devices might not be recognized.

During boot, a BIOS message appears. The firmware takes several seconds to initialize. The configuration utility prompt times out after several seconds. The second portion of the BIOS message shows the adapter controller number, firmware version, and cache SDRAM size. The numbering of the adapters follows the PCIe slot scanning order used by the host motherboard.

10. Choose the correct storage profile. Refer to the *MegaRAID Tri-Mode Software User Guide* and the *LSI® Storage Authority Software User Guide* for details about setting up your adapter.

11. Install the operating system driver. The adapters can operate under various operating systems. To operate under these operating systems, you must install the appropriate software drivers. The firmware and drivers are routinely updated and made available at [Support Documents and Downloads](#).

The hardware installation of your adapter is complete.

OCP Adapter Installation

Use the following steps to install any of the following adapters:

- eHBA 9602W-16e

1. Unpack your adapter.

Unpack and remove the adapter. Inspect the adapter for damage. If it appears damaged, contact Broadcom Technical Support.

ATTENTION

To avoid the risk of data loss, back up your data before you change your system configuration.

2. Turn off the power to the system.

Turn off the power to the computer and disconnect the AC power cord. Remove the computer cover. Refer to the system documentation for instructions. Before you install the adapter, make sure that the computer is disconnected from the power and from any networks.




CAUTION

Disconnect the computer from the power supply and from any networks to which you will install the adapter, or you risk damaging the system or experiencing electrical shock.

3. **Insert the adapter into an available OCP 3.0 TSFF slot.** Select an OCP slot and align the adapter with the system rails. Push the adapter into the slot, as shown in the following figure.

Figure 5: Installing an Adapter in an OCP Slot

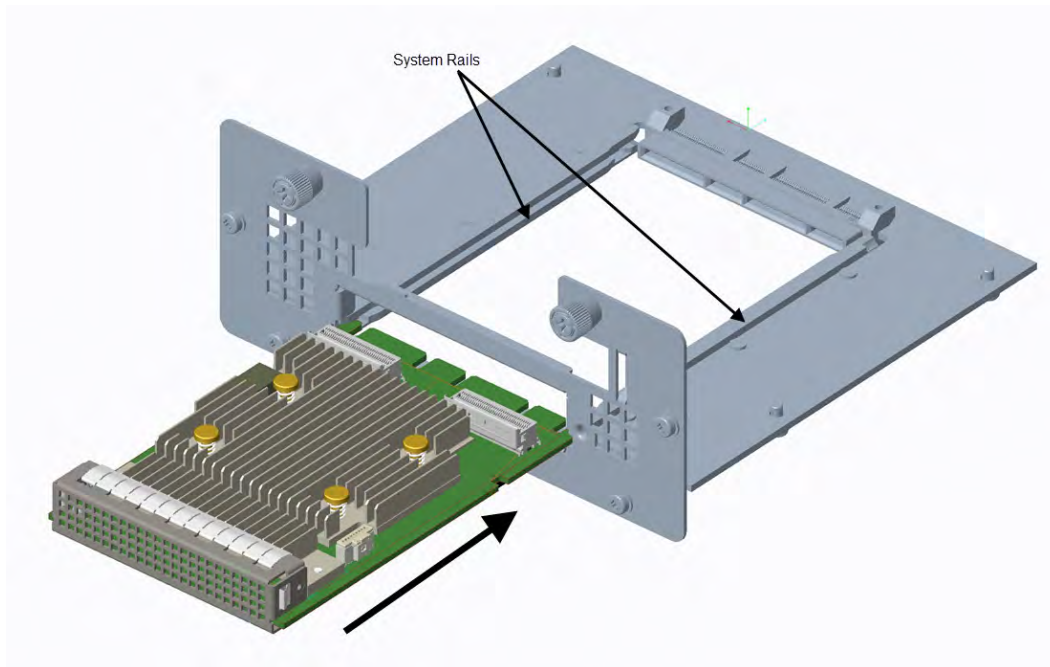

4. **Secure the adapter.**
5. **Attach the cables.** Attach the cables to the storage device ports.

Removing the OCP Adapter

Use the following steps to remove any of following adapters from an OCP slot:

- eHBA 9602W-16e

1. **Turn off the power to the system.**

Turn off the power to the computer and disconnect the AC power cord. Remove the computer cover. Refer to the system documentation for instructions. Before you install the adapter, make sure that the computer is disconnected from the power and from any networks.



CAUTION

Disconnect the computer from the power supply and from any networks to which you will install the adapter, or you risk damaging the system or experiencing electrical shock.

2. **Unplug the cables.** Remove the SlimSAS cables.
3. **Remove the adapter from the OCP slot.**
 - eHBA 9602W-16e. Open the ejector latch and use the latch to remove the adapter from the slot.

Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics

This chapter presents the physical characteristics of each board, including the board size and the connector locations.

MegaRAID 9670W-16i Adapter – Connector and LED Designations

The adapter is a 167.52 (±0.13) mm × 111.15 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. Pin 1 on the headers and connectors is highlighted in red in the figure.

Figure 6: Card Layout for the MegaRAID 9670W-16i Tri-Mode Storage Adapter

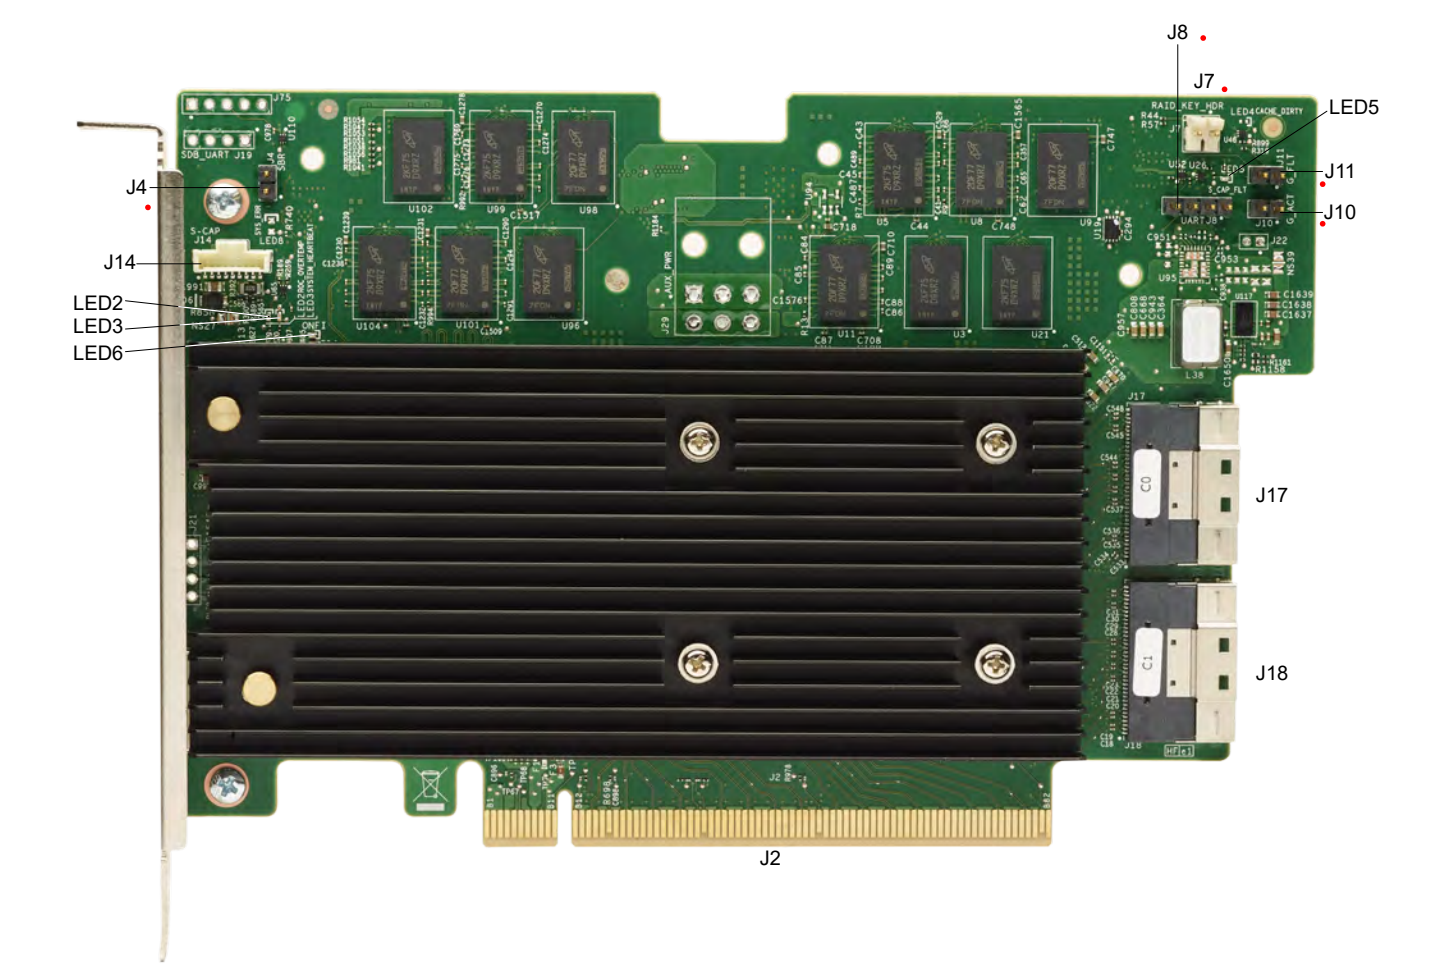


Table 22: Headers and Connectors

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I ² C interface connected to the I ² C bus for the Intelligent Platform Management Interface (IPMI).
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J7	Advanced software options hardware key header	2-pin connector. Enables support for selected advanced features.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J10	Global HDD activity LED header	2-pin connector. Connects to an LED that indicates activity on the drives connected to the adapter.
J11	Global drive fault LED header	2-pin connector. Connects to an LED that indicates whether a drive is in a fault condition.
J14	CacheVault power module interface	9-pin connector. Connects the adapter to a CacheVault power module.
J17, J18	Storage interface connectors	Two SFF-8654 8-port internal connectors. Connect the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.


Table 23: LED Designations

LED	Type	Description
LED2	Yellow controller overtemperature	Stays on solid to indicate that the SAS4116W RoC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED3	Green system heartbeat	Indicates that the SAS4116W RoC ASIC is operating normally. This LED blinks at 1 Hz.
LED5	Yellow supercap fault	Indicates that the CacheVault power module is in fault state or is overtemperature. When the energy pack is in the FAULT condition or is missing, this LED is on.
LED6	Green ONFI activity	Indicates when the ONFI is active for cache offload or recovery.

MegaRAID 9670-24i Adapter – Connector and LED Designations

The adapter is a 167.65 (±0.13) mm × 111.15 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. Pin 1 on the headers and connectors is highlighted in red in the figure.

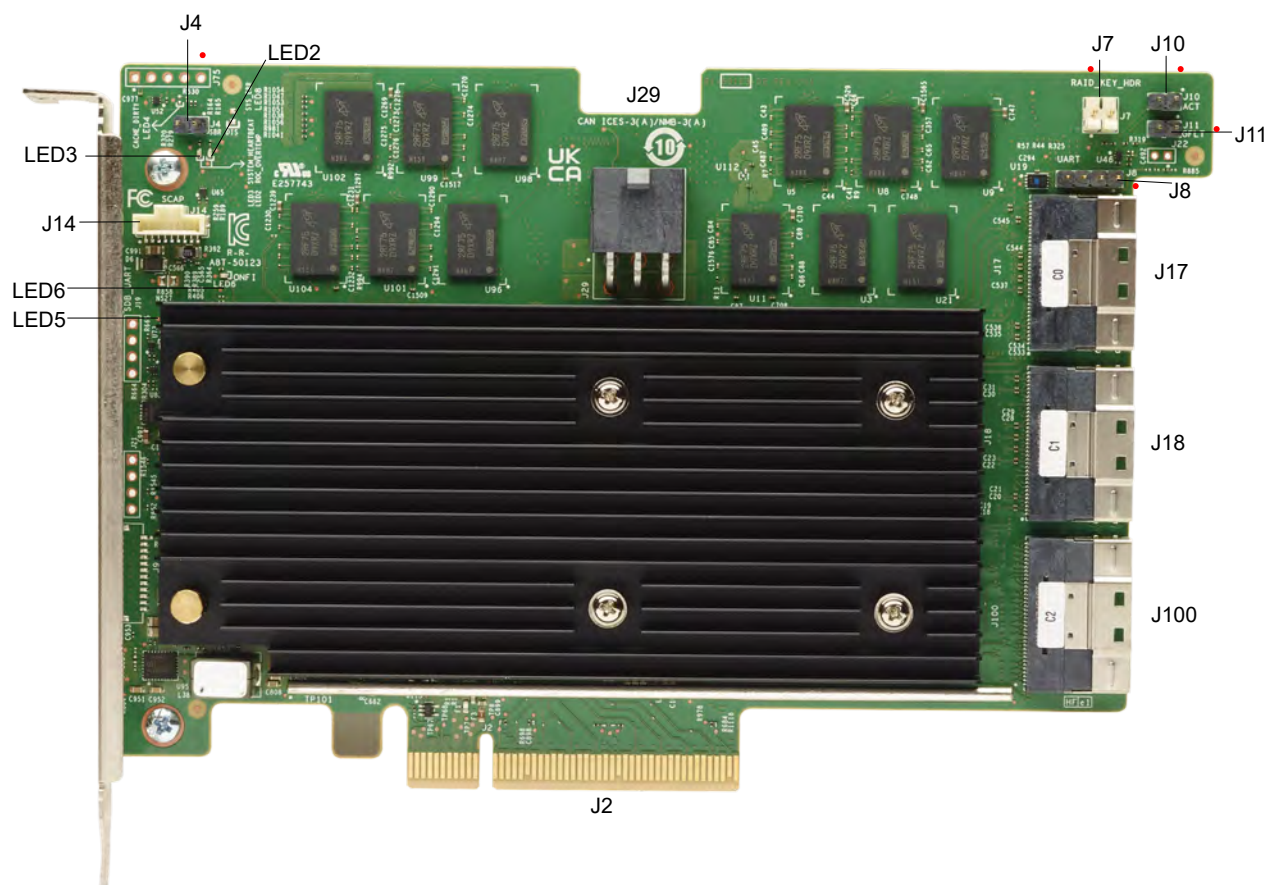Figure 7: Card Layout for the MegaRAID 9670-24i Tri-Mode Storage Adapter

The following table describes the headers and connectors on the adapter.

Table 24: Headers and Connectors

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I ² C interface connected to the I ² C bus for the Intelligent Platform Management Interface (IPMI).
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J7	Advanced software options hardware key header	2-pin connector. Enables support for selected advanced features.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J10	Global HDD activity LED header	2-pin connector. Connects to an LED that indicates activity on the drives connected to the adapter.
J11	Global drive fault LED header	2-pin connector. Connects to an LED that indicates whether a drive is in a fault condition.

Connector	Type	Description
J14	CacheVault power module interface	9-pin connector. Connects the adapter to a CacheVault power module.
J17, J18, J100	Storage interface connectors	Three SFF-8654 8-port internal connectors. Connect the adapter by cable to the storage devices.
J29	Auxiliary power connector	6-pin connector.

The following table describes the LEDs on the adapter.

Table 25: LED Designations

LED	Type	Description
LED 2	Yellow controller overtemperature	Stays on solid to indicate that the SAS4124 RoC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED 3	Green system heartbeat	Indicates that the SAS4124 RoC ASIC is operating normally. This LED blinks at 1 Hz.
LED 5	Yellow supercap fault	Indicates that the CacheVault power module is in fault state or is overtemperature. When the energy pack is in the FAULT condition, this LED is on.
LED 6	Green ONFI activity	Indicates when the ONFI is active for cache offload or recovery.

Auxiliary Power Connector

The MegaRAID 9670-24i adapter supports the *PCI Express Card Electromechanical Specification* defined 2×3 auxiliary power connector. Connect the auxiliary power connector if the slot cannot supply the required power as defined in [MegaRAID Tri-Mode Storage Adapter Power Supply Requirements](#). The power check algorithm detects if auxiliary power is connected to the adapter. If auxiliary power is connected, the power check is bypassed and the card is fully enabled. The auxiliary power connector's pin definition meets the PCIe CEM specification and the following table is included for reference. The following figure shows the connector's pin designations.

Figure 8: Auxiliary Power Connector

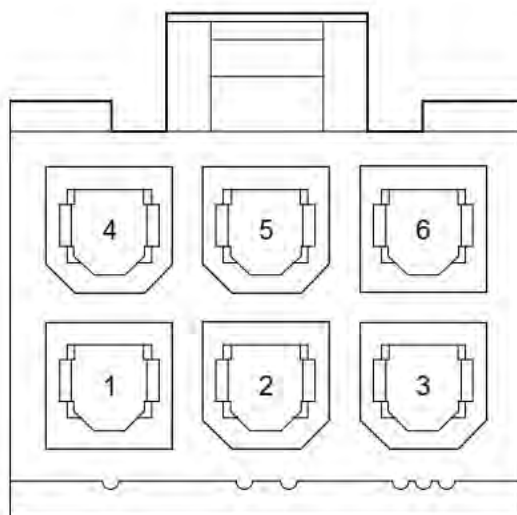



Table 26: Auxiliary Power Connector Pin Definition

Pin	Signal
1	+12V
2	+12V
3	+12V
4	Ground
5	Sense
6	Ground

MegaRAID 9660-16i Adapter – Connector and LED Designations

The adapter is a 155.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. Pin 1 on the headers and connectors is highlighted in red in the figure.

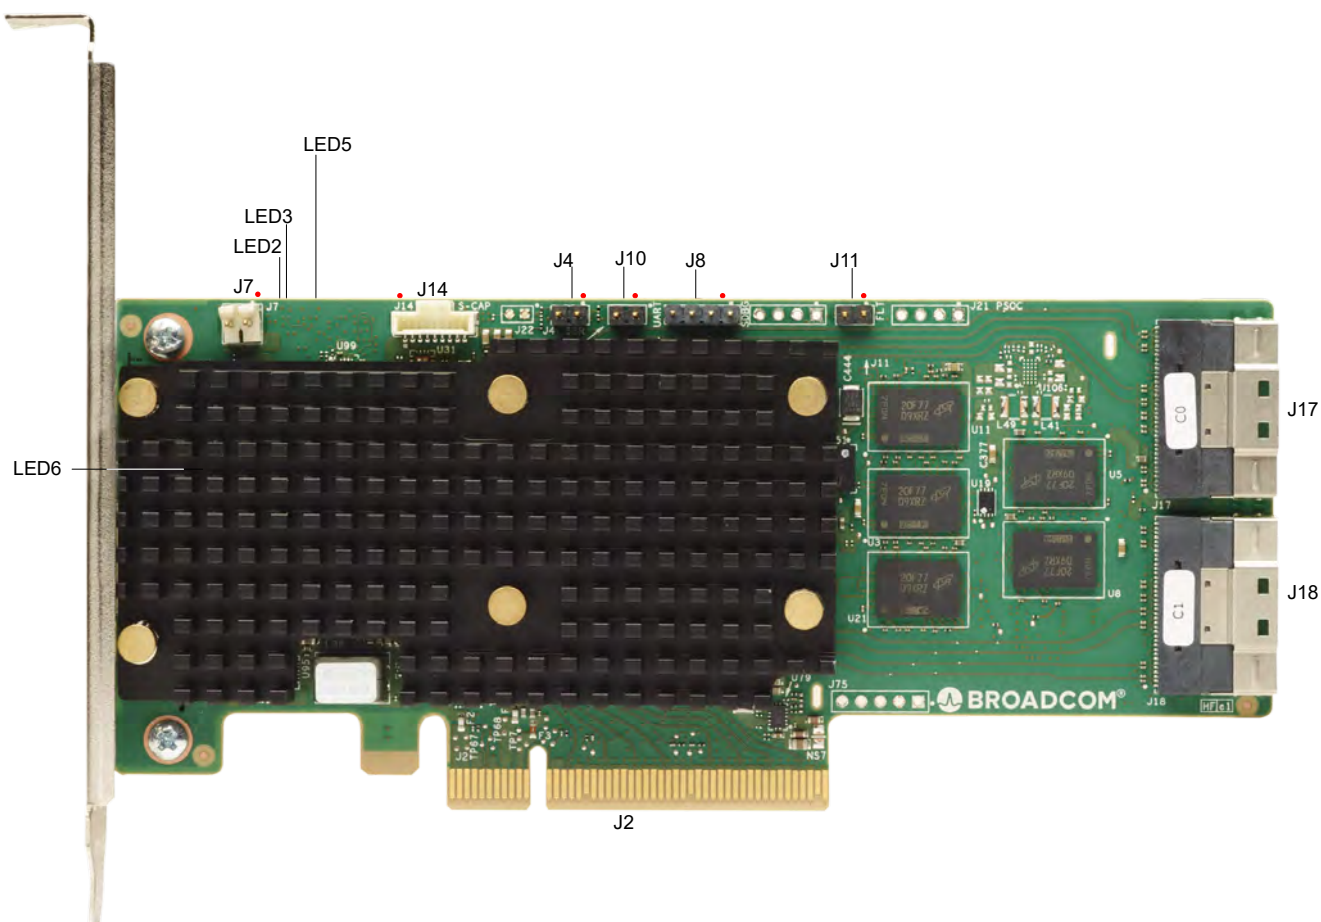Figure 9: Card Layout for the MegaRAID 9660-16i Tri-Mode Storage Adapter

The following table describes the headers and connectors on the adapter.

Table 27: Headers and Connectors

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I ² C interface connected to the I ² C bus for the Intelligent Platform Management Interface (IPMI).
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J7	Advanced software options hardware key header	2-pin connector. Enables support for selected advanced features.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J10	Global HDD activity LED header	2-pin connector. Connects to an LED that indicates activity on the drives connected to the adapter.

Connector	Type	Description
J11	Global drive fault LED header	2-pin connector. Connects to an LED that indicates whether a drive is in a fault condition.
J14	CacheVault power module interface	9-pin connector. Connects the adapter to a CacheVault power module.
J17, J18	Storage interface connectors	Two SFF-8654 8-port internal connectors. Connect the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter. These LEDs reside on the nonheat-sink side of the board.


Table 28: LED Designations

LED	Type	Description
LED2	Yellow controller overtemperature	Stays on solid to indicate that the SAS4116 device temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED3	Green system heartbeat	Indicates that the SAS4116 RoC ASIC is operating normally. This LED blinks at 1 Hz.
LED5	Yellow supercap fault	Indicates that the CacheVault power module is in fault state or is overtemperature. When the energy pack is in the FAULT condition or is missing, this LED is on.
LED6	Green ONFI activity	Indicates when the ONFI is active for cache offload or recovery.

eHBA 9620-16i Adapter – Connector and LED Designations

The adapter is a 155.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. Pin 1 on the headers and connectors is highlighted in red in the figure.

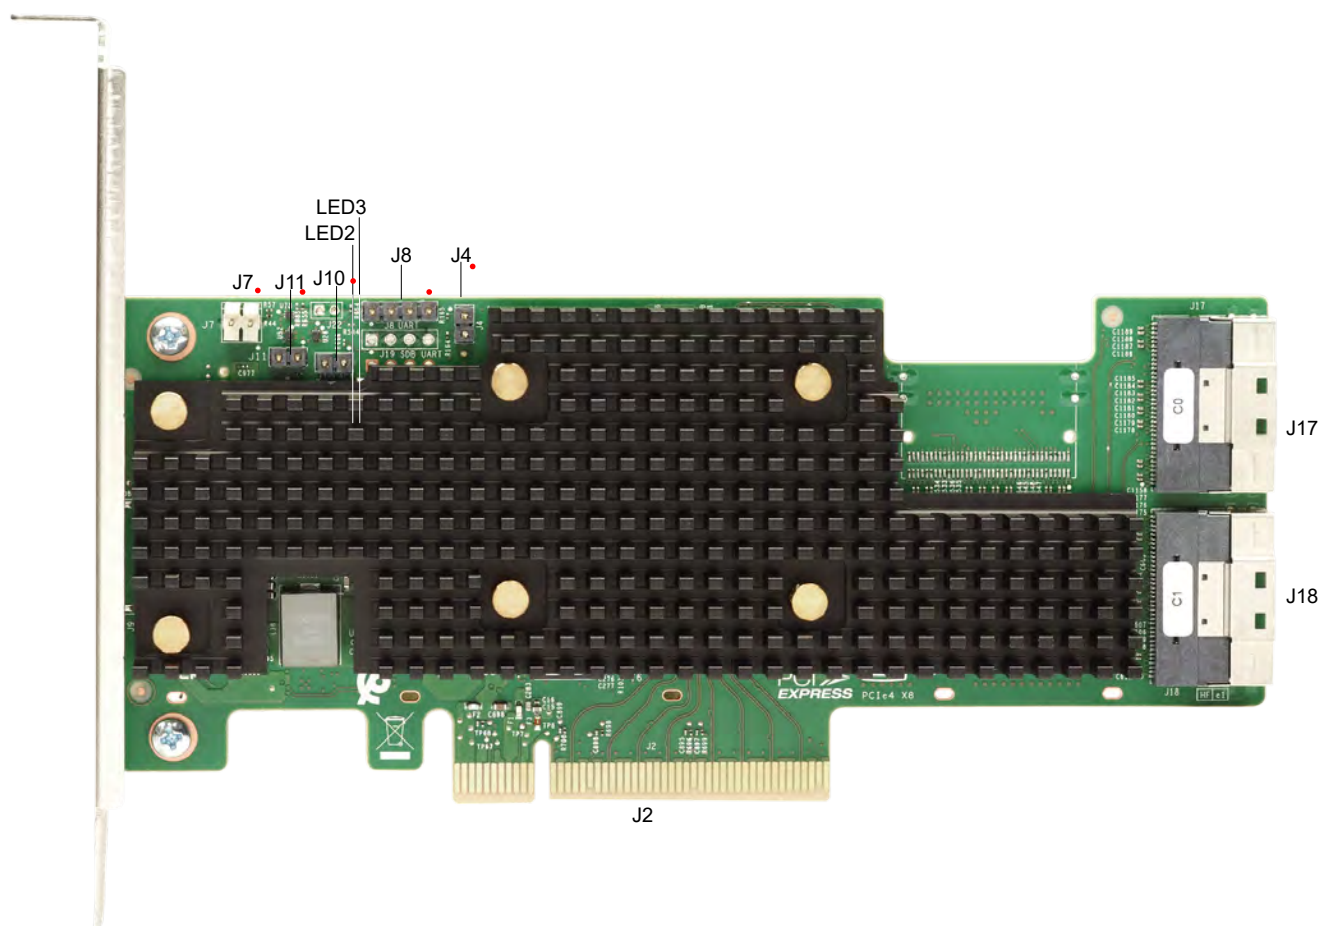Figure 10: Card Layout for the eHBA 9620-16i Storage Adapter

The following table describes the headers and connectors on the adapter.

Table 29: Headers and Connectors

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I ² C interface connected to the I ² C bus for the Intelligent Platform Management Interface (IPMI).
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J10	Global HDD activity LED header	2-pin connector. Connects to an LED that indicates activity on the drives connected to the adapter.
J11	Global drive fault LED header	2-pin connector. Connects to an LED that indicates whether a drive is in a fault condition.

Connector	Type	Description
J17, J18	Storage interface connectors	Two SFF-8654 8-port internal connectors. Connect the adapter by cable to the storage devices.

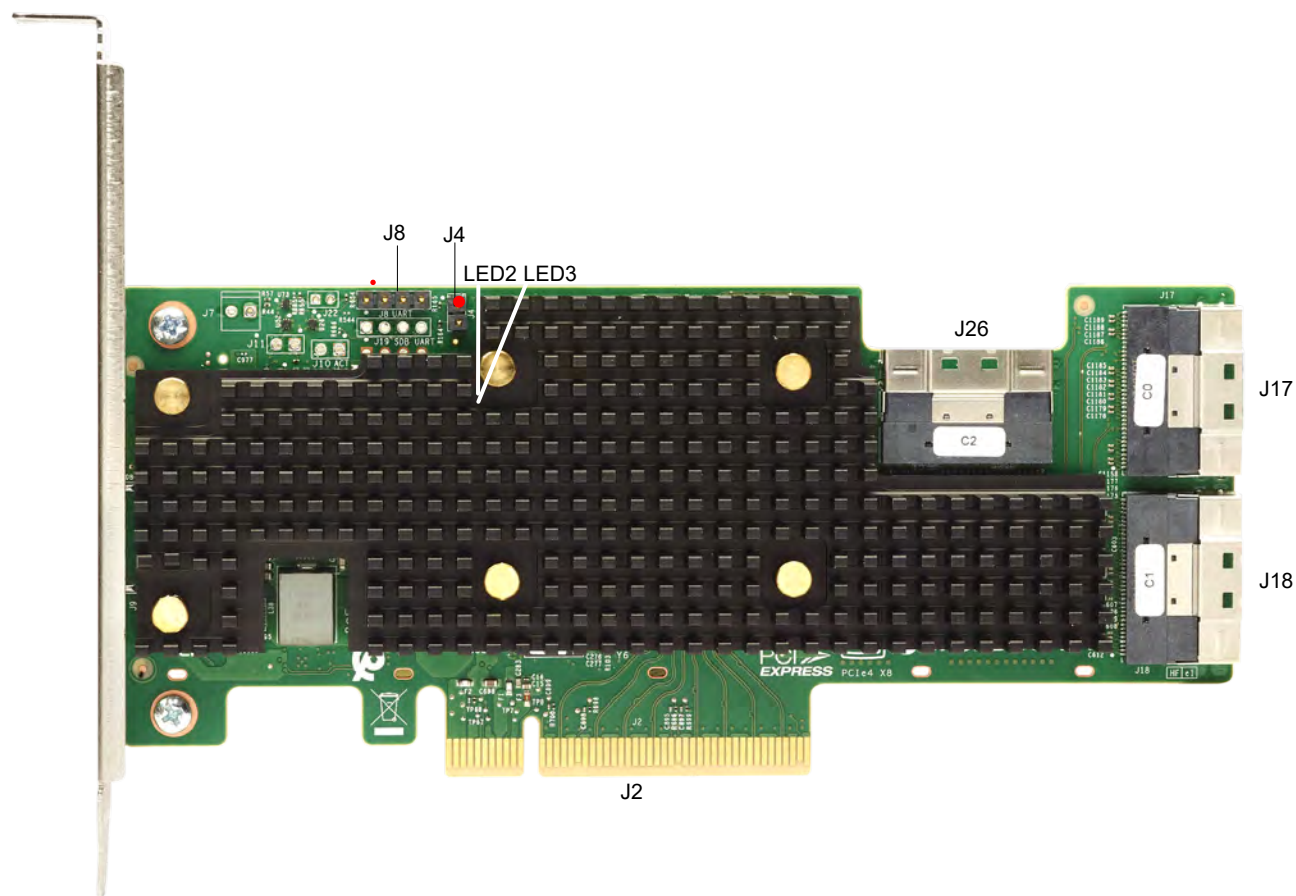
The following table describes the LEDs on the adapter.

Table 30: LED Designations

LED	Type	Description
LED2	Yellow controller overtemperature	Stays on solid to indicate that the SAS4116 device temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED3	Green system heartbeat	Indicates that the SAS4116 RoC ASIC is operating normally. This LED blinks at 1 Hz.

eHBA 9600-24i Adapter – Connector and LED Designations

The adapter is a 155.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

Figure 11: Card Layout of the eHBA 9600-24i Tri-Mode Storage Adapter

The following table describes the connectors on the adapter.

Table 31: Headers and Connectors

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I ² C interface connected to the I ² C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J17, J18, J26	Storage interface connectors	Three SFF-8654 8-port internal connectors. Connect the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.


Table 32: LED Designations

LED	Type	Description
LED2	Yellow IOC overtemperature	Stays on solid to indicate that the SAS4024 IOC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off. This LED resides on the nonheat-sink side of the board.
LED3	Green system heartbeat	Indicates that the SAS4024 IOC is operating normally. This LED resides on the nonheat-sink side of the board.

eHBA 9600-16i Adapter – Connector and LED Designations

The adapter is a 155.52 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

Figure 12: Card Layout of the eHBA 9600-16i Tri-Mode Storage Adapter

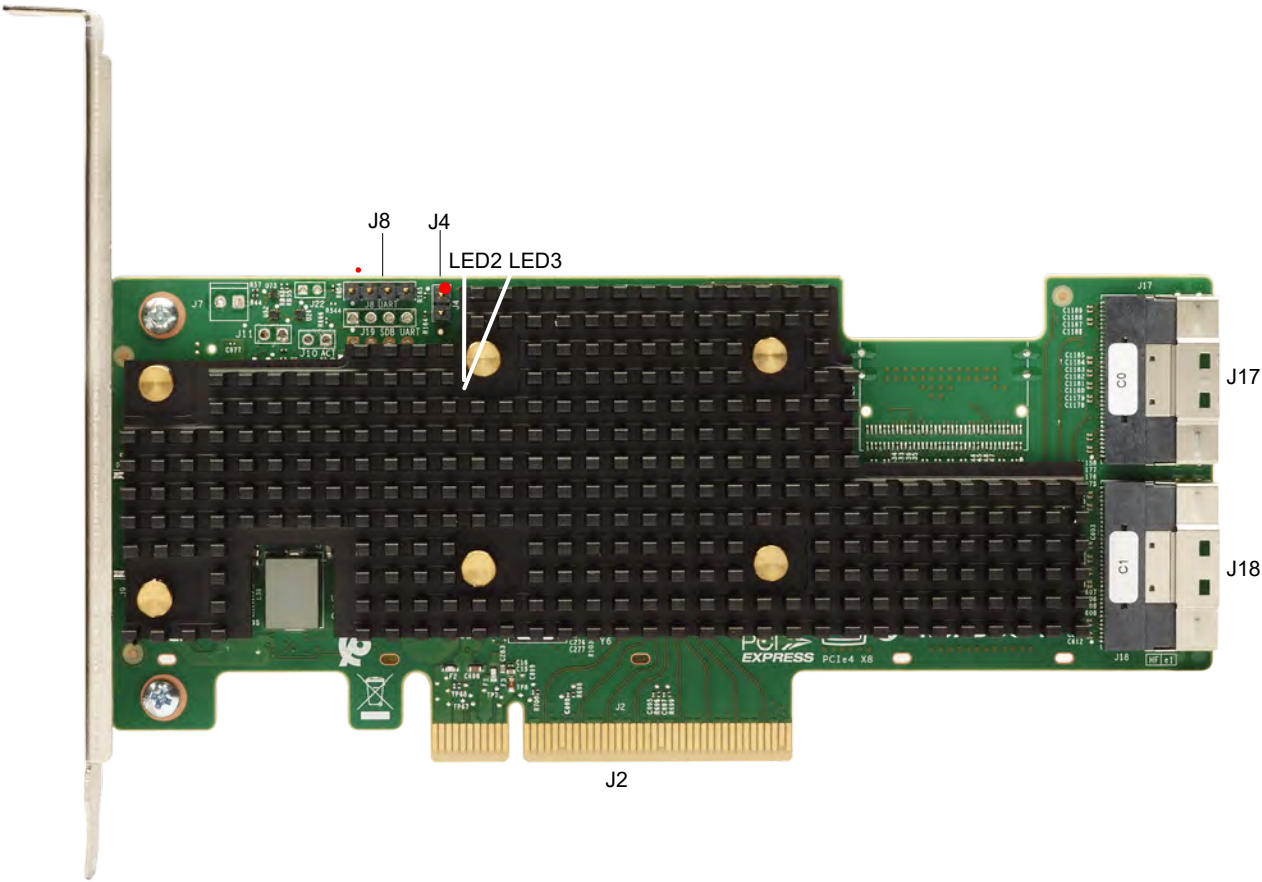

The following table describes the connectors on the adapter.

Table 33: Headers and Connectors

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I ² C interface connected to the I ² C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J17, J18	Storage interface connectors	Two SFF-8654 8-port internal connectors. Connect the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.


Table 34: LED Designations

LED	Type	Description
LED2	Yellow IOC overtemperature	Stays on solid to indicate that the SAS4016 IOC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off. This LED resides on the nonheat-sink side of the board.
LED3	Green system heartbeat	Indicates that the SAS4016 IOC is operating normally. This LED resides on the nonheat-sink side of the board.

eHBA 9600-8i8e Adapter – Connector and LED Designations

The adapter is a 167.51 (±0.13) mm × 68.78 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

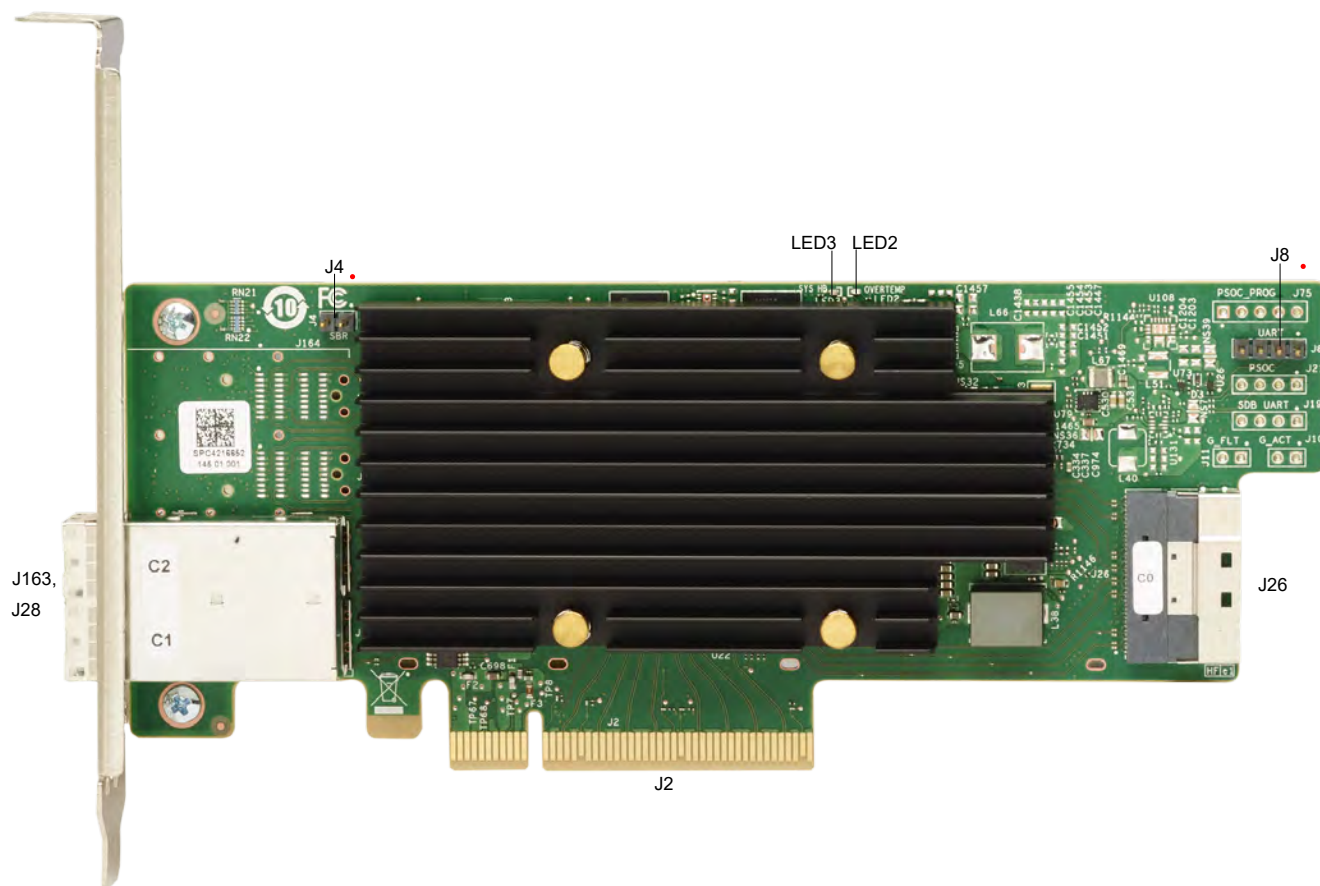Figure 13: Card Layout of the eHBA 9600-8i8e Tri-Mode Storage Adapter

The following table describes the connectors on the adapter.

Table 35: Headers and Connectors

Connector	Type	Description
J2	Standard edge card connector	The interface between the storage adapter and the host system. With the PCIe interface, this connector provides power to the board and an I ² C interface connected to the I ² C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J26	Storage interface connector	One SFF-8654 8-port internal connector. Connect the adapter by cable to the storage devices.
J163, J28	Storage interface connectors	Two SFF-8674 4-port external connectors.

The following table describes the LEDs on the adapter.


Table 36: LED Designations

LED	Type	Description
LED2	Yellow IOC overtemperature	Stays on solid to indicate that the SAS4016 IOC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off. This LED resides on the nonheat-sink side of the board.
LED3	Green system heartbeat	Indicates that the SAS4016 IOC is operating normally. This LED resides on the nonheat-sink side of the board.

eHBA 9600W-16e Adapter – Connector and LED Designations

The adapter is a 167.51 (±0.13) mm × 68.78 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

Figure 14: Card Layout of the eHBA 9600W-16e Storage Adapter

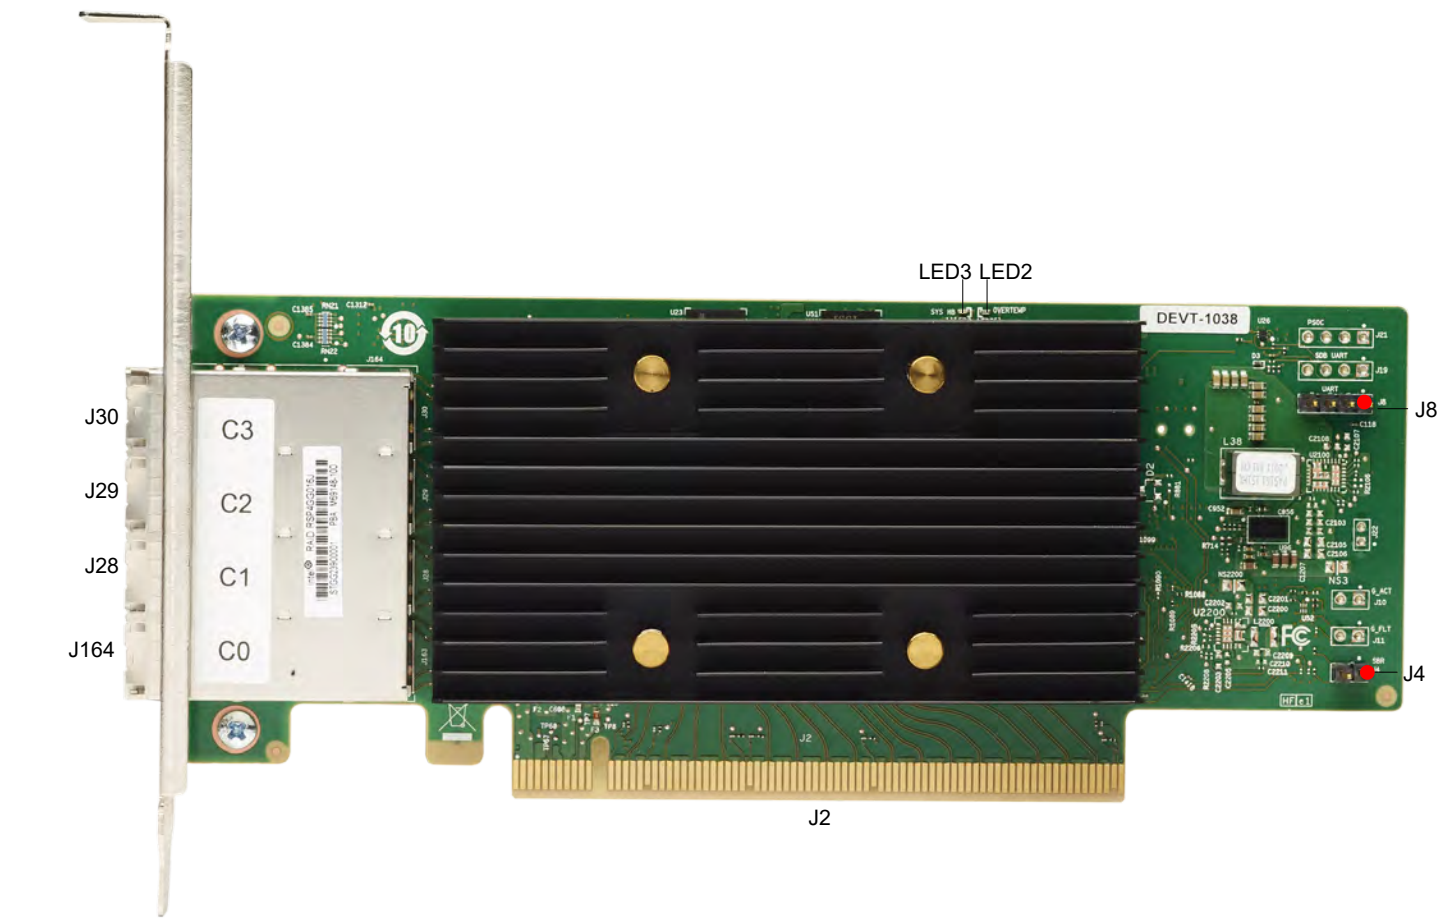

The following table describes the headers and connectors on the adapter.

Table 37: Connectors

Connector	Type	Description
J2	Standard board edge connector	PCIe x8 board edge connector. With the PCIe interface, this connector provides power to the board and an I ² C interface connected to the I ² C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J164, J28, J29, J30	Storage interface connectors	Four SFF-8674 external connectors. Connect the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.

Table 38: LED Designations

LED	Type	Description
LED2	Yellow IOC overtemperature	Stays on solid to indicate that the SAS4016W IOC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED3	Green system heartbeat	Indicates that the SAS4016W IOC is operating normally.

eHBA 9600-16e Adapter – Connector and LED Designations

The adapter is a 167.51 (±0.13) mm × 68.77 (±0.13) mm board. The component height on the top and bottom of the adapter complies with the PCIe specification.

The following figure shows the connectors and LED locations on the adapter. A red circle near each header and connector identifies pin 1 in the figure.

Figure 15: Card Layout of the eHBA 9600-16e Storage Adapter



The following table describes the headers and connectors on the adapter.

Table 39: Connectors

Connector	Type	Description
J2	Standard board edge connector	PCIe x8 board edge connector. With the PCIe interface, this connector provides power to the board and an I ² C interface connected to the I ² C bus for the IPMI.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J30, J29, J28, J163	Storage interface connectors	Four SFF-8674 external connectors. Connect the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.

Table 40: LED Designations

LED	Type	Description
LED2	Yellow IOC overtemperature	Stays on solid to indicate that the SAS4016 IOC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED3	Green system heartbeat	Indicates that the SAS4016 IOC is operating normally.

eHBA 9602W-16e Adapter – Connector and LED Designations

The adapter is a 115.00 (±0.13) mm × 76.00 (±0.13) mm board. The board is OCP 3.0 compliant with a TSFF internal lock bracket.

The following table describes the headers and connectors on the adapter.

Table 41: Connectors

Connector	Type	Description
J2	Card PCIe edge connector	The interface between the storage adapter and the host system.
J4	Default SBR header	2-pin connector. Reserved for Broadcom use.
J8	Onboard serial UART connector	4-pin connector. Reserved for Broadcom use.
J163, J28, J29, J30	Storage interface connectors	Four SFF-8674 external connectors. Connect the adapter by cable to the storage devices.

The following table describes the LEDs on the adapter.

Table 42: LED Designations

LED	Type	Description
LED2	Yellow IOC overtemperature	Stays on solid to indicate that the SAS4016W IOC temperature sensor is over the temperature threshold. When the device is in the proper temperature range, this LED is off.
LED3	Green system heartbeat	Indicates that the SAS4016W IOC is operating normally.

Tri-Mode Storage Adapter Technical Specifications

This chapter presents the technical specifications of each board, including operating conditions and power supply requirements.

Board Storage Conditions

The following table lists the board storage conditions for the storage adapters.

Table 43: Board Storage Conditions

Adapter	Relative Humidity Range (Non-condensing)	Temperature Range ^a
9670W-16i	10% to 90%	–40°C to +70°C
9670-24i	10% to 90%	–40°C to +70°C
9660-16i	10% to 90%	–40°C to +70°C
9620-16i	10% to 90%	–40°C to +70°C
9600-24i	10% to 90%	–40°C to +70°C
9600-16i	10% to 90%	–40°C to +70°C
9600-8i8e	10% to 90%	–40°C to +70°C
9600W-16e	10% to 90%	–40°C to +70°C
9600-16e	10% to 90%	–40°C to +70°C
9602W-16e	10% to 90%	–40°C to +70°C

Board Weights

The following table lists the net weight of each adapter and the CVPM05 module. These values do not include the packaging.

Table 44: Adapter Weights

Adapter	Weight
9670W-16i	0.25 kg
9670-24i	0.227 kg
9660-16i	0.136 kg
9620-16i	0.164 kg
9600-24i	0.161 kg
9600-16i	0.163 kg
9600-8i8e	0.174 kg
9600W-16e	0.174 kg

a. For adapters with a CVPM, this range applies with or without the CVPM attached.

Adapter	Weight
9600-16e	0.172 kg
9602W-16e	0.12 kg
CVPM05	0.0605 kg

Board Operating Conditions

The following table lists the board operating conditions for the storage adapters. The minimum airflow, measured as linear feet per minute (LFM) at 55°C, must be met to avoid operating the controller's processor and board components above their maximum junction temperatures.

Table 45: Board Operating Conditions

Adapter	Minimum LFM	Temperature Range ^a
9670W-16i	200	0°C to +55°C
9670-24i	200	0°C to +55°C
9660-16i	250	0°C to +55°C
9620-16i	150	0°C to +55°C
9600-24i	150	0°C to +55°C
9600-16i	150	0°C to +55°C
9600-8i8e	200	0°C to +55°C
9600W-16e	200	0°C to +55°C
9600-16e	200	0°C to +55°C
9602W-16e	200	0°C to +55°C

Power Supply Requirements

All power is supplied to the tri-mode storage adapter through the PCIe 3.3V rails (3.3V ±9%) and the 12V rail (12V ±8%). Onboard switching regulator circuitry operates from the 3.3V rails, and the 12V rail provides the necessary voltages.

Typical power is measured with maximum I/O traffic, typical silicon process material, and nominal voltages operating the card at an ambient temperature of 45°C with required airflow.

The system should transmit a PCI SET_SLOT_POWER_LIMIT message that indicates the maximum amount of power that the adapter might use. During the start-up procedure, the adapter's power consumption is limited to 25W because the storage phys are not enabled until the Auto Port Enable procedure begins. When this procedure begins, the adapter's power check algorithm compares the power allocated by the SET_SLOT_POWER_LIMIT message to the adapter's slot power requirement. If the SET_SLOT_POWER_LIMIT message indicates that the slot's power budget is at or greater than the adapter's requirement, Auto Port Enable proceeds. Refer to *SAS95xx Adapters*, *SAS96xx Adapters*, and *SAS97xx Adapters Slot Power Limit Settings Specification* for more information about slot power requirements.

If no SET_SLOT_POWER_LIMIT message is received, the adapter faults, indicating that the port enable failed because of insufficient power. You must make sure enough power is available to the slot if the SET_SLOT_POWER_LIMIT message is not used. For adapters with auxiliary power connectors, the slot power check is bypassed if the auxiliary power connector is connected. For more information about the auxiliary power connector, see [Auxiliary Power Connector](#).

a. For adapters with a CVPM, this range applies with or without the CVPM attached.

MegaRAID Tri-Mode Storage Adapter Power Supply Requirements

The following table describes the typical power consumption of the MegaRAID adapters.

Table 46: MegaRAID Tri-Mode Storage Adapter Typical Power Consumption

Adapter	Typical Power (W)
9670W-16i	28
9670-24i	28
9660-16i	20

During the transparent learn cycle, the CacheVault power module consumes up to an additional 8W. The PCIe 3.3V rail supplies the power for the learn cycle.

eHBA Tri-Mode Storage Adapter Power Supply Requirements

The following table describes the typical power consumption of the eHBAs.

Table 47: eHBA Tri-Mode Storage Adapter Typical Power Consumption

Adapter	Typical Power (W)
9620-16i	17
9600-24i	20
9600-16i	17
9600-8i8e	17
9600W-16e	20
9600-16e	17
9602W-16e	20

Overtemperature Behavior

The adapter supports the following temperature threshold events to alert of overtemperature situations when sufficient airflow is not provided. If supported, the system can use the events generated in the Persistent Event Log (PEL) to manage fan speed and mitigate overtemperature conditions. While these events assist in managing overtemperature conditions, potential damage can occur if sufficient airflow is not provided to the adapter.

Table 48: Temperature Threshold Events

Condition	RoC or IOC Junction Temperature (°C)	Result
Warning	105	Generate a PEL event.
Critical	107	Generate a PEL event and decrease device-side ports to their slowest operating speed. The junction temperature must return to 104°C, or lower, to resume normal operation.
Fatal	115	Generate a PEL event and fault the adapter. The junction temperature must return to 104°C, or lower, and the adapter must be reset to resume normal operation.

Marks, Certifications, Compliance, and Safety Characteristics

This chapter lists the adapter marks and certifications, FCC compliance statements, and safety characteristics.

Marks, Certifications, and Compliance



The design and implementation of the adapters minimize electromagnetic emissions, susceptibility to radio frequency energy, and the effects of electrostatic discharge.








The following adapters show the marks and certifications included in [Table 50, Adapter Marks and Certifications](#).

Table 49: Adapter Models

Adapter	Model Number
MegaRAID 9670W-16i	50113
MegaRAID 9660-16i	50107
eHBA 9600-24i eHBA 9600-16i eHBA 9620-16i	50111
eHBA 9600-8i8e	50145
eHBA 9600W-16e	50108
eHBA 9600-16e	50118
eHBA 9602W-16e	50160

Table 50: Adapter Marks and Certifications

Mark	Symbol	Description
Australia and New Zealand RCM		Meets the following standards: <ul style="list-style-type: none"> AS/NZS CISPR 32 CISPR 32:2015, Class A AS/NZS CISPR 32:2015 +A1:2020, Class A
Canada EMC	CANADA ICES-003 CLASS A CANADA NMB-003 CLASSE A CAN ICES-3 (A)/NMB-3 (A)	Meets the following standards: <ul style="list-style-type: none"> ICES-003:2016 Issue 7: 2016, Class A CAN/CSA CISPR 22-10 CISPR 22:2008
Europe (CE)		Meets the following standards: <ul style="list-style-type: none"> EN 55032, EN 55035 EN 55032:2015 +A11:2020, Class A EN 55035:2017 +A11:2020, Class A

Mark	Symbol	Description
Korea (RRL)		xxxxx = model number Meets the KN32/KN35 testing requirements.
Taiwan (BSMI)		Meets the following standards: <ul style="list-style-type: none"> CNS15663 CNS15936
USA / Canada Safety (UL Listed)		For use with UL-listed ITE equipment only. Meets the following standards: <ul style="list-style-type: none"> CAN/CSA C22.2 No. 62368-1-19, Third Edition UL 62368-1, Third Edition
CB Scheme Safety	—	Meets the following standards: <ul style="list-style-type: none"> IEC 62368-1:2014 (Third edition) EN 62368-1:2014+A11: 2017
Japan (VCCI)		Meets the following standards: <ul style="list-style-type: none"> VCCI-CISPR 32:2016
USA / Canada (FCC)		Meets the following standards: <ul style="list-style-type: none"> 47 CFR FCC Part 15, Subpart B, Class A ANSI C63.4:2014 CISPR 32:2008
Morocco (CMIM)		Meets the following standards: <ul style="list-style-type: none"> EN 55032, EN 55035 EN 55032:2015 +A11:2020, Class A EN 55035:2017 +A11:2020
United Kingdom (UKCA)		Meets the following standards: <ul style="list-style-type: none"> EN 55032, EN 55035 EN 55032:2015 +A11:2020, Class A EN 55035:2017 +A11:2020
Country of Origin	Made in XXXX	XXXX indicates the country of origin.

FCC Compliance

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user is required to correct the interference at his or her own expense.

Safety Characteristics

All tri-mode storage adapters meet or exceed the requirements of UL flammability rating 94 V0. Each bare board is also marked with the supplier name or trademark, type, and UL flammability rating. For the boards installed in a PCIe bus slot, all voltages are lower than the SELV 42.4V limit.

VCCI – Japan

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI – A

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures. VCCI—A.

Taiwan BSMI Compliance

警告：為避免電磁干擾，本產品不應安裝或使用於住宅環境。

Warning: To avoid electromagnetic interference, this product should not be installed or used in residential environments.

Cable Drawings and Pinouts

Use the cable drawings and pinouts in this appendix if your design requires you to design your own cables.

Cable 05-60001-00



The following figure shows the drawing and pinout for Broadcom cable 05-60001-00, a x8 SFF-8654 to 2 x4 SFF-8612 connection.

REVISIONS				
REV	ECO	DESCRIPTION	DATE	APPROVED
001		PRELIMINARY RELEASE	26FEB18	
002	175141	UPDATE WIRE GAUGE AND IMPEDANCE TOLERANCE ITEM 3. REVISE MARKING REQUIREMENTS NOTE 3.	21NOV19	



1. DRAWING NOT TO SCALE.
2. ELECTRICAL AND MECHANICAL PERFORMANCE SHALL MEET PCIe GEN 4 AND SAS 4.0 INDUSTRIAL STANDARDS.
3. MARK LABEL (ITEM 8) WITH:
 - SILMSAS Y (PCIe)
 - BROADCOM PART NUMBER
 - BROADCOM REVISION XXX
 - DATE CODE DD/MMM/YYSECONDARY MARKING WITH MANUFACTURER PART NUMBER AND REVISION ACCEPTABLE.
4. SEE CABLE WIRING TABLE AND RELATED NOTES.

9	LABEL	LABEL, 40X14MM, WHITE, R2, HF	A/R	
8	LABEL	LABEL, 70X26MM, WHITE, R2, HF	A/R	SEE NOTE 4
7	TAPE	ACETATE TAPE: W=1 INCH	A/R	
6	SLEEVEING	EXPANDO TUBE: OD=7MM, GREEN, VW-I, HF	A/R	
5	SLEEVEING	EXPANDO TUBE: OD=10MM, GREEN, VW-I, HF	A/R	
4	WIRE	UL1061, STRANDED	A/R	SEE NOTE 4
3	CABLE	SAS CABLE: UL20744, 28-32AWG, 92.5C \pm 10% DIFF, SAS4, PCIE GEN 4, VW-I, NATURAL, HF	A/R	
2	CONNECTOR	SFF-8612, 2P, STRAIGHT, ACTIVE LATCH, X4, SAS 4.0, PCIE GEN 4	A/R	SEE NOTE 4
1	CONNECTOR	SFF-8654, 74P, STRAIGHT, X8, SAS 4.0, PCIE GEN 4	I	SEE NOTE 4
ITEM	CALLOUT	DESCRIPTION	QUANTITY	NOTES

APPROVALS		DATE	UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS. TOLERANCES:											
DRAWN BY		06FEB18	X .X ± 0.2 MM X.XX ± 0.15 MM X.XXX ± 0.050 MM ANGLES ± 1°		TITLE CABLE, SFF-8654 X8 TO 2X SFF-8612 X4, PCIE, 1M									
APPROVED BY		06FEB18												
Copyright Confidential & Copyright Broadcom Limited All Rights Reserved. No copy is to be made or used. The purchaser is responsible for verifying that the document is current. Broadcom does not warrant the purchaser is responsible for retaining obsolete documents from these parts of all size.			SCALE 1 : 500				SIZE D		DES. NO. 5067-6865		REV 002		SHEET	

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
NC	SO HOST	A1	P0 BACKPLANE	B1	NC		
GND		A2		B2	GND	ITEM 3	
Rx0+		A3		B3	Tx0+	ITEM 3	
Rx0-		A4		B4	Tx0-	ITEM 3	
GND		A5		B5	GND	ITEM 3	
Rx1+		A6		B6	Tx1+	ITEM 3	
Rx1-		A7		B7	Tx1-	ITEM 3	
GND		A8		B8	GND	ITEM 3	
SB7A		A9			NC		NOTE 2
SB4A		A10		B10	CWAKE#	ITEM 4	NOTE 1
SB3L		A10		B9	CBLL_ID	ITEM 4	NOTE 1
SB3A		A11		B11	GND	ITEM 3	
SBA+		A12		B12	REFCLK+	ITEM 3	
SBA-		A13		B13	REFCLK-	ITEM 3	
GND		A14		B14	GND	ITEM 3	
Rx2+		A15		B15	Tx2+	ITEM 3	
Rx2-		A16		B16	Tx2-	ITEM 3	
GND		A17		B17	GND	ITEM 3	
Rx3+		A18		B18	Tx3+	ITEM 3	
Rx3-		A19		B19	Tx3-	ITEM 3	
GND	NC	A20		B20	GND	ITEM 3	
NC				B21	NC		
NC				A1	NC		
GND		B1		A2	GND	ITEM 3	
Tx0+		B2		A3	Rx0+	ITEM 3	
Tx0-		B3		A4	Rx0-	ITEM 3	
GND		B4		A5	GND	ITEM 3	
Tx1+		B5		A6	Rx1+	ITEM 3	
Tx1-		B6		A7	Rx1-	ITEM 3	
GND		B7		A8	GND	ITEM 3	
SB0A		B8		A9	SCL	ITEM 4	NOTE 1
SB1A		B9		A10	SDA	ITEM 4	NOTE 1
SB2A		B10		A11	GND	ITEM 3	
SB5A		B11		A12	PERST#	ITEM 3	
SB6A		B12		A13	D_INPL#	ITEM 3	
GND		B13		A14	GND	ITEM 3	
Tx2+		B14		A15	Rx2+	ITEM 3	
Tx2-		B15		A16	Rx2-	ITEM 3	
GND		B16		A17	GND	ITEM 3	
Tx3+		B17		A18	Rx3+	ITEM 3	
Tx3-		B18		A19	Rx3-	ITEM 3	
GND		B19		A20	GND	ITEM 3	
NC				A21	NC		


NOTES:



1. END TO END RESISTANCE OF INDICATED CONNECTION SHALL BE 750 MIIIOHM MAX.
2. SHORT PIN/PAD S0-A8 TO S0-B9. NO DIRECT CONNECT S0-A8 TO CONNECTOR P0.
3. SHORT PIN/PAD S0-A26 TO S0-B27. NO DIRECT CONNECT S0-A26 TO CONNECTOR P1.

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
NC	S0 HOST		P1 BACKPLANE	B1	NC		
GND		A19		B2	GND	ITEM 3	
Rx4+		A20		B3	Tx0+	ITEM 3	
Rx4-		A21		B4	Tx0-	ITEM 3	
GND		A22		B5	GND	ITEM 3	
Rx5+		A23		B6	Tx1+	ITEM 3	
Rx5-		A24		B7	Tx1-	ITEM 3	
GND		A25		B8	GND	ITEM 3	
SB7B		A26			NC		NOTE 3
SB4B		A27		B10	CWAKE#	ITEM 4	NOTE 1
SB3B		A28		B9	CBCL_ID	ITEM 4	NOTE 1
SB3B		A28		B11	GND	ITEM 3	
SB8+		A29		B12	REFCLK+	ITEM 3	
SB8-		A30		B13	REFCLK-	ITEM 3	
GND		A31		B14	GND	ITEM 3	
Rx6+		A32		B15	Tx2+	ITEM 3	
Rx6-		A33		B16	Tx2-	ITEM 3	
GND		A34		B17	GND	ITEM 3	
Rx7+		A35		B18	Tx3+	ITEM 3	
Rx7-		A36		B19	Tx3-	ITEM 3	
GND		A37		B20	GND	ITEM 3	
NC				B21	NC		
NC				A1	NC		
GND		B19		A2	GND	ITEM 3	
Tx4+		B20		A3	Rx0+	ITEM 3	
Tx4-		B21		A4	Rx0-	ITEM 3	
GND		B22		A5	GND	ITEM 3	
Tx5+		B23		A6	Rx1+	ITEM 3	
Tx5-		B24		A7	Rx1-	ITEM 3	
GND		B25		A8	GND	ITEM 3	
SB0B		B26		A9	SCL	ITEM 4	NOTE 1
SB1B		B27		A10	SDA	ITEM 4	NOTE 1
SB2B		B28		A11	GND	ITEM 3	
SB5B		B29		A12	PERST#	ITEM 3	
SB6B		B30		A13	D_INPL#	ITEM 3	
GND		B31		A14	GND	ITEM 3	
Tx6+		B32		A15	Rx2+	ITEM 3	
Tx6-		B33		A16	Rx2-	ITEM 3	
GND		B34		A17	GND	ITEM 3	
Tx7+		B35		A18	Rx3+	ITEM 3	
Tx7-		B36		A19	Rx3-	ITEM 3	
GND		B37		A20	GND	ITEM 3	
NC				A21	NC		

The following figure shows the drawing and pinout for Broadcom cable 05-60002-00, a x8 SFF-8654 to 2 x4 SFF-8643 connection. Use this cable for NVMe connections on SuperMicro Purley backplanes.

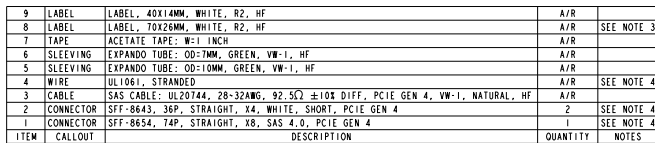REVISONS				
REV	ECO	DESCRIPTION	DATE	APPROVED
001		PRELIMINARY RELEASE	09FEB18	
002	141562	PRELIMINARY RELEASE, UPDATE FIRE GAUGE AND IMPEDANCE TOLERANCE I, X REVISION MARKING ADDED MOST CONNECTOR LABEL AND MOST AND TARGET WIRING TABLE WIRING CHANGES TO TARGET WIRING TABLE WIRING TABLE: S0: BB-B10, B26-B28 P0: B1, C1-C2, D1-D2, E1-E2, F1-F2, G1-G2, H1-H2, I1-I2, J1-J2, K1-K2, L1-L2, M1-M2, N1-N2, O1-O2, P1-P2, Q1-Q2, R1-R2, S1-S2, T1-T2, U1-U2, V1-V2, W1-W2, X1-X2, Y1-Y2, Z1-Z2 WIRING TABLE: S0: BB-B10, B26-B28 P0: B1, C1-C2, D1-D2, E1-E2, F1-F2, G1-G2, H1-H2, I1-I2, J1-J2, K1-K2, L1-L2, M1-M2, N1-N2, O1-O2, P1-P2, Q1-Q2, R1-R2, S1-S2, T1-T2, U1-U2, V1-V2, W1-W2, X1-X2, Y1-Y2, Z1-Z2	13JUL18	
003	175141	INITIAL RELEASE REMOVE WATERMARK	21NOV19	



APPROVALS		DATE		UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS.		 BROADCOM	
ISSUED BY	05FB18			TOLERANCES:		TITLE	
APPROVED BY	09FB18			X 0.125 MM Y 0.250 MM Z 0.250 MM ANGLES 0.500 MM		CABLE, SFF-8654 X8 to 2X SFF-8643 X4 (W), 1M	
Company Confidential & Copyright Broadcom Limited. All rights reserved. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without prior written permission from Broadcom Limited. The publisher is responsible for recovering the total cost of the reproduction of this document. The publisher is responsible for ensuring adequate distribution of this document.				SCALE 1:500		SIZE Dwg No. 0067-6862	
						REV 003 SHEET	


NOTES:

1. END TO END RESISTANCE OF INDICATED CONNECTION SHALL BE 750 MILLIOMH MAX.
2. CONNECT SHIELD OF DIFFERENTIAL PAIR TO INDICATED PIN/PAD AND SHORT TO SECOND INDICATED PIN/PAD.
3. SHORT PIN/PAD S0-A8 TO S0-B9. NO DIRECT CONNECT S0-A8 TO CONNECTOR P0.
4. DELETED
5. SHORT PIN/PAD S0-A26 TO S0-B27. NO DIRECT CONNECT S0-A26 TO CONNECTOR P1.
6. DELETED

Cable 05-60003-00


The following figure shows the drawing and pinout for Broadcom cable 05-60003-00, a x8 SFF-8654 to 2 x4 SFF-8643 connection.

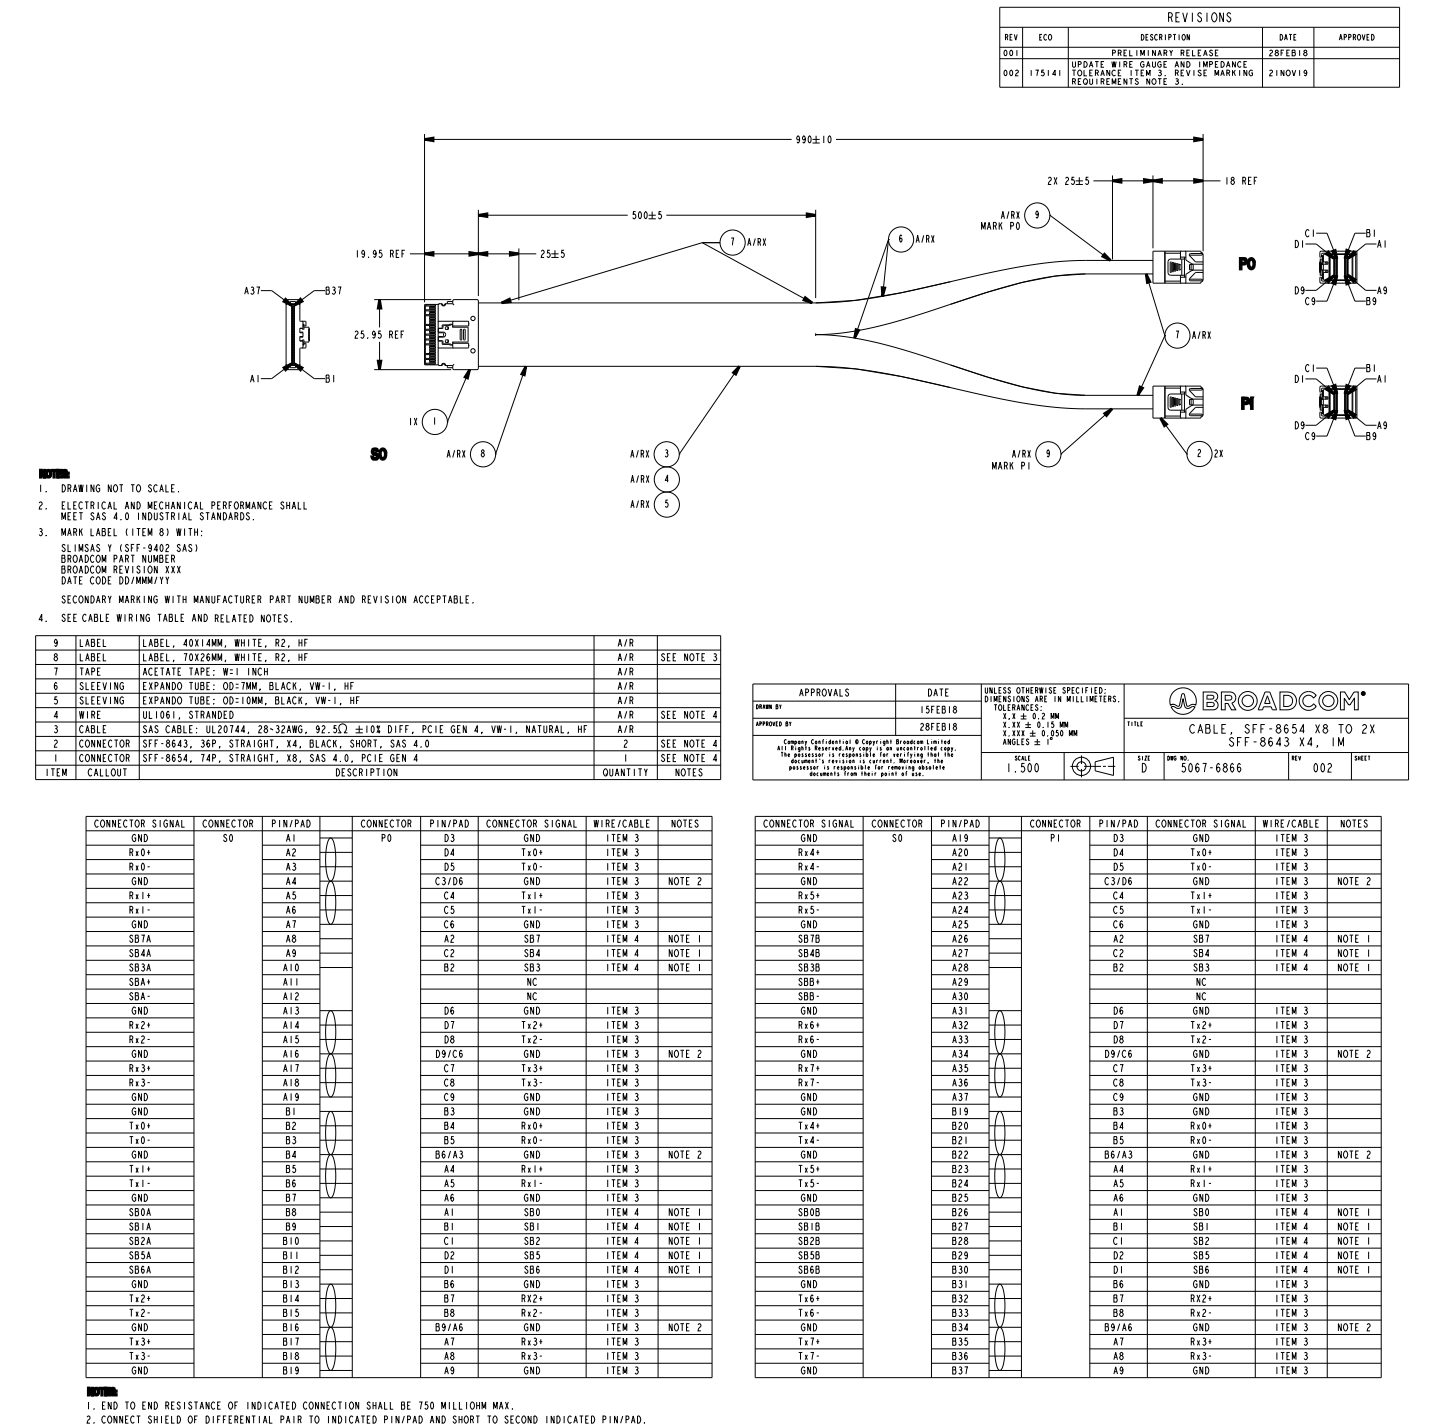

Figure 18: Cable 05-60003-00 Drawing and Pinout



The following figure shows the drawing and pinout for Broadcom cable 05-60004-00, a x8 SFF-8654 to 2 x4 SFF-8654 connection.

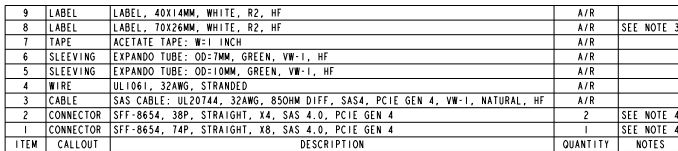REVISIONS				
REV	ECO	DESCRIPTION	DATE	APPROVED
001		INITIAL RELEASE	02JAN18	



APPROVALS		DATE		UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS.		 BROADCOM	
DESIGN BY	27DEC17		TOLERANCES:		TITLE		
APPROVED BY	02JAN18		X.1 ± 0.2 mm X.2 ± 0.15 mm X.3 ± 0.250 mm X.XX ± 0.050 mm		CABLE, SFF-8654 X8 to 2X SFF-8654 X4, 1M		
Company Confidential & Copyright © Copyright 2017 Broadcom Inc. All Rights Reserved. No copy is to be made without the express written permission of Broadcom Corporation. The possessor is responsible for verifying that the document is valid in its current version. Moreover, the possessor is responsible for removing obsolete documents from their plant or site.				SCALE 1 : 500		SIZE Dwg No: 5067-6103	REV 001
							SHEET


CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE
GND	SO	A1	PO	B1	GND	ITEM 3
R2+0		A2		B2	Tx+0	ITEM 3
R2+0		A3		B3	Tx+0	ITEM 3
GND		A4		B4	GND	ITEM 3
Rx1+		A5		B5	Tx1+	ITEM 3
Rx1+		A6		B6	Tx1+	ITEM 3
GND		A7		B7	GND	ITEM 3
SB1A		A8		B8	SB7	ITEM 4
SB4A		A9		B9	SB4	ITEM 4
GND(SB3A)		A10		B10	GND(SB3)	ITEM 3
SB4+		A11		B11	SB4+	ITEM 3
SB4-		A12		B12	SB4-	ITEM 3
GND		A13		B13	GND	ITEM 3
Rx2+		A14		B14	Tx2+	ITEM 3
Rx2-		A15		B15	Tx2-	ITEM 3
GND		A16		B16	GND	ITEM 3
Rx3+		A17		B17	Tx3+	ITEM 3
Rx3-		A18		B18	Tx3-	ITEM 3
GND		A19		B19	GND	ITEM 3, NOTE 1
GND		B1		A1	GND	ITEM 3
Tx0+		B2		A2	Rx0+	ITEM 3
Tx0-		B3		A3	Rx0-	ITEM 3
GND		B4		A4	GND	ITEM 3
Tx1+		B5		A5	Rx1+	ITEM 3
Tx1-		B6		A6	Rx1-	ITEM 3
GND		B7		A7	GND	ITEM 3
SB0A		B8		A8	SB0	ITEM 4
SB1A		B9		A9	SB1	ITEM 4
GND(SB2A)		B10		A10	GND(SB2)	ITEM 3
SB5A		B11		A11	SB5	ITEM 3
SB6A		B12		A12	SB6	ITEM 3
GND		B13		A13	GND	ITEM 3
Tx2+		B14		A14	Rx2+	ITEM 3
Tx2-		B15		A15	Rx2-	ITEM 3
GND		B16		A16	GND	ITEM 3
Tx3+		B17		A17	Rx3+	ITEM 3
Tx3-		B18		A18	Rx3-	ITEM 3
GND		B19		A19	GND	ITEM 3, NOTE

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE
GND	S0	A19	P1	B1	GND	ITEM 3, NOTE 1
Rx4+		A20		B2	Tx0+	ITEM 3
Rx4-		A21		B3	Tx0-	ITEM 3
GND		A22		B4	GND	ITEM 3
Rx5+		A23		B5	Tx1+	ITEM 3
Rx5-		A24		B6	Tx1-	ITEM 3
GND		A25		B7	GND	ITEM 3
SB7B		A26		B8	SB7	ITEM 4
SB4B		A27		B9	SB4	ITEM 4
GND(SB3B)		A28		B10	GND(SB3)	ITEM 3
SBB+		A29		B11	SBB+	ITEM 3
SBB-		A30		B12	SBB-	ITEM 3
GND		A31		B13	GND	ITEM 3
Rx6+		A32		B14	Tx2+	ITEM 3
Rx6-		A33		B15	Tx2-	ITEM 3
GND		A34		B16	GND	ITEM 3
Rx7+		A35		B17	Tx3+	ITEM 3
Rx7-		A36		B18	Tx3-	ITEM 3
GND		A37		B19	GND	ITEM 3
GND		B19		A1	GND	ITEM 3, NOTE 1
Tx4+		B20		A2	Rx0+	ITEM 3
Tx4-		B21		A3	Rx0-	ITEM 3
GND		B22		A4	GND	ITEM 3
Tx5+		B23		A5	Rx1+	ITEM 3
Tx5-		B24		A6	Rx1-	ITEM 3
GND		B25		A7	GND	ITEM 3
SB0B		B26		A8	SB0	ITEM 4
SB1B		B27		A9	SB1	ITEM 4
GND(SB2B)		B28		A10	GND(SB2)	ITEM 3
SB5B		B29		A11	SB5	ITEM 3
SB6B		B30		A12	SB6	ITEM 3
GND		B31		A13	GND	ITEM 3
Tx6+		B32		A14	Rx2+	ITEM 3
Tx6-		B33		A15	Rx2-	ITEM 3
GND		B34		A16	GND	ITEM 3
Tx7+		B35		A17	Rx3+	ITEM 3
Tx7-		B36		A18	Rx3-	ITEM 3
GND		B37		A19	GND	ITEM 3

Cable 05-60005-00

The following figure shows the drawing and pinout for Broadcom cable 05-60005-00, a x8 SFF-8654 to 2 U.2 SFF-8639 connection.

Figure 20: Cable 05-60005-00 Drawing and Pinout

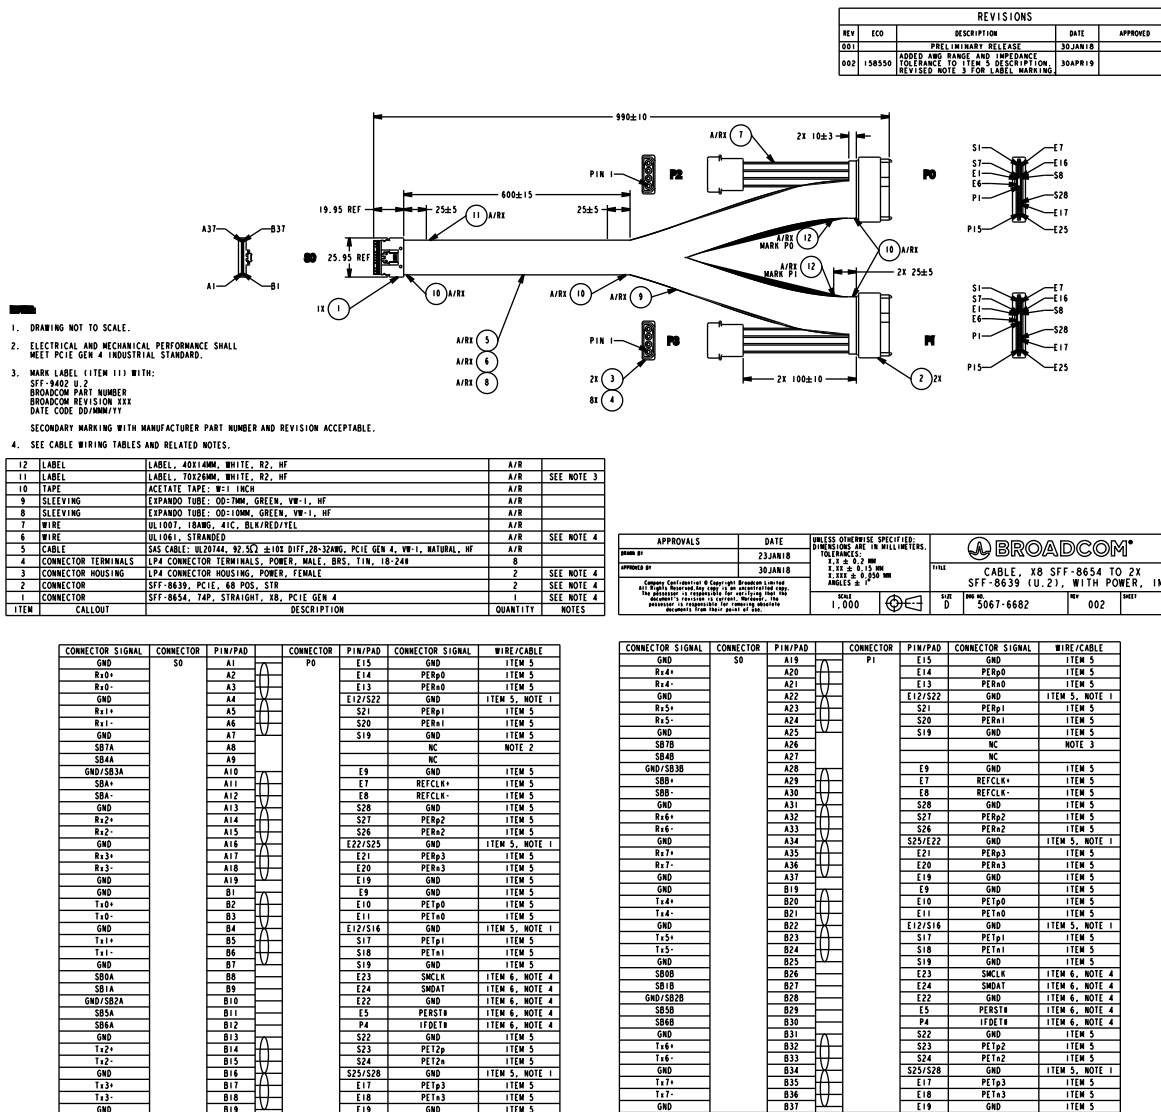


1. CONNECT SHIELD OF DIFFERENTIAL PAIR TO INDICATED PIN/PAD AND SHORT TO SECOND INDICATED PIN/PAD.
2. SHORT PIN/PAD S0-A8 TO S0-B9. NO DIRECT CONNECT S0-A8 TO CONNECTOR P0.
3. SHORT PIN/PAD S0-A26 TO S0-B21. NO DIRECT CONNECT S0-A26 TO CONNECTOR P1.
4. END TO END RESISTANCE OF INDICATED CONNECTION SHALL BE 750 MILLIOM MAX.

Cable 05-60006-00

The following figure shows the drawing and pinout for Broadcom cable 05-60006-00, a x8 SFF-8654 to x8 U.3 SFF-8639 connection.

Figure 21: Cable 05-60006-00 Drawing and Pinout

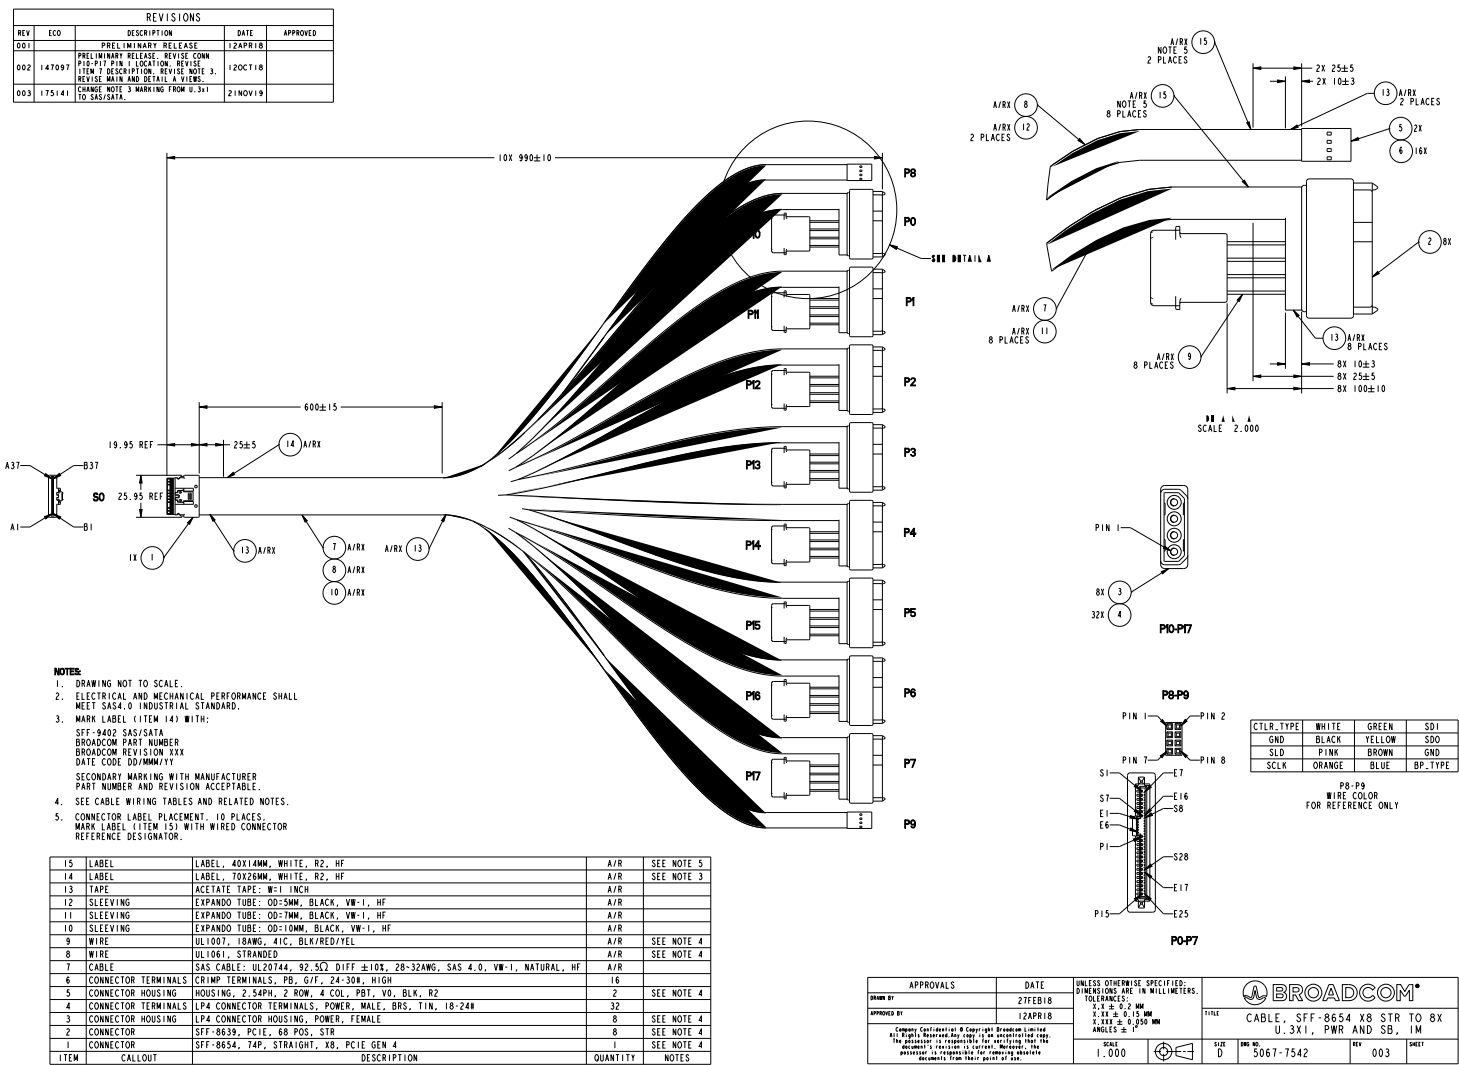

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND	S0 HOST	A1	P0 TARGET	S7	GND	ITEM 7	
Rx0+		A2		S6	DO.TX0+	ITEM 7	
Rx0-		A3		S5	DO.TX0-	ITEM 7	
GND		A4		S4	GND	ITEM 7	NOTE 2, NOTE 3
GND	P10	B1	P0 TARGET	S1	GND	ITEM 7	
Tx0+		B2		S2	DO.RX0+	ITEM 7	
Tx0-		B3		S3	DO.RX0-	ITEM 7	
GND		B4		S4	GND	ITEM 7	NOTE 2, NOTE 3
12V		1	P0 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW
GND		2		P12	GND	ITEM 9	BLACK
GND		3		P5, P6	GND	ITEM 9	BLACK
5V		4		P7, P8, P9	5V	ITEM 9	RED
NC			P0 TARGET	P1	RSVD		NOTE 4
NC				P2	sPCIeRsI		NOTE 4

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND	S0 HOST	A4	P1 TARGET	S7	GND	ITEM 7	NOTE 2
Rx1+		A5		S6	DI.TX0+	ITEM 7	
Rx1-		A6		S5	DI.TX0-	ITEM 7	
GND		A7		S4	GND	ITEM 7	NOTE 3
GND	P11	B4	P1 TARGET	S1	GND	ITEM 7	NOTE 2
Tx1+		B5		S2	DI.RX0+	ITEM 7	
Tx1-		B6		S3	DI.RX0-	ITEM 7	
GND		B7		S4	GND	ITEM 7	NOTE 3
12V		1	P1 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW
GND		2		P12	GND	ITEM 9	BLACK
GND		3		P5, P6	GND	ITEM 9	BLACK
5V		4		P7, P8, P9	5V	ITEM 9	RED
NC			P1 TARGET	P1	RSVD		NOTE 4
NC				P2	sPCIeRsI		NOTE 4

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND	S0 HOST	A13	P2 TARGET	S7	GND	ITEM 7	
Rx2+		A14		S6	D2.TX0+	ITEM 7	
Rx2-		A15		S5	D2.TX0-	ITEM 7	
GND		A16		S4	GND	ITEM 7	NOTE 2, NOTE 3
GND	P12	B13	P2 TARGET	S1	GND	ITEM 7	
Tx2+		B14		S2	D2.RX0+	ITEM 7	
Tx2-		B15		S3	D2.RX0-	ITEM 7	
GND		B16		S4	GND	ITEM 7	NOTE 2, NOTE 3
12V		1	P2 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW
GND		2		P12	GND	ITEM 9	BLACK
GND		3		P5, P6	GND	ITEM 9	BLACK
5V		4		P7, P8, P9	5V	ITEM 9	RED
NC			P2 TARGET	P1	RSVD		NOTE 4
NC				P2	sPCIeRsI		NOTE 4

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND	S0 HOST	A31	P6 TARGET	S7	GND	ITEM 7	
Rx6+		A32		S6	D6.TX0+	ITEM 7	
Rx6-		A33		S5	D6.TX0-	ITEM 7	
GND		A34		S4	GND	ITEM 7	NOTE 2, NOTE 3
GND	P16	B31	P6 TARGET	S1	GND	ITEM 7	
Tx6+		B32		S2	D6.RX0+	ITEM 7	
Tx6-		B33		S3	D6.RX0-	ITEM 7	
GND		B34		S4	GND	ITEM 7	NOTE 2, NOTE 3
12V		1	P6 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW
GND		2		P12	GND	ITEM 9	BLACK
GND		3		P5, P6	GND	ITEM 9	BLACK
5V		4		P7, P8, P9	5V	ITEM 9	RED
NC			P6 TARGET	P1	RSVD		NOTE 4
NC				P2	sPCIeRsI		NOTE 4

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND	S0 HOST	A34	P7 TARGET	S7	GND	ITEM 7	NOTE 2
Rx7+		A35		S6	D7.TX0+	ITEM 7	
Rx7-		A36		S5	D7.TX0-	ITEM 7	
GND		A37		S4	GND	ITEM 7	NOTE 3
GND	P17	B34	P7 TARGET	S1	GND	ITEM 7	NOTE 2
Tx7+		B35		S2	D7.RX0+	ITEM 7	
Tx7-		B36		S3	D7.RX0-	ITEM 7	
GND		B37		S4	GND	ITEM 7	NOTE 3
12V		1	P7 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW
GND		2		P12	GND	ITEM 9	BLACK
GND		3		P5, P6	GND	ITEM 9	BLACK
5V		4		P7, P8, P9	5V	ITEM 9	RED
NC			P7 TARGET	P1	RSVD		NOTE 4
NC				P2	sPCIeRsI		NOTE 4

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
SB7A	S0 HOST	A8	P8	BP.TYPEA	ITEM 8	NOTE 1, BLUE	
SB4A		A9		SDOA	ITEM 8	NOTE 1, YELLOW	
GND/SB3A		A10		GND	ITEM 8	NOTE 1, BROWN	
SB4+		A11		NC			
SB4-	P10	A12	P8	NC			
SB0A		B8		SCLKA	ITEM 8	NOTE 1, ORANGE	
SB1A		B9		SLDA	ITEM 8	NOTE 1, PINK	
GND/SB2A		B10		GND	ITEM 8	NOTE 1, BLACK	
SB5A	S0 HOST	B11	P9	SDIA	ITEM 8	NOTE 1, GREEN	
SB6A		B12		CTLR.TYPEA	ITEM 8	NOTE 1, WHITE	
SB7B		A26		BP.TYPEB	ITEM 8	NOTE 1, BLUE	
SB4B		A27		SDOB	ITEM 8	NOTE 1, YELLOW	
GND/SB3B	P10	A28	P9	GND	ITEM 8	NOTE 1, BROWN	
SB8+		A29		NC			
SB8-		A30		NC			
SB0B		B26		SCLKB	ITEM 8	NOTE 1, ORANGE	
SB1B	S0 HOST	B27	P9	SLDB	ITEM 8	NOTE 1, PINK	
GND/SB2B		B28		GND	ITEM 8	NOTE 1, BLACK	
SB5B		B29		SDIB	ITEM 8	NOTE 1, GREEN	
SB6B		B30		CTLR.TYPEB	ITEM 8	NOTE 1, WHITE	

NOTES:

1. END TO END RESISTANCE OF INDICATED CONNECTION SHALL BE 750 MILLIOHM MAX.
2. SHARED PIN/PAD ON HOST (S0) CONNECTOR.
3. SHARED PIN/PAD ON INDICATED TARGET (P0-P7) CONNECTOR.
4. SHORT PIN/PAD P1 TO P2 OF INDICATED TARGET (P0-P7) CONNECTOR. NO CONNECT TO OTHER CONNECTORS.

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND	S0 HOST	A16	P3 TARGET	S7	GND	ITEM 7	NOTE 2
Rx3+		A17		S6	D3.TX0+	ITEM 7	
Rx3-		A18		S5	D3.TX0-	ITEM 7	
GND		A19		S4	GND	ITEM 7	NOTE 2, NOTE 3
GND	P13	B16	P3 TARGET	S1	GND	ITEM 7	NOTE 2
Tx3+		B17		S2	D3.RX0+	ITEM 7	
Tx3-		B18		S3	D3.RX0-	ITEM 7	
GND		B19		S4	GND	ITEM 7	NOTE 2, NOTE 3
12V		1	P3 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW
GND		2		P12	GND	ITEM 9	BLACK
GND		3		P5, P6	GND	ITEM 9	BLACK
5V		4		P7, P8, P9	5V	ITEM 9	RED
NC			P3 TARGET	P1	RSVD		NOTE 4
NC				P2	sPCIeRsI		NOTE 4

CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND	S0 HOST	A19	P4 TARGET	S7	GND	ITEM 7	NOTE 2
Rx4+		A20		S6	D4.TX0+	ITEM 7	
Rx4-		A21		S5	D4.TX0-	ITEM 7	
GND		A22		S4	GND	ITEM 7	NOTE 2, NOTE 3
GND	P14	B19	P4 TARGET	S1	GND	ITEM 7	NOTE 2
Tx4+		B20		S2	D4.RX0+	ITEM 7	
Tx4-		B21		S3	D4.RX0-	ITEM 7	
GND		B22		S4	GND	ITEM 7	NOTE 2, NOTE 3
12V		1	P4 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW
GND		2		P12	GND	ITEM 9	BLACK
GND		3		P5, P6	GND	ITEM 9	BLACK
5V		4		P7, P8, P9	5V	ITEM 9	RED
NC			P4 TARGET	P1	RSVD		NOTE 4
NC				P2	sPCIeRsI		NOTE 4


CONNECTOR SIGNAL	CONNECTOR	PIN/PAD	CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	WIRE/CABLE	NOTES
GND	S0 HOST	A22	P5 TARGET	S7	GND	ITEM 7	NOTE 2
Rx5+		A23		S6	D5.TX0+	ITEM 7	
Rx5-		A24		S5	D5.TX0-	ITEM 7	
GND		A25		S4	GND	ITEM 7	NOTE 3
GND	P15	B22	P5 TARGET	S1	GND	ITEM 7	NOTE 2
Tx5+		B23		S2	D5.RX0+	ITEM 7	
Tx5-		B24		S3	D5.RX0-	ITEM 7	
GND		B25		S4	GND	ITEM 7	NOTE 3
12V		1	P5 TARGET	P13, P14, P15	12V	ITEM 9	YELLOW
GND		2		P12	GND	ITEM 9	BLACK
GND		3		P5, P6	GND	ITEM 9	BLACK
5V		4		P7, P8, P9	5V	ITEM 9	RED
NC			P5 TARGET	P1	RSVD		NOTE 4
NC				P2	sPCIeRsI		NOTE 4

CONNECTOR	PIN/PAD	CONNECTOR SIGNAL	NOTES
P0-P7 TARGET	S9	S1T+	NO CONNECT PIN/PAD SHALL NOT BE CONNECTED VIA CONNECTOR INTERNAL NOR VIA WIRE
	S10	S1T-	
	S12	S1R-	
	S13	S1R+	
	S17	S2T+	
	S18	S2T-	
	S20	S2R-	
	S21	S2R+	
	S23	S3T+	
	S24	S3T-	
	S26	S3R-	
	S27	S3R+	
	P3	PWRDIS	
	P4	IFDET#	
	P10	PRSENT#	
	P11	Activity/DisableStaggeredSpinup	
	E1	RefC1k+	
	E2	RefC1k1-	
	E3	3.3Vaux	
	E4	ePERSTI#	
	E5	ePERSTO#	
	E6	IFDET2#	
	E7	RefC1k0+	
	E8	RefC1k0-	
	E9	GND	
	E10	PETp0	
	E11	PETn0	
	E12	GND	
	E13	PERn0	
	E14	PERp0	
	E15	GND	
	E16	HPTI	
	E17	PETp3	
	E18	PETn3	
	E19	GND	
	E20	PERn3	
	E21	PERp3	
	E22	GND	
	E23	SMC1k	
	E24	SMDa1	
	E25	DualPort1En#	
P0-P7 TARGET	S8	GND	GROUND ALL PIN/PAD SHALL BE CONNECTED TO COMMON INDIVIDUAL CONNECTOR GROUND
	S11	GND	
	S14	GND	
	S15	GND (HPT0)	
	S16	GND	
	S19	GND	
	S22	GND	
	S25	GND	
	S28	GND	

Cable 05-60007-00

The following figure shows the drawing and pinout for Broadcom cable 05-60007-00, a x8 SFF-8654 to x8 SFF-8654 connection.

Figure 22: Cable 05-60007-00 Drawing and Pinout

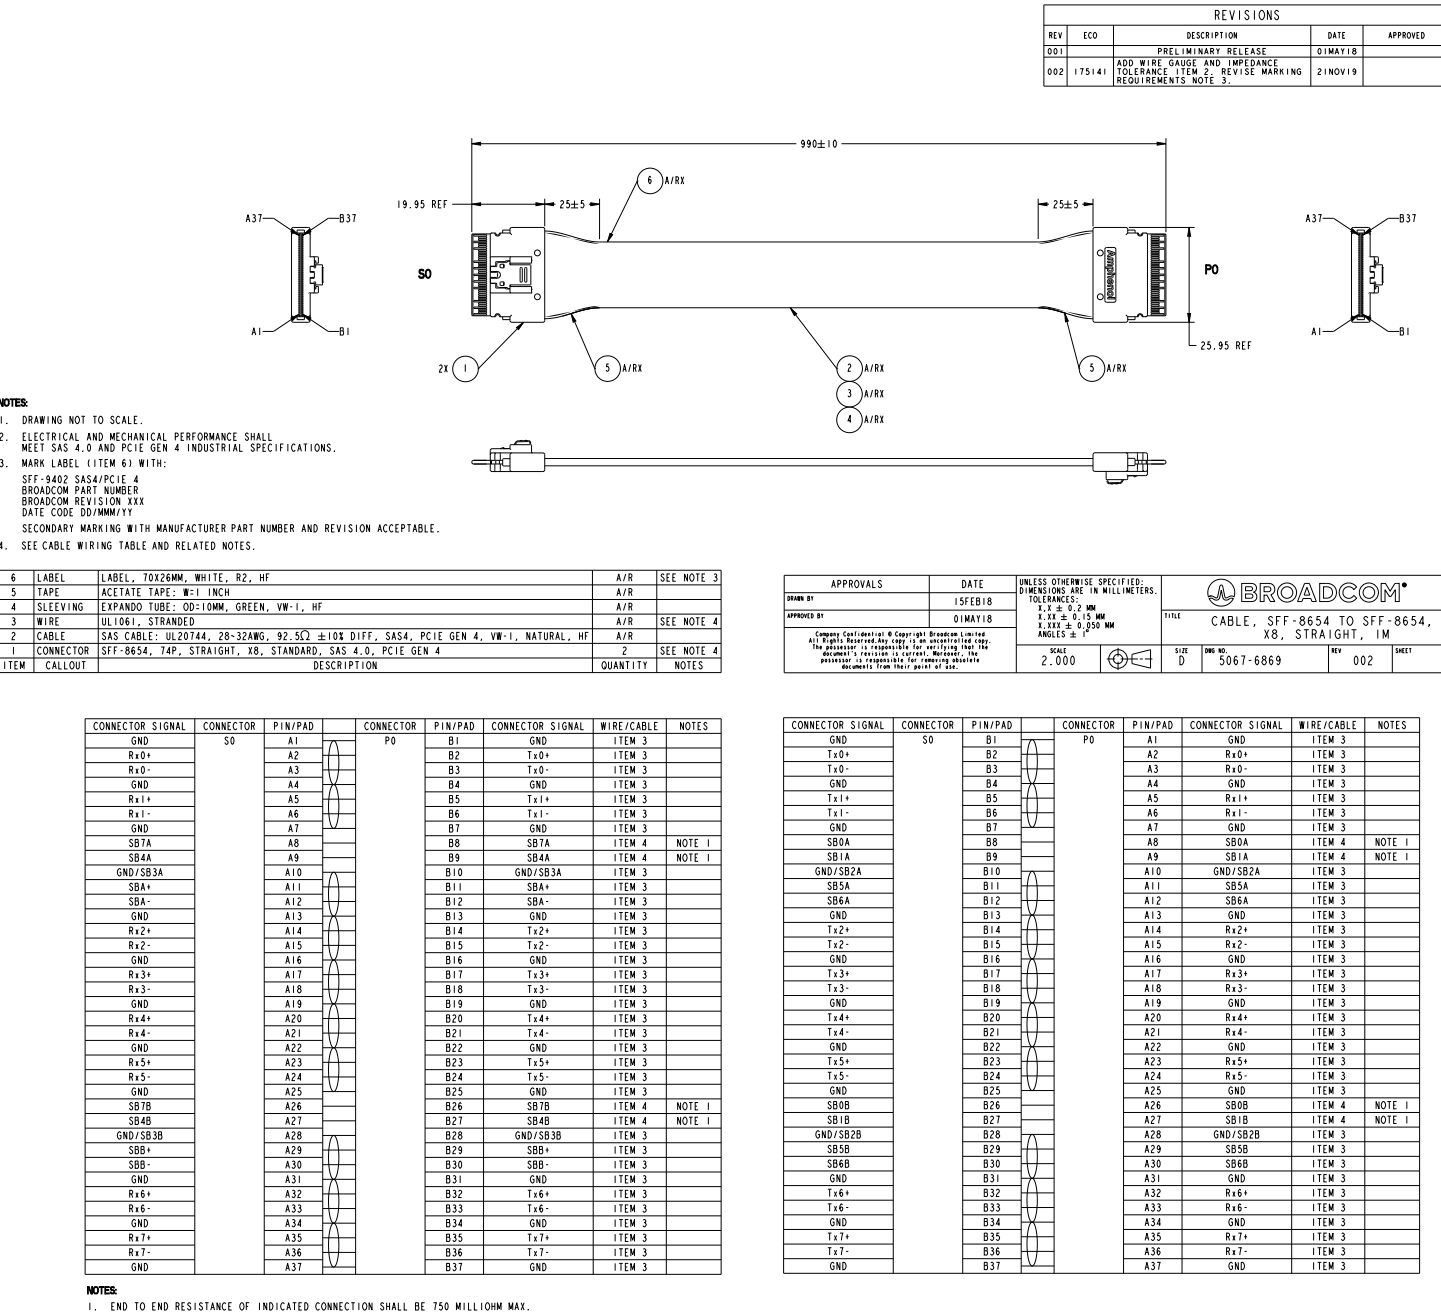

The following figure shows the drawing and pinout for Broadcom cable 05-60009-00, a x4 SFF-8644 to x4 SFF-8644 connection.

REVIEWS				REVIEWS			
1.	WORKING NOT TO SCALE			REV	ECO	DESCRIPTION	DATE
2.	ELECTRICAL AND MECHANICAL PERFORMANCE SHALL MEET SAS 4.0 AND PCIE GEN 4 INDUSTRIAL SPECIFICATIONS.			001	001	RECEIVING UNIT	03/01/13
3.	MAIN LABEL (VIEW 4) WITH: 240PDS SAS 4 LOGO AS SHOWN IN VIEW 4-A MINI SAS HD 14 PCIE 14 BROADCOM PART NUMBER BROADCOM REVISION 01A DATE CODE 02/09/11 SECONDARY MARKING WITH MANUFACTURER PART NUMBER AND REVISION ACCEPTABLE. 4. SEE ADDITIONAL SHEETS FOR CABLE WIRING TABLE, EPROM DATA, AND RELATED NOTES.			002	002	RECEIVING UNIT	03/01/13
				BROADCOM			
				CABLE, 14 SFF-8644 TO 14 SFF-8644, 3M			
				P/N 5067-0643			
				002			
				T OF			

NOTES:

1. CABLE ASSEMBLY SHALL MEET SHIELDING EFFECTIVENESS REQUIREMENT OF

	PIN/PAD	CONNECTOR SIGNAL
E	A1	CADDR
R	C1	SCL
H	C2	SDA
O	D2	MGTWR

EEPROM CONNECTION TABLE
2 PLACES, SO AND PD
NO CROSS CONNECTIONS

96xx-MB-HBA-Tri-Mod

COAXIAL FIBER OPTIC THERMOCOUPLES

Revision History

Version 2.9, August 26, 2025

- Updated SET_SLOT_POWER_LIMIT message information in [Power Supply Requirements](#).
- Added [Board Weights](#).
- Updated [SPDM Capabilities](#).
- Updated the Taiwan (BSMI) mark in [Marks, Certifications, and Compliance](#).

Version 2.8, April 11, 2025

- Added the eHBA 9602W-16e adapter to [Table 49: Adapter Models](#).

Version 2.7, April 10, 2025

- Revised [Table 8: 9670-24i Adapter PCIe Topology Configuration Combinations](#).
- Added [VCCI – Japan](#) and [Taiwan BSMI Compliance](#).

Version 2.6, December 12, 2024

- Restructured [Board Storage Conditions](#).
- Added [Board Operating Conditions](#).
- Added the eHBA 9602W-16e adapter.
- Removed 3Gb/s SAS and SATA support references.

Version 2.5, May 21, 2024

- Updated [Board Storage Conditions](#).
- Added [Cable 05-60009-00](#).

Version 2.4, January 17, 2024

Added [FCC Compliance](#).

Version 2.3, October 31, 2023

- Updated the address to 0x4C in [Virtual Pin Port Management](#).
- Removed reference to LED4.

Version 2.2, September 27, 2023

Updated the 9670-24i adapter connector-to-CSW port associations in [Tri-Mode Storage Interface](#) and [PCIe \(NVMe\) Support](#).

Version 2.1, August 1, 2023

- Updated the adapter dimensions in [Broadcom MegaRAID and HBA Tri-Mode Storage Adapter Characteristics](#).
- Updated [External Adapter Connector Pinout](#).

Version 2.0, August 30, 2022

- Updated the resistor values in [Sideband Signals](#).
- Revised Typical Power values in [MegaRAID Tri-Mode Storage Adapter Power Supply Requirements](#) and [eHBA Tri-Mode Storage Adapter Power Supply Requirements](#).
- Changed SFF-8644 instances to SFF-8674.

Preliminary, Version 1.1, June 13, 2022

- Revised the NVMe SSD count in [MegaRAID 9670W-16i, 9670-24i, and 9660-16i Adapter RAID Features](#).
- Updated the 05-60006-00 description in [Storage Interface Cabling](#).
- Added [Overtemperature Behavior](#).
- Updated the Adapter Marks and Certifications table in [Marks, Certifications, and Compliance](#).
- Added the eHBA 9600-8i8e adapter.
- Renamed HBA to eHBA.

Preliminary, Version 1.0, March 8, 2022

- Updated the 9670-24i and 9600-24i adapters in the NVMe Device or PCIe Switch Direct-Attach Options Supported for Each Adapter table in [PCIe \(NVMe\) Support](#).
- Updated the following tables in [PCIe \(NVMe\) Support](#):
 - 9670-24i Adapter PCIe Topology Configuration Combinations
 - 9600-24i Adapter PCIe Topology Configuration Combinations
- Updated [External Adapter Connector Pinout](#).
- Added board layout images.
- Updated [Power Supply Requirements](#).
- Updated the values regarding the CacheVault power module in [MegaRAID Tri-Mode Storage Adapter Power Supply Requirements](#).

Advance, Version 0.2, March 19, 2021

- Changed the 9660-16i cache memory description in the MegaRAID Tri-Mode Storage Adapter Features table in [Overview](#).
- Updated the drive descriptions in the HBA Tri-Mode Storage Adapter Features table in [Overview](#).
- Revised [eHBA 9600 Adapter Features](#).
- Added a note to [PCIe \(NVMe\) Support](#).
- Added [Adapter Security](#).
- Added the MegaRAID 9670-24i adapter.

Advance, Version 0.1, April 27, 2020

Initial document release.

